



Storage Management Technical Specification, Part 7 Host Elements

Version 1.8.0, Revision 5

Abstract: This SNIA Technical Position defines an interface between WBEM-capable clients and servers for the secure, extensible, and interoperable management of networked storage.

This document has been released and approved by the SNIA. The SNIA believes that the ideas, methodologies and technologies described in this document accurately represent the SNIA goals and are appropriate for widespread distribution. Suggestions for revision should be directed to <http://www.snia.org/feedback/>.

SNIA Technical Position

23 March 2020

USAGE

Copyright © 2018 SNIA. All rights reserved. All other trademarks or registered trademarks are the property of their respective owners.

The SNIA hereby grants permission for individuals to use this document for personal use only, and for corporations and other business entities to use this document for internal use only (including internal copying, distribution, and display) provided that:

- 1) Any text, diagram, chart, table or definition reproduced shall be reproduced in its entirety with no alteration, and,
- 2) Any document, printed or electronic, in which material from this document (or any portion hereof) is reproduced shall acknowledge the SNIA copyright on that material, and shall credit the SNIA for granting permission for its reuse.

Other than as explicitly provided above, you may not make any commercial use of this document or any portion thereof, or distribute this document to third parties. All rights not explicitly granted are expressly reserved to SNIA.

Permission to use this document for purposes other than those enumerated above may be requested by e-mailing tcmd@snia.org. Please include the identity of the requesting individual and/or company and a brief description of the purpose, nature, and scope of the requested use.

All code fragments, scripts, data tables, and sample code in this SNIA document are made available under the following license:

BSD 3-Clause Software License

Copyright (c) 2018, The Storage Networking Industry Association.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- Neither the name of The Storage Networking Industry Association (SNIA) nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT OWNER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

DISCLAIMER

The information contained in this publication is subject to change without notice. The SNIA makes no warranty of any kind with regard to this specification, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose. The SNIA shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this specification.

Suggestions for revisions should be directed to <http://www.snia.org/feedback/>.

Copyright © 2003-2020 SNIA. All rights reserved. All other trademarks or registered trademarks are the property of their respective owners.

Portions of the CIM Schema are used in this document with the permission of the Distributed Management Task Force (DMTF). The CIM classes that are documented have been developed and reviewed by both the SNIA and DMTF Technical Working Groups. However, the schema is still in development and review in the DMTF Working Groups and Technical Committee, and subject to change.

REVISION HISTORY

Revision 1

Date

April 14, 2017

SCRs Incorporated and other changes

Annex A (informative) SMI-S Information Model

- This standard is now based on DMTF's CIM schema Version 2.50.

Memory Configuration Profile

- Experimental tags removed from the profile (SMI TWG voice vote)

Persistent Memory Configuration Profile

- Experimental tags removed from the profile (SMI TWG voice vote)

Comments

Editorial notes and DRAFT material are displayed.

Revision 2

Date

1 March 2018

SCRs Incorporated and other changes

Annex A (informative) SMI-S Information Model

- This standard is now based on DMTF's CIM schema Version 2.51.

Disk Partition Profile (SMI TWG Reviews)

- Added descriptions of the references in CIM_BasedOn (Partition to Extent), CIM_BasedOn (Partition to Partition), CIM_LogicalDiskBasedOnPartition (LogicalDisk to Partition) and CIM_SystemDevice (System to LogicalDisk)
- Made CIM_LogicalDiskBasedOnPartition (LogicalDisk to Partition) and CIM_SystemDevice (System to LogicalDisk) Conditional (rather than Optional), since CIM_LogicalDisk is Optional. Storage HBA Profile (SMI TWG Reviews)
- Fixed the version numbers on the Related Profiles to match what the profiles claim
- Added Descriptions to the references in CIM_ProductElementComponent, CIM_Realizes and CIM_SystemDevice

Host Discovered Resources Profile (SMI TWG Reviews)

- Added the related profiles table to the spec
- Moved NameFormat from LogicalDevice to LogicalDisk to match the mof
- Moved NameNamespace from LogicalDevice to LogicalDisk to match the mof
- Added descriptions on the References for CIM_HostedAccessPoint and CIM_SystemDevice

Host Hardware RAID Controller Profile (SMI TWG Reviews)

- Fixed the version numbers on the Related Profiles to match what the profiles claim
- Added two ElementSoftwareIdentity associations to cover the 3 SoftwareIdentity classes (one Mandatory and one Optional)
- Added descriptions on the References for CIM_AssociatedAlarm, CIM_ProductPhysicalComponent, CIM_ProtocolControllerForUnit (Extent or MediaAccessDevice), CIM_Realizes (Associates PhysicalPackage to PortController) and CIM_SAPAvailableForElement.
- Fixed the description of Dependent in CIM_ControlledBy

- Added Key properties to the CIM_SoftwareIdentity CIM Element tables
- Changed the version of the profile to 1.7.0

iSCSI Initiator (SMI TWG Reviews)

- Removed MATURITY="Draft" from the Launch In Context supported profile
- Added Descriptions for References in 2 CIM_BindsTo associations, CIM_ControlledBy, 2 CIM_DeviceSAPImplementations and CIM_ElementSoftwareIdentity
- Added Descriptions for References in 2 CIM_EndpointOfNetworkPipes, CIM_NetworkPipeComposition, CIM_ProductPhysicalComponent and CIM_Realizes
- Added Descriptions for references in CIM_SAPAvailableForElement
- Added Keys to CIM_PhysicalPackage

SCSI Multipath Management Profile (SMI TWG Reviews)

- Added keys to CIM_SCSIMultipathConfigurationCapabilities and CIM_SCSIMultipathSettings

Memory Configuration Profile (SMI TWG Reviews)

- Changed SystemCreateClassName in class CIM_MemoryConfigurationService to SystemCreationClassName
- Changed RemainingCapacity in class CIM_ResourcePool to CurrentlyConsumedResource
- Changed ChangeableType in class CIM_MemoryAllocationSettingData to ResourceType
- Fixed the description of Replication in class CIM_MemoryAllocationSettingData
- Added a description for ChannelCount in class CIM_MemoryAllocationSettingData

Persistent Memory Configuration Profile (SMI TWG Reviews)

- Changed RemainingCapacity in class CIM_ResourcePool to Reserved
- Changed SecurityFeatures in class CIM_PersistentMemoryCapabilities to SecurityFeatures
- Removed ChannelCount in class CIM_PersistentMemoryNamespaceSettingData, since it is not in the mof and not referenced anywhere in the profile text
- Added three methods to CIM_PersistentMemoryService to support the profile text
- Fixed the ManagedElement reference in CIM_ElementConformsToProfile
- Fixed the references in CIM_SystemDevice
- Fixed the references in CIM_BasedOn

Comments

Editorial notes and DRAFT material are hidden.
Minor editorial clean up

Revision 3

Date

August 14, 2018

SCRs Incorporated and other changes

iSCSI Initiator Profile (TSG-SMIS-SCR00333)

- Changed the Central Class from PortController to CIM_ComputerSystem

Host Discovered Resources Profile

- Relocate NameFormat and NameNamespace from CIM_LogicalDevice to CIM_LogicalDisk

Comments

None.

Revision 4

Date

October 24, 2019

SCRs Incorporated and other changes

Host Discovered Resources (SMIS-180-Errata-SCR00002)
- Marked the SB Multipath Management Related Profile as Deprecated

Comments

Minor editorial clean up to create corrected technical position.

Revision 5

Date

March 23, 2020

SCRs Incorporated and other changes

None.

Comments

Revision number updated to keep all books in sync after a minor update to the architecture book.

Suggestion for changes or modifications to this document should be sent to the SNIA Storage Management Initiative Work Group (SMI TWG) at <http://www.snia.org/feedback/>

INTENDED AUDIENCE

This document is intended for use by individuals and companies engaged in developing, deploying, and promoting interoperable multi-vendor SANs through the Storage Networking Industry Association (SNIA) organization.

CHANGES TO THE SPECIFICATION

Each publication of this specification is uniquely identified by a three-level identifier, comprised of a version number, a release number and an update number. The current identifier for this specification is version 1.8.0. Future publications of this specification are subject to specific constraints on the scope of change that is permissible from one publication to the next and the degree of interoperability and backward compatibility that should be assumed between products designed to different publications of this standard. The SNIA has defined three levels of change to a specification:

- **Major Revision:** A major revision of the specification represents a substantial change to the underlying scope or architecture of the SMI-S API. A major revision results in an increase in the version number of the version identifier (e.g., from version 1.x.x to version 2.x.x). There is no assurance of interoperability or backward compatibility between releases with different version numbers.
- **Minor Revision:** A minor revision of the specification represents a technical change to existing content or an adjustment to the scope of the SMI-S API. A minor revision results in an increase in the release number of the specification's identifier (e.g., from x.1.x to x.2.x). Minor revisions with the same version number preserve interoperability and backward compatibility.
- **Update:** An update to the specification is limited to minor corrections or clarifications of existing specification content. An update will result in an increase in the third component of the release identifier (e.g., from x.x.1 to x.x.2). Updates with the same version and minor release levels preserve interoperability and backward compatibility.

TYPOGRAPHICAL CONVENTIONS

Maturity Level

In addition to informative and normative content, this specification includes guidance about the maturity of emerging material that has completed a rigorous design review but has limited implementation in commercial products. This material is clearly delineated as described in the following sections. The typographical convention is intended to provide a sense of the maturity of the affected material, without altering its normative content. By recognizing the relative maturity of different sections of the standard, an implementer should be able to make more informed decisions about the adoption and deployment of different portions of the standard in a commercial product.

This specification has been structured to convey both the formal requirements and assumptions of the SMI-S API and its emerging implementation and deployment lifecycle. Over time, the intent is that all content in the specification will represent a mature and stable design, be verified by extensive implementation experience, assure consistent support for backward compatibility, and rely solely on content material that has reached a similar level of maturity. Unless explicitly labeled with one of the subordinate maturity levels defined for this specification, content is assumed to satisfy these requirements and is referred to as "Finalized". Since much of the evolving specification

content in any given release will not have matured to that level, this specification defines three subordinate levels of implementation maturity that identify important aspects of the content's increasing maturity and stability. Each subordinate maturity level is defined by its level of implementation experience, its stability and its reliance on other emerging standards. Each subordinate maturity level is identified by a unique typographical tagging convention that clearly distinguishes content at one maturity model from content at another level.

Experimental Maturity Level

No material is included in this document unless its initial architecture has been completed and reviewed. Some content included in this document has complete and reviewed design, but lacks implementation experience and the maturity gained through implementation experience. This content is included in order to gain wider review and to gain implementation experience. This material is referred to as “Experimental”. It is presented here as an aid to implementers who are interested in likely future developments within the SMI specification. The contents of an Experimental profile may change as implementation experience is gained. There is a high likelihood that the changed content will be included in an upcoming revision of the specification. Experimental material can advance to a higher maturity level as soon as implementations are available. Figure 1 is a sample of the typographical convention for Experimental content.

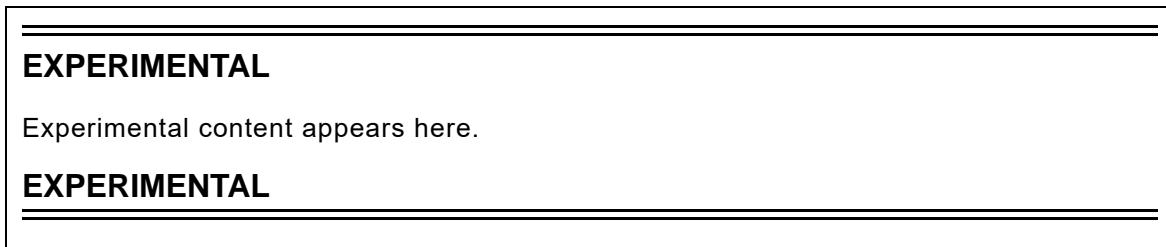


Figure 1 - Experimental Maturity Level Tag

Implemented Maturity Level

Profiles for which initial implementations have been completed are classified as “Implemented”. This indicates that at least two different vendors have implemented the profile, including at least one provider implementation. At this maturity level, the underlying architecture and modeling are stable, and changes in future revisions will be limited to the correction of deficiencies identified through additional implementation experience. Should the material become obsolete in the future, it must be deprecated in a minor revision of the specification prior to its removal from subsequent releases. Figure 2 is a sample of the typographical convention for Implemented content.

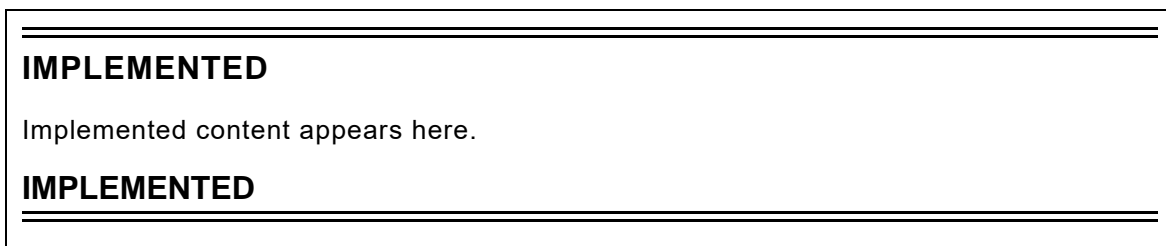


Figure 2 - Implemented Maturity Level Tag

Stable Maturity Level

Once content at the Implemented maturity level has garnered additional implementation experience, it can be tagged at the Stable maturity level. Material at this maturity level has been implemented by three different vendors, including both a provider and a client. Should material that has reached this maturity level become obsolete, it may only be deprecated as part of a minor revision to the specification. Material at this maturity level that has been deprecated may only be removed from the specification as part of a major revision. A profile that has reached this maturity level is guaranteed to preserve backward compatibility from one minor specification revision to the next. As a result, Profiles at or above the Stable

maturity level shall not rely on any content that is Experimental. Figure 3 is a sample of the typographical convention for Implemented content.



Figure 3 - Stable Maturity Level Tag

Finalized Maturity Level

Content that has reached the highest maturity level is referred to as “Finalized.” In addition to satisfying the requirements for the Stable maturity level, content at the Finalized maturity level must solely depend upon or refine material that has also reached the Finalized level. If specification content depends upon material that is not under the control of the SNIA, and therefore not subject to its maturity level definitions, then the external content is evaluated by the SNIA to assure that it has achieved a comparable level of completion, stability, and implementation experience. Should material that has reached this maturity level become obsolete, it may only be deprecated as part of a major revision to the specification. A profile that has reached this maturity level is guaranteed to preserve backward compatibility from one minor specification revision to the next. Over time, it is hoped that all specification content will attain this maturity level. Accordingly, there is no special typographical convention, as there is with the other, subordinate maturity levels. Unless content in the specification is marked with one of the typographical conventions defined for the subordinate maturity levels, it should be assumed to have reached the Finalized maturity level.

Deprecated Material

Non-Experimental material can be deprecated in a subsequent revision of the specification. Sections identified as “Deprecated” contain material that is obsolete and not recommended for use in new development efforts. Existing and new implementations may still use this material, but shall move to the newer approach as soon as possible. The maturity level of the material being deprecated determines how long it will continue to appear in the specification. Implemented content shall be retained at least until the next revision of the specialization, while Stable and Finalized material shall be retained until the next major revision of the specification. Providers shall implement the deprecated elements as long as it appears in the specification in order to achieve backward compatibility. Clients may rely on deprecated elements, but are encouraged to use non-deprecated alternatives when possible.

Deprecated sections are documented with a reference to the last published version to include the deprecated section as normative material and to the section in the current specification with the replacement. Figure 4 contains a sample of the typographical convention for deprecated content.

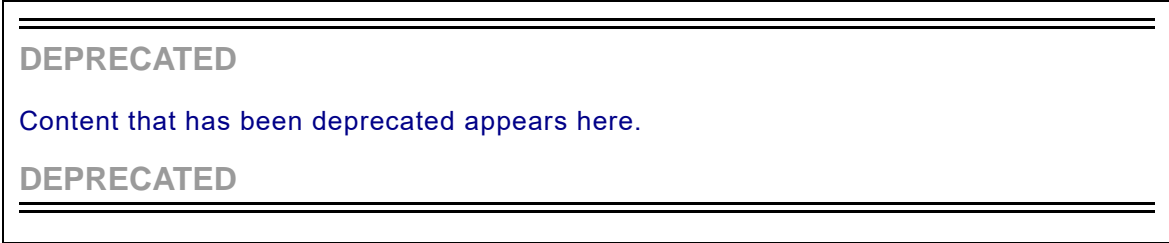


Figure 4 - Deprecated Tag

Contents

| | |
|---|-----------|
| Revision History | 5 |
| List of Figures | 15 |
| List of Tables | 17 |
| Foreword | 23 |
| 1 Scope | 25 |
| 2 Normative References..... | 27 |
| 2.1 Overview | 27 |
| 2.2 Approved references..... | 27 |
| 2.3 References under development | 27 |
| 3 Terms, Definitions, Symbols, Abbreviations, and Conventions | 29 |
| 3.1 General | 29 |
| 3.2 Terms and Definitions | 29 |
| 4 Disk Partition Profile | 31 |
| 4.1 Description | 31 |
| 4.2 Health and Fault Management Considerations | 37 |
| 4.3 Supported Profiles and Packages..... | 38 |
| 4.4 Methods of the Profile | 38 |
| 4.5 Client Considerations and Recipes | 39 |
| 4.6 CIM Elements..... | 39 |
| 5 FC HBA Profile | 49 |
| 6 Storage HBA Profile | 51 |
| 6.1 Synopsis..... | 51 |
| 6.2 Description | 51 |
| 6.3 Implementation..... | 51 |
| 6.4 Methods of the Profile | 57 |
| 6.5 Use Cases..... | 58 |
| 6.6 CIM Elements..... | 58 |
| 7 Host Discovered Resources Profile..... | 63 |
| 7.1 Description | 63 |
| 7.2 Health and Fault Management Considerations | 68 |
| 7.3 Cascading Considerations | 68 |
| 7.4 Extrinsic Methods of the Profile..... | 68 |
| 7.5 Use Cases..... | 69 |
| 7.6 CIM Elements..... | 69 |
| 8 Host Hardware RAID Controller Profile | 79 |
| 8.1 Synopsis..... | 79 |
| 8.2 Description | 80 |
| 8.3 Implementation..... | 80 |
| 8.4 Methods | 94 |
| 8.5 Use Cases..... | 94 |
| 8.6 CIM Elements..... | 94 |
| 9 iSCSI Initiator Profile | 109 |
| 9.1 Description | 109 |
| 9.2 Health and Fault Management Considerations | 112 |
| 9.3 Methods of the Profile | 112 |
| 9.4 Use Cases..... | 112 |
| 9.5 CIM Elements..... | 113 |

| | | |
|------|--|------------|
| 10 | SCSI Multipath Management Profile | 125 |
| 10.1 | Description | 125 |
| 10.2 | Health and Fault Management Considerations | 128 |
| 10.3 | Methods of the Profile | 128 |
| 10.4 | Use Cases | 129 |
| 10.5 | CIM Elements | 129 |
| 11 | SB Multipath Management Profile | 137 |
| 12 | Memory Configuration Profile | 139 |
| 12.1 | Synopsis | 139 |
| 12.2 | Description | 139 |
| 12.3 | Implementation | 141 |
| 12.4 | Methods | 143 |
| 12.5 | Use Cases | 148 |
| 12.6 | CIM Elements | 153 |
| 13 | Persistent Memory Configuration Profile | 161 |
| 13.1 | Synopsis | 161 |
| 13.2 | Overview | 161 |
| 13.3 | Implementation | 163 |
| 13.4 | Methods | 164 |
| 13.5 | Use Cases | 171 |
| 13.6 | CIM Elements | 175 |
| | Annex A (informative) SMI-S Information Model | 183 |
| | Annex B (Informative) Host Profile Deployment Guidelines | 185 |

LIST OF FIGURES

| | |
|--|-----|
| Figure 1 - Experimental Maturity Level Tag | 10 |
| Figure 2 - Implemented Maturity Level Tag | 10 |
| Figure 3 - Stable Maturity Level Tag | 11 |
| Figure 4 - Deprecated Tag | 11 |
| Figure 5 - Disk Partition Class Hierarchy | 32 |
| Figure 6 - Disk Partition Class Diagram | 33 |
| Figure 7 - Disk MBR Partition Example..... | 34 |
| Figure 8 - MBR Partition Instance Diagram | 35 |
| Figure 9 - MBR and VTOC Partition Instance Diagram | 36 |
| Figure 10 - Partition Instance Diagram for Size/Address Rules..... | 37 |
| Figure 11 - Model Overview | 52 |
| Figure 12 - Profile Registration Profile | 53 |
| Figure 13 - Software Inventory Profile in Storage HBA..... | 55 |
| Figure 14 - HBA Card with Physical Classes | 56 |
| Figure 15 - Host Discovered Resources Block Diagram..... | 64 |
| Figure 16 - Host Discovered Resources Class Diagram..... | 66 |
| Figure 17 - Single SPI Disk Model | 66 |
| Figure 18 - Three FCP Logical Unit Instance Diagram | 67 |
| Figure 19 - ATA Discovered Resource Model..... | 67 |
| Figure 20 - SB Host Discovered Resources | 68 |
| Figure 21 - Host Hardware RAID Controller Package Diagram..... | 80 |
| Figure 22 - Host Hardware RAID resources scoped to HHRC ComputerSystem..... | 81 |
| Figure 23 - Alarms in Host Hardware RAID Controller..... | 82 |
| Figure 24 - Profile Registration with Host Hardware RAID Controller and Base Server Profiles | 83 |
| Figure 25 - Implementation of Physical Asset Profile..... | 84 |
| Figure 26 - Block Services Package in Host Hardware RAID Controller | 85 |
| Figure 27 - DAPort Profile in Host Hardware Controller..... | 87 |
| Figure 28 - Software Inventory Profile in Host Hardware RAID Controller..... | 87 |
| Figure 29 - Initiator Port profiles and Disk Drive Lite Profile | 88 |
| Figure 30 - Model for Imported Disks | 89 |
| Figure 31 - Imported Virtual Volumes | 90 |
| Figure 32 - Device "Pass Through" Example | 91 |
| Figure 33 - Example of Mutli-Function Controllers..... | 93 |
| Figure 34 - iSCSI Product and Package Model | 110 |
| Figure 35 - iSCSI Sessions and Connections Model | 111 |
| Figure 36 - iSCSI Initiator Node | 112 |
| Figure 37 - Multipath Management Class Diagram..... | 126 |
| Figure 38 - Four Path Instance Diagram..... | 127 |
| Figure 39 - Memory Configuration Class Diagram..... | 140 |
| Figure 40 - Use Case - Profile Registration | 148 |
| Figure 41 - Use Case - Memory Configuration Capabilities..... | 149 |
| Figure 42 - Use Case - Memory Capability Discovery | 149 |
| Figure 43 - Use Case - Allocation | 150 |
| Figure 44 - Use Case - Allocation Complete..... | 151 |

| | |
|--|-----|
| Figure 45 - Use Case - Before Deallocation | 152 |
| Figure 46 - Use Case - After Deallocation | 152 |
| Figure 47 - Persistent Memory Configuration: Class Diagram..... | 162 |
| Figure 48 - Use Case: Profile Registration | 172 |
| Figure 49 - Use Case - Detect Capabilities..... | 173 |
| Figure 50 - Use Case - Create Namespace..... | 174 |
| Figure B.1 Profile Registration and FC HBA Profiles | 186 |
| Figure B.2 Profile Registration and Storage HBA Profiles | 187 |
| Figure B.3 Profile Registration and Host Hardware RAID Controller Profiles | 188 |
| Figure B.4 Deploying FC HBA with Storage HBA (SAS) Profiles | 189 |

LIST OF TABLES

| | |
|---|----|
| Table 1 - Capabilities Properties..... | 36 |
| Table 2 - CIM Elements for Disk Partition..... | 39 |
| Table 3 - SMI Referenced Properties/Methods for CIM_BasedOn (Partition to Extent)..... | 40 |
| Table 4 - SMI Referenced Properties/Methods for CIM_BasedOn (Partition to Partition)..... | 41 |
| Table 5 - SMI Referenced Properties/Methods for CIM_DiskPartition | 41 |
| Table 6 - SMI Referenced Properties/Methods for CIM_DiskPartitionConfigurationCapabilities | 42 |
| Table 7 - SMI Referenced Properties/Methods for CIM_DiskPartitionConfigurationService | 42 |
| Table 8 - SMI Referenced Properties/Methods for CIM_ElementCapabilities | 43 |
| Table 9 - SMI Referenced Properties/Methods for CIM_ElementConformsToProfile (DiskPartitionConfigura- tionService to Disk Partition RegisteredProfile)43 | |
| Table 10 - SMI Referenced Properties/Methods for CIM_GPTDiskPartition | 43 |
| Table 11 - SMI Referenced Properties/Methods for CIM_GenericDiskPartition | 44 |
| Table 12 - SMI Referenced Properties/Methods for CIM_HostedService | 44 |
| Table 13 - SMI Referenced Properties/Methods for CIM_InstalledPartitionTable (Capabilities to Extent)..... | 45 |
| Table 14 - SMI Referenced Properties/Methods for CIM_InstalledPartitionTable (Capabilities to Partition)..... | 45 |
| Table 15 - SMI Referenced Properties/Methods for CIM_LogicalDisk | 45 |
| Table 16 - SMI Referenced Properties/Methods for CIM_LogicalDiskBasedOnPartition (LogicalDisk to Parti- tion)46 | |
| Table 17 - SMI Referenced Properties/Methods for CIM_StorageExtent..... | 46 |
| Table 18 - SMI Referenced Properties/Methods for CIM_SystemDevice (System to Extent) | 47 |
| Table 19 - SMI Referenced Properties/Methods for CIM_SystemDevice (System to LogicalDisk)..... | 47 |
| Table 20 - SMI Referenced Properties/Methods for CIM_SystemDevice (System to Partition)..... | 47 |
| Table 21 - SMI Referenced Properties/Methods for CIM_VTOCDiskPartition | 48 |
| Table 22 - Related Profiles for Storage HBA | 51 |
| Table 23 - CIM_PortController..... | 57 |
| Table 24 - CIM_SystemDevice | 58 |
| Table 25 - CIM Elements for Storage HBA..... | 58 |
| Table 26 - SMI Referenced Properties/Methods for CIM_ControlledBy | 59 |
| Table 27 - SMI Referenced Properties/Methods for CIM_PortController | 59 |
| Table 28 - SMI Referenced Properties/Methods for CIM_Product | 60 |
| Table 29 - SMI Referenced Properties/Methods for CIM_ProductElementComponent | 60 |
| Table 30 - SMI Referenced Properties/Methods for CIM_Realizes | 60 |
| Table 31 - SMI Referenced Properties/Methods for CIM_SystemDevice..... | 61 |
| Table 32 - Related Profiles for HostDiscoveredResources | 63 |
| Table 33 - CIM Elements for Host Discovered Resources | 69 |
| Table 34 - SMI Referenced Properties/Methods for CIM_ATAInitiatorTargetLogicalUnitPath | 70 |
| Table 35 - SMI Referenced Properties/Methods for CIM_ATAProtocolEndpoint | 71 |
| Table 36 - SMI Referenced Properties/Methods for CIM_ElementConformsToProfile (LogicalDevice to Host Discovered Resources RegisteredProfile)71 | |
| Table 37 - SMI Referenced Properties/Methods for CIM_HostedAccessPoint | 72 |
| Table 38 - SMI Referenced Properties/Methods for CIM_LogicalDevice (LogicalDevice) | 72 |
| Table 39 - SMI Referenced Properties/Methods for CIM_LogicalDisk (LogicalDevice) | 72 |
| Table 40 - SMI Referenced Properties/Methods for CIM_SCSIArbitraryLogicalUnit (LogicalDevice)..... | 73 |
| Table 41 - SMI Referenced Properties/Methods for CIM_SCSIInitiatorTargetLogicalUnitPath..... | 74 |
| Table 42 - SMI Referenced Properties/Methods for CIM_SCSIProtocolEndpoint..... | 74 |
| Table 43 - SMI Referenced Properties/Methods for CIM_StorageExtent (LogicalDevice)..... | 75 |
| Table 44 - SMI Referenced Properties/Methods for CIM_SystemDevice..... | 75 |

| | |
|---|-----|
| Table 45 - SMI Referenced Properties/Methods for CIM_TapeDrive (LogicalDevice) | 75 |
| Table 46 - SMI Referenced Properties/Methods for CIM_SBInitiatorTargetLogicalUnitPath | 76 |
| Table 47 - SMI Referenced Properties/Methods for CIM_SBProtocolEndpoint | 77 |
| Table 48 - Related Profiles for Host Hardware RAID Controller | 79 |
| Table 49 - CIM Elements for Host Hardware RAID Controller | 94 |
| Table 50 - SMI Referenced Properties/Methods for CIM_AlarmDevice | 96 |
| Table 51 - SMI Referenced Properties/Methods for CIM_AssociatedAlarm | 96 |
| Table 52 - SMI Referenced Properties/Methods for CIM_ComputerSystem (Host Hardware RAID Controller)97 | |
| Table 53 - SMI Referenced Properties/Methods for CIM_ComputerSystemPackage (Associates PhysicalPackage to ComputerSystem)97 | |
| Table 54 - SMI Referenced Properties/Methods for CIM_ControlledBy | 98 |
| Table 55 - SMI Referenced Properties/Methods for CIM_ElementCapabilities (ImplementationCapabilities to System)98 | |
| Table 56 - SMI Referenced Properties/Methods for CIM_ImplementationCapabilities (ImplementationCapabilities)99 | |
| Table 57 - SMI Referenced Properties/Methods for CIM_LogicalIdentity | 99 |
| Table 58 - SMI Referenced Properties/Methods for CIM_MediaAccessDevice | 100 |
| Table 59 - SMI Referenced Properties/Methods for CIM_PortController | 100 |
| Table 60 - SMI Referenced Properties/Methods for CIM_Product | 101 |
| Table 61 - SMI Referenced Properties/Methods for CIM_ProductPhysicalComponent | 101 |
| Table 62 - SMI Referenced Properties/Methods for CIM_ProtocolControllerForUnit (Extent or MediaAccessDevice)101 | |
| Table 63 - SMI Referenced Properties/Methods for CIM_ProtocolControllerForUnit (Volume) | 102 |
| Table 64 - SMI Referenced Properties/Methods for CIM_Realizes (Associates PhysicalPackage to PortController)102 | |
| Table 65 - SMI Referenced Properties/Methods for CIM_SAPAvailableForElement | 103 |
| Table 66 - SMI Referenced Properties/Methods for CIM_SCSIProtocolController | 103 |
| Table 67 - SMI Referenced Properties/Methods for CIM_SoftwareIdentity (Driver) | 103 |
| Table 68 - SMI Referenced Properties/Methods for CIM_SoftwareIdentity (FCode/BIOS) | 104 |
| Table 69 - SMI Referenced Properties/Methods for CIM_SoftwareIdentity (Firmware) | 104 |
| Table 70 - SMI Referenced Properties/Methods for CIM_StorageExtent | 104 |
| Table 71 - SMI Referenced Properties/Methods for CIM_SystemComponent | 105 |
| Table 72 - SMI Referenced Properties/Methods for CIM_SystemDevice (Associates System to AlarmDevice)105 | |
| Table 73 - SMI Referenced Properties/Methods for CIM_SystemDevice (Associates controller system to PortController)106 | |
| Table 74 - SMI Referenced Properties/Methods for CIM_SystemDevice (System to SCSIProtocolController) .106 | |
| Table 75 - SMI Referenced Properties/Methods for CIM_ElementSoftwareIdentity (Driver) | 107 |
| Table 76 - SMI Referenced Properties/Methods for CIM_ElementSoftwareIdentity (Firmware or FCode/BIOS)107 | |
| Table 77 - Supported Profiles for iSCSI Initiator | 109 |
| Table 78 - iSCSI Terminology | 109 |
| Table 79 - OperationalStatus Values | 112 |
| Table 80 - CIM Elements for iSCSI Initiator | 113 |
| Table 81 - SMI Referenced Properties/Methods for CIM_BindsTo (TCPProtocolEndpoint to IPProtocolEndpoint)114 | |
| Table 82 - SMI Referenced Properties/Methods for CIM_BindsTo (iSCSIProtocolEndpoint to TCPProtocolEndpoint)114 | |
| Table 83 - SMI Referenced Properties/Methods for CIM_ComputerSystem | 114 |
| Table 84 - SMI Referenced Properties/Methods for CIM_ControlledBy | 115 |

| | |
|--|-----|
| Table 85 - SMI Referenced Properties/Methods for CIM_DeviceSAPImplementation (EthernetPort to IPProtocolEndpoint) | 115 |
| Table 86 - SMI Referenced Properties/Methods for CIM_DeviceSAPImplementation (EthernetPort to iSCSIProtocolEndpoint) | 116 |
| Table 87 - SMI Referenced Properties/Methods for CIM_ElementSoftwareIdentity | 116 |
| Table 88 - SMI Referenced Properties/Methods for CIM_EndpointOfNetworkPipe (Between iSCSI Session and iSCSIProtocolEndpoint) | 116 |
| Table 89 - SMI Referenced Properties/Methods for CIM_EndpointOfNetworkPipe (Between iSCSI connection and TCPProtocolEndpoint) | 117 |
| Table 90 - SMI Referenced Properties/Methods for CIM_InstalledSoftwareIdentity | 117 |
| Table 91 - SMI Referenced Properties/Methods for CIM_NetworkPipeComposition | 117 |
| Table 92 - SMI Referenced Properties/Methods for CIM_PhysicalPackage | 118 |
| Table 93 - SMI Referenced Properties/Methods for CIM_PortController | 118 |
| Table 94 - SMI Referenced Properties/Methods for CIM_Product | 118 |
| Table 95 - SMI Referenced Properties/Methods for CIM_ProductPhysicalComponent | 119 |
| Table 96 - SMI Referenced Properties/Methods for CIM_Realizes | 119 |
| Table 97 - SMI Referenced Properties/Methods for CIM_SAPAvailableForElement | 119 |
| Table 98 - SMI Referenced Properties/Methods for CIM_SCSIProtocolController | 120 |
| Table 99 - SMI Referenced Properties/Methods for CIM_SoftwareIdentity | 120 |
| Table 100 - SMI Referenced Properties/Methods for CIM_SystemDevice (to EthernetPort) | 120 |
| Table 101 - SMI Referenced Properties/Methods for CIM_SystemDevice (to PortController) | 121 |
| Table 102 - SMI Referenced Properties/Methods for CIM_SystemDevice (to ProtocolController) | 121 |
| Table 103 - SMI Referenced Properties/Methods for CIM_iSCSIConnection | 121 |
| Table 104 - SMI Referenced Properties/Methods for CIM_iSCSISession | 123 |
| Table 105 - CIM Elements for SCSI Multipath Management | 129 |
| Table 106 - SMI Referenced Properties/Methods for CIM_ConcreteComponent | 130 |
| Table 107 - SMI Referenced Properties/Methods for CIM_ConcreteDependency | 130 |
| Table 108 - SMI Referenced Properties/Methods for CIM_ElementCapabilities | 131 |
| Table 109 - SMI Referenced Properties/Methods for CIM_ElementConformsToProfile (SCSIPathConfigurationService to SCSI Multipath Management RegisteredProfile) | 131 |
| Table 110 - SMI Referenced Properties/Methods for CIM_ElementSettingData | 131 |
| Table 111 - SMI Referenced Properties/Methods for CIM_ElementSoftwareIdentity (Driver) | 132 |
| Table 112 - SMI Referenced Properties/Methods for CIM_ElementSoftwareIdentity (MP API Plugin) | 132 |
| Table 113 - SMI Referenced Properties/Methods for CIM_HostedService | 132 |
| Table 114 - SMI Referenced Properties/Methods for CIM_MemberOfCollection | 133 |
| Table 115 - SMI Referenced Properties/Methods for CIM_Product | 133 |
| Table 116 - SMI Referenced Properties/Methods for CIM_SCSIMultipathConfigurationCapabilities | 133 |
| Table 117 - SMI Referenced Properties/Methods for CIM_SCSIMultipathSettings | 134 |
| Table 118 - SMI Referenced Properties/Methods for CIM_SCSIPathConfigurationService | 134 |
| Table 119 - SMI Referenced Properties/Methods for CIM_SCSITargetPortGroup | 135 |
| Table 120 - SMI Referenced Properties/Methods for CIM_ServiceAvailableToElement | 135 |
| Table 121 - SMI Referenced Properties/Methods for CIM_SoftwareIdentity (Driver) | 136 |
| Table 122 - SMI Referenced Properties/Methods for CIM_SoftwareIdentity (MP API Plugin) | 136 |
| Table 123 - Related Profiles | 139 |
| Table 124 - Operations: CIM_MemoryConfigurationService | 143 |
| Table 125 - CIM_MemoryConfigurationService.AllocateFromPool() Method: Return Code Values | 143 |
| Table 126 - CIM_MemoryConfigurationService.AllocateFromPool() Method: Parameters | 144 |
| Table 127 - CIM_MemoryConfigurationService.ReturnToPool() Method: Return Code Values | 144 |
| Table 128 - CIM_MemoryConfigurationService.ReturnToPool() Method: Parameters | 144 |
| Table 129 - Operations: CIM_ResourcePool | 145 |

| | |
|---|-----|
| Table 130 - Operations: CIM_MemoryCapabilities | 145 |
| Table 131 - Operations: CIM_MemoryConfigurationCapabilities..... | 145 |
| Table 132 - Operations: CIM_MemoryAllocationSettingData | 146 |
| Table 133 - Operations: CIM_ElementCapabilities | 146 |
| Table 134 - Operations: CIM_ServiceAffectsElement | 146 |
| Table 135 - Operations: CIM_ConcreteComponent | 147 |
| Table 136 - Operations: CIM_ElementAllocatedFromPool..... | 147 |
| Table 137 - Operations: CIM_HostedService | 147 |
| Table 138 - Operations: CIM_ElementSettingData..... | 147 |
| Table 139 - Operations: CIM_ElementConformsToProfile | 148 |
| Table 140 - CIM Elements | 153 |
| Table 141 - Class: CIM_RegisteredProfile..... | 153 |
| Table 142 - Class: CIM_MemoryConfigurationService..... | 154 |
| Table 143 - Class: CIM_ResourcePool..... | 154 |
| Table 144 - Class: CIM_MemoryCapabilities..... | 155 |
| Table 145 - Class: CIM_MemoryConfigurationCapabilities | 155 |
| Table 146 - Class: CIM_MemoryAllocationSettingData | 156 |
| Table 147 - Class: CIM_ElementSettingData - Use 1..... | 157 |
| Table 148 - Class: CIM_ElementSettingData - Use 2..... | 157 |
| Table 149 - Class: CIM_HostedService..... | 158 |
| Table 150 - Class: CIM_ElementAllocatedFromPool..... | 158 |
| Table 151 - Class: CIM_ConcreteComponent..... | 159 |
| Table 152 - Class: CIM_ElementCapabilities use 1..... | 159 |
| Table 153 - Class CIM_ElementCapabilities use 2..... | 160 |
| Table 154 - Related Profiles | 161 |
| Table 155 - Operations: CIM_ResourcePool..... | 164 |
| Table 156 - Operations: CIM_PersistentMemoryCapabilities | 165 |
| Table 157 - Operations: CIM_PersistentMemoryService..... | 165 |
| Table 158 - AllocateFromPool() Method: Return Code Values..... | 166 |
| Table 159 - AllocateFromPool() Method: Parameters | 166 |
| Table 160 - ReturnToPool() Method: Return Code Values..... | 166 |
| Table 161 - ReturnToPool() Method: Parameters..... | 167 |
| Table 162 - ModifyNamespace() Method: Return Code Values | 167 |
| Table 163 - ModifyNamespace() Method: Parameters | 168 |
| Table 164 - Operations: CIM_PersistentConfigurationCapabilities..... | 168 |
| Table 165 - Operations: CIM_PersistentMemoryNamespace | 168 |
| Table 166 - Operations: CIM_PersistentMemoryNamespaceSettingData..... | 169 |
| Table 167 - Operations: CIM_ElementCapabilities..... | 169 |
| Table 168 - Operations: CIM_ServiceAffectsElement | 170 |
| Table 169 - Operations: CIM_ConcreteComponent | 170 |
| Table 170 - Operations: CIM_ElementAllocatedFromPool..... | 170 |
| Table 171 - Operations: CIM_HostedService | 170 |
| Table 172 - Operations: CIM_ElementSettingData..... | 171 |
| Table 173 - Operations: CIM_ElementConformsToProfile | 171 |
| Table 174 - Operations: CIM_SystemDevice..... | 171 |
| Table 175 - CIM Elements for Persistent Memory Configuration..... | 175 |
| Table 176 - Class: CIM_RegisteredProfile..... | 175 |
| Table 177 - Class: CIM_ResourcePool..... | 176 |
| Table 178 - Class: CIM_PersistentMemoryCapabilities..... | 176 |

| | |
|---|-----|
| Table 179 - Class: CIM_PersistentMemoryService | 177 |
| Table 180 - Class: CIM_PersistentConfigurationCapabilities | 177 |
| Table 181 - Class: CIM_PersistentMemoryNamespace | 178 |
| Table 182 - Class: CIM_PersistentMemoryNamespaceSettingData | 178 |
| Table 183 - CIM_ElementCapabilities | 179 |
| Table 184 - CIM_ElementCapabilities | 179 |
| Table 185 - Class: CIM_ServiceAffectsElement | 180 |
| Table 186 - Class: CIM_ConcreteComponent | 180 |
| Table 187 - Class: CIM_ElementAllocatedFromPool | 180 |
| Table 188 - Class: CIM_HostedService | 180 |
| Table 189 - Class CIM_ElementSettingData | 181 |
| Table 190 - Class: CIM_ElementConformsToProfile | 181 |
| Table 191 - Class: CIM_SystemDevice | 182 |
| Table 192 - Class: CIM_BasedOn | 182 |

FOREWORD

The host-based storage portion of the Storage Management Technical Specification contains profiles and other clauses for management of host-based storage devices. Host-based storage devices provide storage capabilities to a host computer system. Examples of these devices include Fiber Channel Host Bus Adapters, Serial Attached SCSI Host Bus Adapters, RAID Controllers, JBODs (Just-A-Bunch-Of-Disks) and Operating System-discovered storage resources. The host-based profiles describe the manageability required for each device and the connectivity to the host computer system. The host-based profiles leverage existing profiles within this specification, as well as other profiles from the Distributed Management Task Force, where applicable, to create a comprehensive management model.

Parts of this Standard

This standard is subdivided in the following parts:

- *Storage Management Technical Specification, Part 1 Overview, 1.8.0 Rev 4*
- *Storage Management Technical Specification, Part 2 Common Architecture, 1.8.0 Rev 4*
- *Storage Management Technical Specification, Part 3 Common Profiles, 1.8.0 Rev 4*
- *Storage Management Technical Specification, Part 4 Block Devices, 1.8.0 Rev 4*
- *Storage Management Technical Specification, Part 5 Filesystems, 1.8.0 Rev 4*
- *Storage Management Technical Specification, Part 6 Fabric, 1.8.0 Rev 4*
- *Storage Management Technical Specification, Part 7 Host Elements, 1.8.0 Rev 4*
- *Storage Management Technical Specification, Part 8 Media Libraries, 1.8.0 Rev 4*

SNIA Web Site

Current SNIA practice is to make updates and other information available through their web site at <http://www.snia.org>

SNIA Address

Requests for interpretation, suggestions for improvement and addenda, or defect reports are welcome. They should be sent via the SNIA Feedback Portal at <http://www.snia.org/feedback/> or by mail to the Storage Networking Industry Association, 4360 ArrowsWest Drive, Colorado Springs, Colorado 80907, U.S.A.

1 Scope

The host-base storage portion of the Storage Management Technical Specification defines management profiles for autonomous, component and abstract profiles for management of host-based storage devices. The autonomous profiles describe the management of a stand-alone host-based storage entity. The component profiles describe management of aspects of host-based storage entities that may be used by other autonomous profiles. Finally, this section describes abstract profiles that may be used as a basis for creating additional Host-based autonomous profiles.

This version of the Host-based Storage portion of the Storage Management Technical Specification includes autonomous profiles:

- "The Host Discovered Resources Profile

This profile defines the model for the storage devices presented to an operating system running on a host computer system. In addition, this profile describes the map of storage associated to a host-computer system that a client application can discover.
- "The Fibre Channel HBA Profile

This profile defines the model and functions of a Fibre Channel HBA that exports block storage to a host computer system from a SAN device (Fibre Channel switch, array, tape library, etc.).
- iSCSI Initiator Profile

This profile defines the model and functions necessary to manage an iSCSI initiator.

Component profiles used by autonomous profiles to describe aspects of host-based storage elements and services. The component profiles defined in this version of the specification include:

- Host Hardware RAID Controller Profile

This profile defines the model and functions of a host-based RAID controller that exports block storage to a host computer system from locally attached storage devices (internal hard drives, JBODs, etc.)
- Storage HBA Profile

This profile defines the model and functions of a SAS, SATA, SPI, or Fibre Channel HBA that exports storage to a host computer system from a SAN device (Fibre Channel switch, array, tape library, etc.).
- Disk Partition Profile

The Disk Partition profile models partition (or slice) configuration services provided by operating systems on some platforms.
- SB Multipath Management Profile

The SB Multipath Management Profile models paths (connections between host controllers and device ports) for environments supporting the SB (Single Byte) command protocol.
- SCSI Multipath Management Profile

The SCSI Multipath Management profile models paths (connections between host controllers, device ports, and logical units) for environments supporting the SCSI command protocol.

2 Normative References

2.1 Overview

The following referenced documents are indispensable for the application of this document. For dated references, only the edition cited applies. For undated references, the latest edition of the referenced document (including any amendments) applies.

2.2 Approved references

Systems Management: Data Storage Management (XDSM) API - ISBN: 1-85912-190-X

DMTF DSP1054 Indications Profile 1.2.2

http://www.dmtf.org/sites/default/files/standards/documents/DSP1054_1.2.2.pdf

2.3 References under development

EXPERIMENTAL

DMTF documents that are works in progress.

DMTF DSP1002, Diagnostics Profile 2.1.0

http://dmtf.org/sites/default/files/standards/documents/DSP1002_2.1.0a.pdf

DMTF DSP 1071, Multi-type System Memory Profile 1.0.0

http://www.dmtf.org/sites/default/files/standards/documents/DSP1071_1.0.0.pdf

DMTF DSP1104, FC HBA Diagnostics Profile 1.1.0a

http://dmtf.org/sites/default/files/standards/documents/DSP1104_1.1.0a.pdf

EXPERIMENTAL

Storage Management Technical Specification, Part 2 Common Architecture, 1.8.0 Rev 4

Storage Management Technical Specification, Part 3 Common Profiles, 1.8.0 Rev 4

3 Terms, Definitions, Symbols, Abbreviations, and Conventions

3.1 General

For the purposes of this document, the terms, definitions, symbols, abbreviations, and conventions given in *Storage Management Technical Specification, Part 2 Common Architecture, 1.8.0 Rev 4* and the following apply.

3.2 Terms and Definitions

3.2.1

Fibre Channel

a serial I/O bus capable of supporting multiple protocols, including access to open system storage (FCP protocol), access to mainframe storage (**FICON™**¹ protocol), and IP

3.2.2

Host Bus Adapter (HBA)

an I/O adapter that connects a host I/O bus to a computer's memory system

3.2.3

host computer system

any computer system to which disks, disk subsystems, or file servers are attached and accessible for data storage and I/O.

3.2.4

JBOD

an acronym for "Just a Bunch Of Disks." A cabinet or enclosure of disks

3.2.5

logical sisk

block storage on which file systems are built

A logical disk would be formatted for a particular file system.

3.2.6

Operating System (OS)

software that manages the resources of a host computer system.

3.2.7

RAID

an Acronym for Redundant Array of Independent Disks, a family of techniques for managing multiple disks to deliver desirable cost, data availability, and performance characteristics to host environments

3.2.8

storage device enclosure

a cabinet or enclosure of storage media devices.

Note 1 to entry: Example: JBOD

3.2.9

storage volume

unit of capacity served from a block storage device

1.FICON™ is an example of a suitable product available commercially. This information is given for the convenience of users of this standard and does not constitute an endorsement of this product by SNIA or any standards organization.

EXPERIMENTAL

4 Disk Partition Profile

4.1 Description

4.1.1 Synopsis

Profile Name: Disk Partition (Component Profile)

Version: 1.6.0

Organization: SNIA

Central Class: DiskPartitionConfigurationService

Scoping Class: Base Server ComputerSystem

Related Profiles: Not defined in this document.

4.1.2 Overview

This profile models partition (or slice) configuration services provided by operating systems on some platforms. Some operating systems do not use this type of partitioning. On the operating systems that do, the operating system disk drivers treat partitions as virtual disks. The types of valid partitions are determined by the operating system and the partitioning tools.

We need to consider several operating system variants related to operating system partitions

- On some platforms (e.g., Solaris, Windows), a raw disk volume needs to be partitioned before an application (i.e., a filesystem) uses it. There may be just a single partition on the volume. In these platforms, there is not a name that represents an entire disk volume if that disk volume has multiple partitions.
- On other platforms (e.g., Linux), an application resides on a partition or on the entire disk volume.
- Different operating systems have incompatible partitioning approaches and on-disk data structures (e.g disk labels or partition tables). This specification refers to these approaches as styles. Each style may be supported by multiple operating systems, and most operating systems support multiple styles. The styles supported in this profile are MBR (used on all operating systems running on X86 hardware), vtoc (Solaris and other operating systems with a BSD heritage), and GPT (an emerging style that supports multi-terabyte disk volumes).
- Some styles support multiple tiers of partitions - a partition at one tier may have sub-partitions. On Windows, extended partitions are also a second tier with MBR partitions at each tier.
- Some operating systems utilize two tiers of partitions with different styles at different tiers. For example, BSD-derived Unix variants running on X86 platforms: the lower tier is the X86 BIOS-supported MBR partitions; BSD-style slices can be installed on one of the MBR partitions.
- Some operating systems (AIX, HP_UX) have no equivalent to partitioning.
- Some partition styles have a fixed number of partitions (dependent on the partition type); the user can't create or delete partitions, just adjust the properties of one of the pre-defined partitions.

A partitioned disk volume has an associated partition table. The partition table contains information about the partitions on the disk volume – the starting address, length, and (in some cases) the type of the partition. In certain cases, a partition table can be associated with a partition; allowing multiple tiers of partitions.

In order for storage applications (e.g., logical volume managers, filesystems, databases) to use a disk volume, the operating system provides a name for the volume. These names appear to be filenames but are part of one (or a few) special namespaces managed by the operating system. Windows drive letters and Unix /dev/ directories are examples of the special namespaces. Any extent that is consumable by storage applications is modeled a LogicalDisk; the LogicalDisk.Name property provides this special filename. The exported extent resulting from a partition is a LogicalDisk; on systems that do not require partitions, each usable disk volume has a LogicalDisk instance that models the operating system name. Extents that are not available for storage applications are modeled as StorageExtent (or StorageExtent subclasses other than LogicalDisk) instances and have a name derived from the underlying hardware and partition number.

Operating systems may have different partition styles. The most common style is the MBR (Master Boot Record) style used on x86 PCs. This style supports four primary partitions on a disk volume with an optional second-tier (extended/logical partitions). Solaris uses a style called VTOC that is derived from and similar to BSD partitions. VTOC supports eight partitions. On Solaris X86, VTOC is installed in one X86 MBR primary partition for compatibility with other x86 operating systems. GPT is a new set of interfaces for x86 64-bit environments and includes a partitioning style. Of particular note is that GPT partitions can exceed the two-terabyte limit associated with other partition styles. So many vendors are migrating towards GPT as an option for supporting larger volumes. This profile includes separate specialized subclasses for MBR, VTOC, and GPT partitions. Their relationship is summarized in Figure 7: "Disk Partition Class Hierarchy".

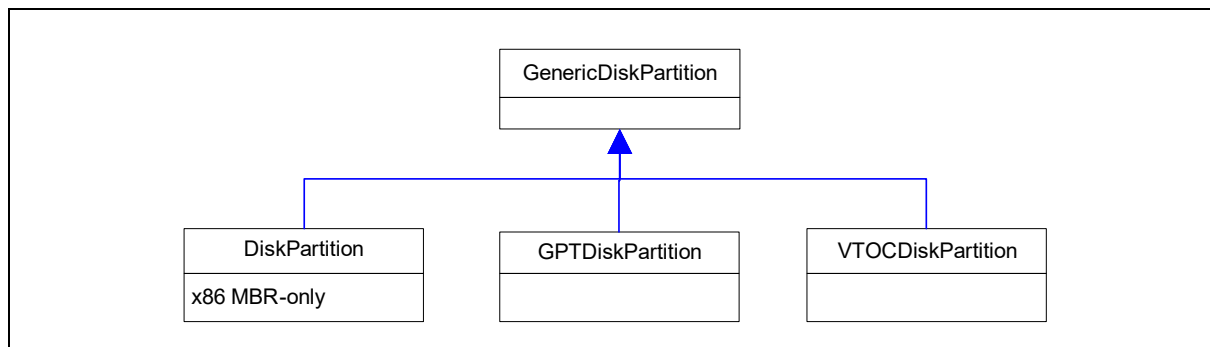


Figure 7 - Disk Partition Class Hierarchy

This profile includes a partition configuration service class that allows a client to create partition tables and modify partitions. It also includes a partition configuration capabilities class that describes the partition configuration capabilities of the system. Separate capabilities instances describe each partition style supported on the system. There shall be one instance of DiskPartitionConfigurationService, as shown in Figure 8: "Disk Partition Class Diagram".

All references to ComputerSystem in the Disk Partition Profile implies a single instance for a customer server or storage system as defined in the Base Server Profile. See Annex A: (Informative) Host Profile Deployment Guidelines, 1.6.0 Rev 3 for information on the use of host profiles with Base Server profile.

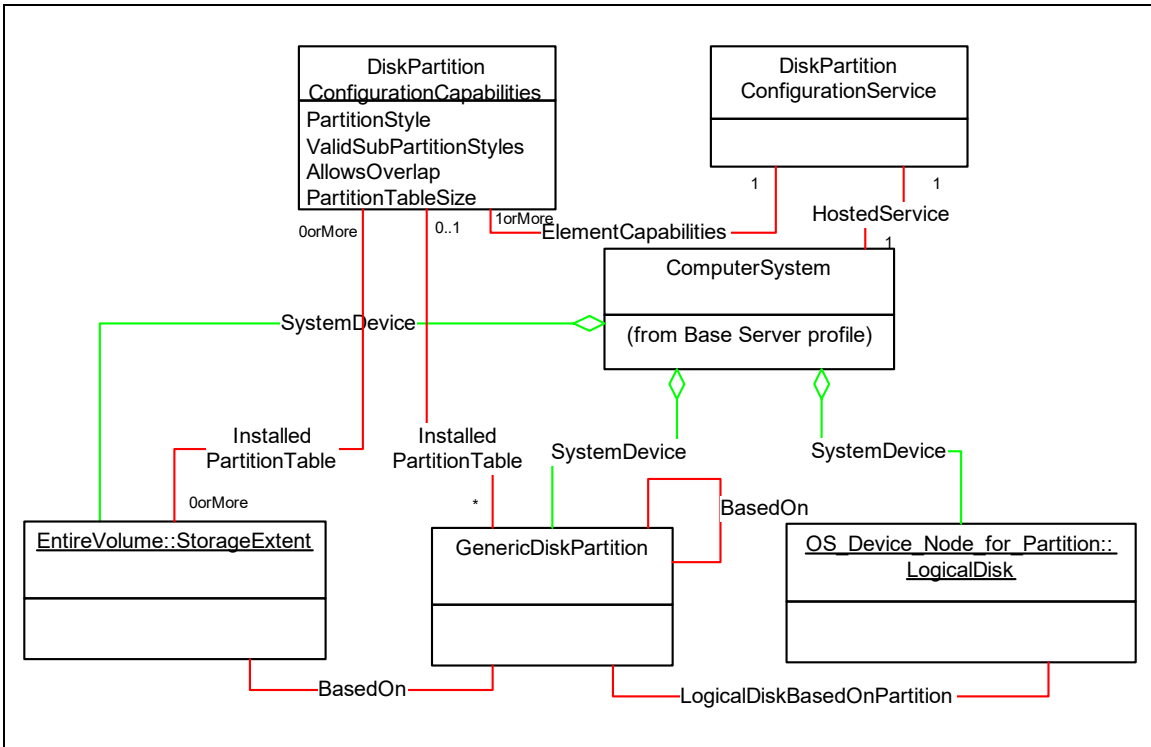


Figure 8 - Disk Partition Class Diagram

4.1.3 Background on X86 MBR Partitions

The terminology used in X86 partition applications is somewhat confusing and masks the actual configurations. The MBR style supports two tiers of partitions; up to four partitions at the entire disk volume tier and up to four partitions within each of these top-tier partitions. An MBR *primary* partition is a top-tier partition that is not sub-partitioned. An MBR *extended* partition is a top-tier partition that is sub-partitioned. An MBR *logical* partition is a sub-partition of an extended partition.

Figure 9: "Disk MBR Partition Example" represents the actual layout of an MBR drive with three usable partitions – with Windows/DOS driver letter names.

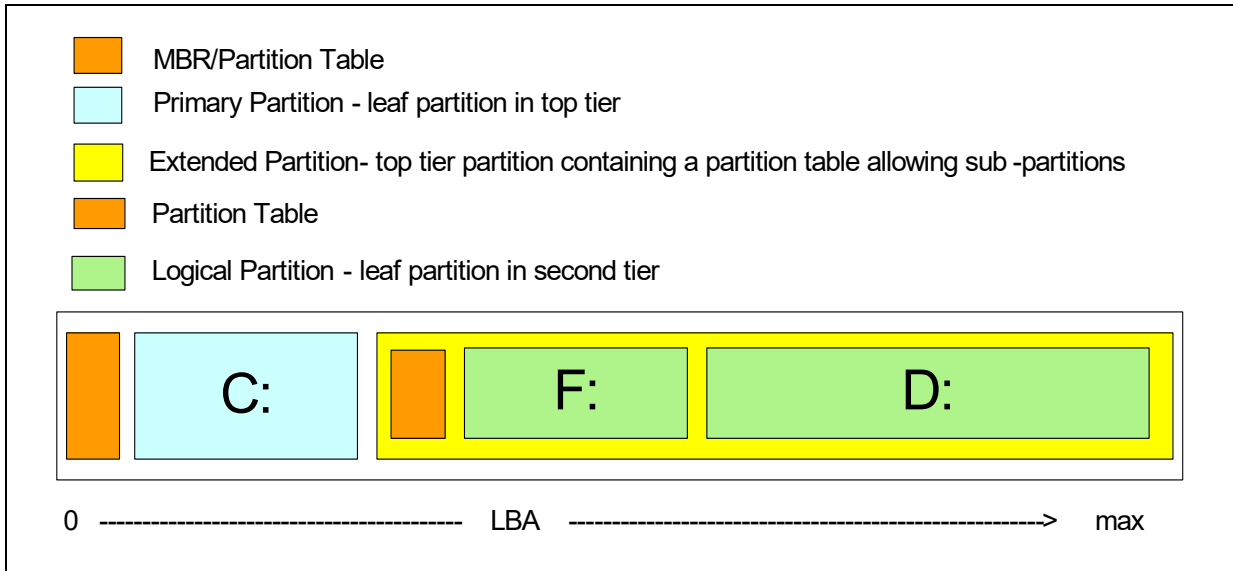


Figure 9 - Disk MBR Partition Example

C: is a primary partition and F: and D: are logical partitions that share an extended partition. Note that the partitions drive letters (C:, F:, and D:) are not in alphabetical order; the assignment of drive letters under Windows/DOS is decoupled from the partitioning logic.

Figure 10: "MBR Partition Instance Diagram" is an instance diagram of the SMI-S classes describing this configuration. Technically, the MBR/Partition tables could be considered to be small partitions. operating systems generally hide these sectors and treat the effective disk volume as starting just after the MBR. Rather than complicate the SMI-S model, these MBR areas are just ignored and the consumable block size is reduced by the appropriate value (the PartitionTableSize property of DiskPartitionConfigurationCapabilities). In the SMI-S model, the InstalledPartitionTable association to the containing extent indicates the presence of a disk label and/or partition table. In Figure 10: "MBR Partition Instance Diagram", the extent representing the entire disk volume (on the lower left) and the top-tier partition to the right each contain a partition table and are each associated to DiskPartitionConfigurationCapabilities via an InstalledPartitionTable association.

In Figure 10: "MBR Partition Instance Diagram" the StorageExtent at the lower left represents the entire disk volume and the two "top-tier" partitions are based on this extent. The LogicalDisk instances at the top represent the consumable partitions C:, F:, and D:.

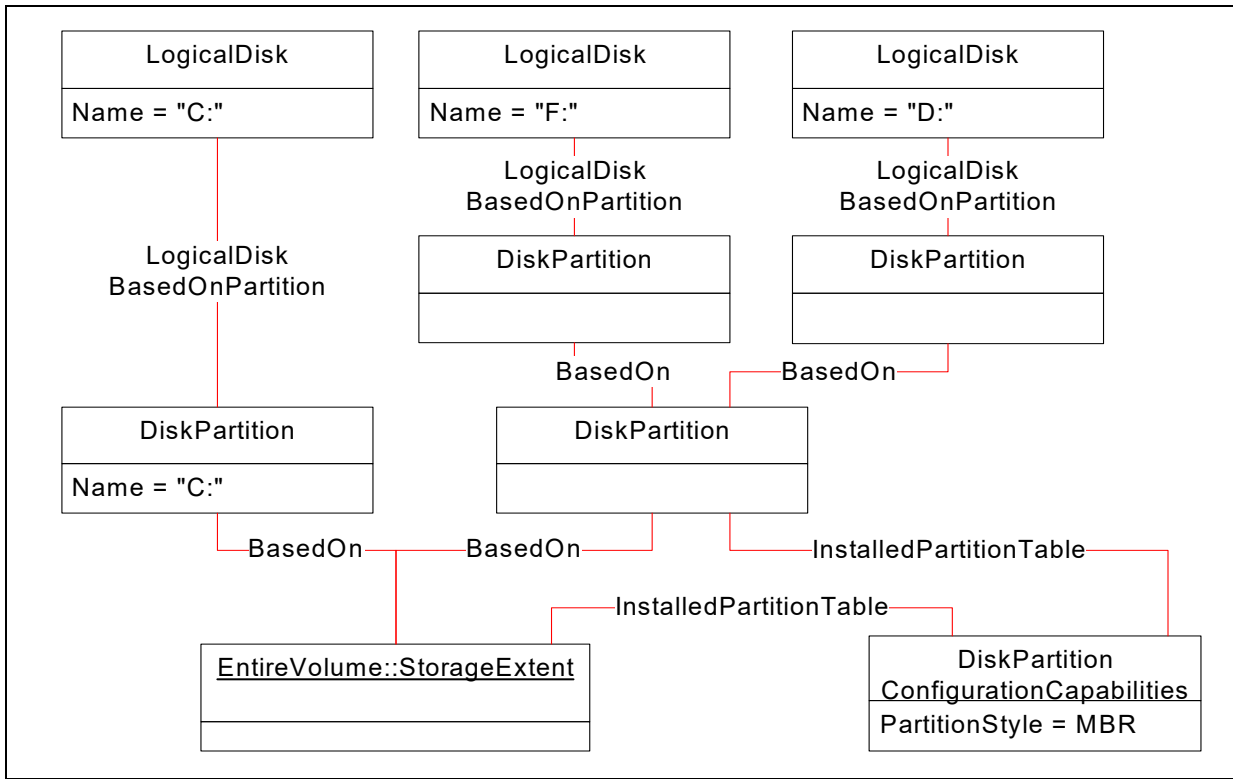


Figure 10 - MBR Partition Instance Diagram

Figure 11: "MBR and VTOC Partition Instance Diagram" models a similar configuration where the one top-tier partition contains a Solaris X86 installation. In this case, the instrumentation instantiates two instances of **DiskPartitionConfigurationCapabilities**, one for the top-tier MBR partition table and one for the vtoc partition table.

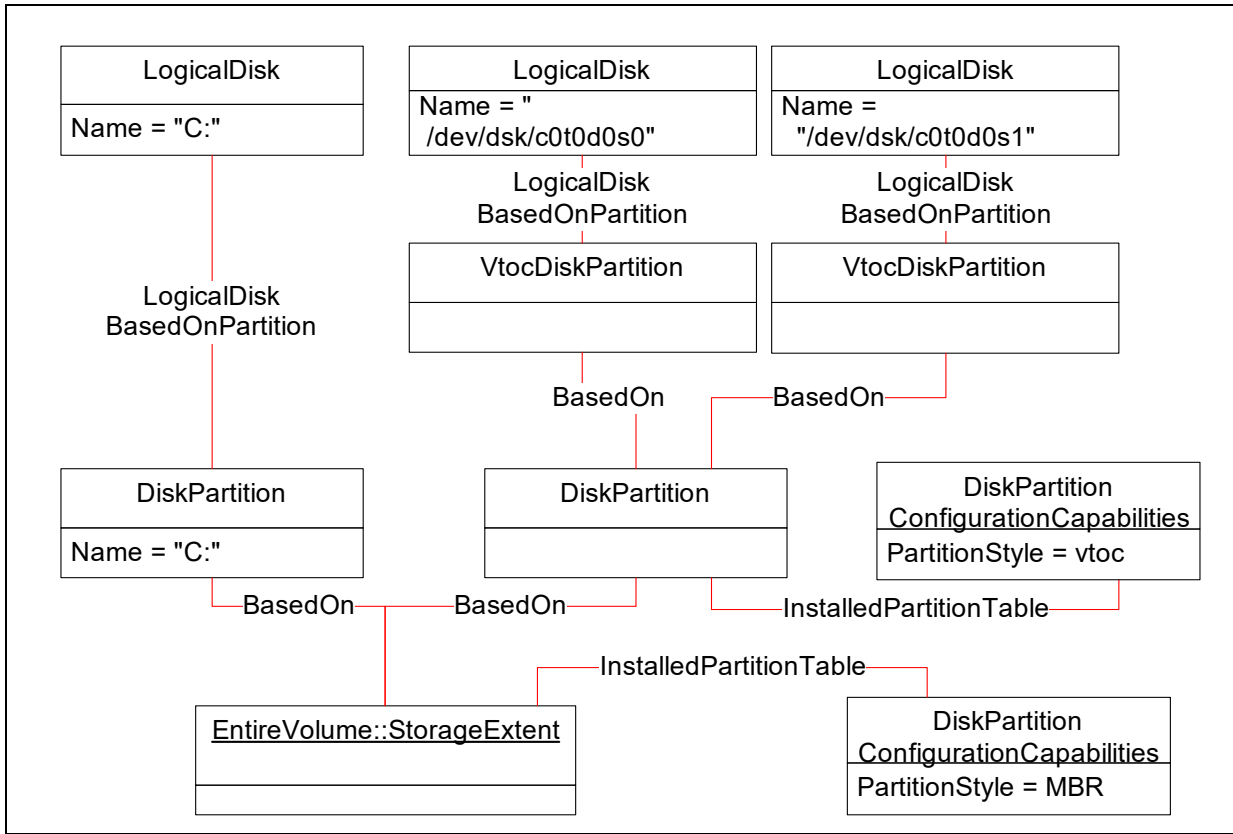


Figure 11 - MBR and VTOC Partition Instance Diagram

Table 1 summarizes likely values for capabilities properties and suggested Name properties on various operating systems

Table 1 - Capabilities Properties

| Property | X86 MBR | vtoc | GPT | | | |
|-----------------------|--------------------------------------|-------------|------------------------|-------|---------------|-------------|
| | | | Win | Linux | Solaris SPARC | Solaris X86 |
| Overlap Allowed | Depends on applications | true | false | | | |
| MaxCapacity | 2 terabytes (2 ³² blocks) | 2 terabytes | 2 ⁶⁴ blocks | | | |
| MaxNumberOfPartitions | 4 | 8 | 128 | 15 | 127 | 127 |

The sizes and starting/ending addresses shall be consistent between the associated LogicalDisk, DiskPartition, and LogicalDisk instances. Figure 12: "Partition Instance Diagram for Size/Address Rules" shows the classes with size information.

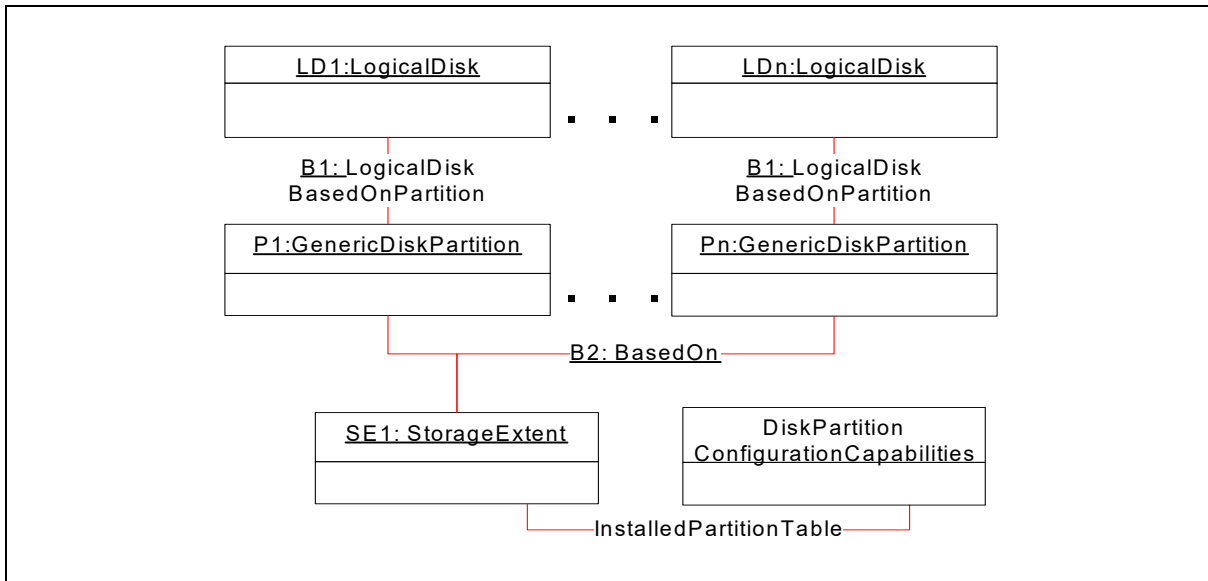


Figure 12 - Partition Instance Diagram for Size/Address Rules

In this diagram, partitions P1,... Pn are all based on the same underlying disk volume (or partition) SE1.

- The NumberOfBlocks shall be the same for a LogicalDisk and its underlying partition (for example, LD1 and P1 in the diagram).
- The StartingAddress in the LogicalDiskBasedOnPartition associations (B1 in the diagram) between a LogicalDisk and its underlying partition shall be 0. The EndingAddress in this association shall be one less than NumberOfBlocks from either the LogicalDisk or partition.
- The NumberOfBlocks for each partition (P1, ... Pn) shall be equal to the values of EndingAddress-StartingAddress+1 of the underlying BasedOn association (B2 in the diagram).
- DiskPartitionConfigurationCapabilities.PartitionTableSize shall hold the total number of blocks consumed by metadata (volume label, boot record, and partition tables) for the associated StorageExtent. For MBR and VTOC styles, this is a fixed value. For GPT, this value could in theory be larger for large extents. Separate instances of DiskPartitionConfigurationCapabilities shall be instantiated as needed to allow different values of PartitionTableSize.
- The size of maintenance tracks or cylinders shall not be included StorageExtent.NumberOfBlocks. This size may be included in DiskPartitionConfigurationCapabilities.PartitionTableSize.
- If DiskPartitionConfigurationCapabilities.OverlapAllowed is false, then the sum of the NumberOfBlocks properties for all partitions plus DiskPartitionConfigurationCapabilities.PartitionTableSize shall not exceed the value of NumberOfBlocks for the underlying StorageExtent. Other than that, there is no guaranteed relationship between StorageExtent.NumberOfBlocks and the sum of the NumberOfBlock values for partitions BasedOn the StorageExtent.

4.2 Health and Fault Management Considerations

No health information is required in LogicalDisk or partition instances. Clients should assume that the health-related properties of the underlying StorageExtent apply to all partitions and LogicalDisks based on that extent.

4.3 Supported Profiles and Packages

Not defined in this document

4.4 Methods of the Profile

4.4.1 SetPartitionStyle

This method installs a partition table on an extent of the specified partition style, creates DiskPartition instances if SettingStyleInstantiatedPartitions is non-zero, and BasedOn associations between the underlying extent and the new partition instances. As a side effect, the usable block size of the underlying extent is reduced by the block size of the metadata reserved by the partition table and associated metadata. This size is in the PartitionTableSize property of the associated DiskPartitionConfigurationCapabilities instance.

```
uint32 SetPartitionStyle (

    [IN, Description (
        "A reference to the extent (volume or partition) where "
        "this style (partition table) will be installed.")]
    CIM_StorageExtent REF Extent,

    [IN, Description (
        "A reference to the "
        "DiskPartitionConfigurationCapabilities instance "
        "describing the desired partition style.")]
    CIM_DiskPartitionConfigurationCapabilities REF PartitionStyle );
```

4.4.2 CreateOrModifyPartition

This method creates a new partition if the Partition parameter is null or modifies the partition specified. If the starting and ending address parameters are null, the resulting partition will occupy the entire underlying extent. If a the DeviceFileName parameter is non-null, a LogicalDisk instance is created and associated via LogicalDiskBasedOnPartition to the partition. The underlying extent shall be associated to a capabilities class describing the installed partition style (partition table); this association is established using

```
uint32 CreateOrModifyPartition (

    [IN, Description (
        "A reference to the underlying extent the partition is "
        "base on.")]
    CIM_StorageExtent REF extent,

    [IN, Description (
        "The starting block number.")]
    uint64 StartingAddress,

    [IN, Description (
        "The ending block number.")]
    uint64 EndingAddress,

    [IN, Description (
        "The platform-specific special file name to be assigned "
```

```

        "to the LogicalDisk instance BasedOn the new "
        "DiskPartition instance.")]
string DeviceFileName,

    [IN, OUT, Description (
        "A reference an existing partition instance to modify or "
        "null to request a new partition.")]
CIM_GenericDiskPartition REF Partition);

```

Intrinsic delete operation will delete the disk partition and all storage extents that are Dependent on the disk partition.

4.5 Client Considerations and Recipes

4.5.1 Client Considerations

A client discovers partition configuration support by looking for instances of DiskPartitionConfigurationService. If no service instances are available, then this operating system does not support disk partitions and the client can assume that any LogicalDisk instance is consumable by applications (such as volume managers or filesystems). For operating systems that do support partitioning, the client can discover whether a particular extent is partitioned by looking for a InstalledPartitionTable instance associated with the extent. The client can discover the existing partition configuration by following BasedOn associations between the extent and GenericDiskPartition instances.

For each discovered service, there shall be one or more instances of DiskPartitionConfigurationCapabilities. There is exactly one capabilities instance per Partition Style. If multiple capabilities instances are discovered, the client should look at the PartitionStyle property to determine the services that apply to entire disk volumes and those that apply to partitions.

4.5.2 Recipes

No recipes are included in this version of the standard.

4.6 CIM Elements

4.6.1 Overview

Table 2 describes the CIM elements for Disk Partition.

Table 2 - CIM Elements for Disk Partition

| Element Name | Requirement | Description |
|--|-------------|--|
| 4.6.2 CIM_BasedOn (Partition to Extent) | Mandatory | The disk partitions that are dependent on a storage extent. |
| 4.6.3 CIM_BasedOn (Partition to Partition) | Mandatory | The disk partitions that are dependent on a disk partition. |
| 4.6.4 CIM_DiskPartition | Optional | |
| 4.6.5 CIM_DiskPartitionConfigurationCapabilities | Mandatory | |
| 4.6.6 CIM_DiskPartitionConfigurationService | Mandatory | |
| 4.6.7 CIM_ElementCapabilities | Mandatory | |
| 4.6.8 CIM_ElementConformsToProfile (DiskPartitionConfigurationService to Disk Partition RegisteredProfile) | Mandatory | Ties the DiskPartitionConfigurationService to the registered profile for Disk Partition. |

Table 2 - CIM Elements for Disk Partition

| Element Name | Requirement | Description |
|--|-------------|--|
| 4.6.9 CIM_GPTDiskPartition | Optional | |
| 4.6.10 CIM_GenericDiskPartition | Mandatory | |
| 4.6.11 CIM_HostedService | Mandatory | |
| 4.6.12 CIM_InstalledPartitionTable (Capabilities to Extent) | Mandatory | The disk partition capabilities for disk partitions that are dependent on a storage extent. |
| 4.6.13 CIM_InstalledPartitionTable (Capabilities to Partition) | Mandatory | The disk partition capabilities for disk partitions that are dependent on a storage extent. |
| 4.6.14 CIM_LogicalDisk | Optional | |
| 4.6.15 CIM_LogicalDiskBasedOnPartition (LogicalDisk to Partition) | Conditional | Conditional Requirement: Required if CIM_LogicalDisk is instantiated. The logical disks that are dependent on a disk partition. |
| 4.6.16 CIM_StorageExtent | Mandatory | |
| 4.6.17 CIM_SystemDevice (System to Extent) | Mandatory | The storage extent managed by a Base Server profile computer system. |
| 4.6.18 CIM_SystemDevice (System to LogicalDisk) | Conditional | Conditional Requirement: Required if CIM_LogicalDisk is instantiated. The logical disk that is managed by a Base Server profile computer system. |
| 4.6.19 CIM_SystemDevice (System to Partition) | Mandatory | The disk partition managed by a Base Server profile computer system. |
| 4.6.20 CIM_VTOCDiskPartition | Optional | |
| SELECT * FROM CIM_InstCreation WHERE SourceInstance ISA CIM_GenericDiskPartition | Mandatory | Partition Creation. |
| SELECT * FROM CIM_InstDeletion WHERE SourceInstance ISA CIM_GenericDiskPartition | Mandatory | Partition Deletion. |

4.6.2 CIM_BasedOn (Partition to Extent)

Created By: Extrinsic: CreateOrModifyPartition

Modified By: Static

Deleted By: Static

Requirement: Mandatory

Table 3 describes class CIM_BasedOn (Partition to Extent).

Table 3 - SMI Referenced Properties/Methods for CIM_BasedOn (Partition to Extent)

| Properties | Flags | Requirement | Description & Notes |
|-----------------|-------|-------------|---|
| StartingAddress | | Mandatory | |
| EndingAddress | | Mandatory | |
| Dependent | | Mandatory | Reference to a CIM_GenericDiskPartition that is based on the Antecedent |
| Antecedent | | Mandatory | Reference to a CIM_StorageExtent |

4.6.3 CIM_BasedOn (Partition to Partition)

Created By: Extrinsic: CreateOrModifyPartition

Modified By: Static

Deleted By: Static

Requirement: Mandatory

Table 4 describes class CIM_BasedOn (Partition to Partition).

Table 4 - SMI Referenced Properties/Methods for CIM_BasedOn (Partition to Partition)

| Properties | Flags | Requirement | Description & Notes |
|-----------------|-------|-------------|---|
| StartingAddress | | Mandatory | |
| EndingAddress | | Mandatory | |
| Antecedent | | Mandatory | Reference to a CIM_GenericDiskPartition |
| Dependent | | Mandatory | Reference to a CIM_GenericDiskPartition that is based on the Antecedent |

4.6.4 CIM_DiskPartition

CIM_DiskPartition (MBR) is subclassed from CIM_GenericDiskPartition.

Created By: Extrinsic: CreateOrModifyPartition

Modified By: Static

Deleted By: Static

Requirement: Optional

Table 5 describes class CIM_DiskPartition.

Table 5 - SMI Referenced Properties/Methods for CIM_DiskPartition

| Properties | Flags | Requirement | Description & Notes |
|-------------------------|-------|-------------|---------------------|
| SystemCreationClassName | | Mandatory | |
| SystemName | | Mandatory | |
| CreationClassName | | Mandatory | |
| DeviceID | | Mandatory | |
| Name | | Mandatory | |
| NumberOfBlocks | | Optional | |
| NameFormat | | Optional | |
| NameNamespace | | Optional | |
| PartitionSubtype | | Optional | |
| PartitionType | | Optional | |
| PrimaryPartition | | Optional | |

4.6.5 CIM_DiskPartitionConfigurationCapabilities

Created By: Static

Modified By: Static
 Deleted By: Static
 Requirement: Mandatory

Table 6 describes class CIM_DiskPartitionConfigurationCapabilities.

Table 6 - SMI Referenced Properties/Methods for CIM_DiskPartitionConfigurationCapabilities

| Properties | Flags | Requirement | Description & Notes |
|-------------------------|-------|-------------|--|
| InstanceID | | Mandatory | Shall specify the unique identifier for an instance of this class within the Implementation namespace. |
| ElementName | | Mandatory | User friendly name. |
| PartitionStyle | | Mandatory | The partition style (i.e partition table type) associated with this capabilities instance. |
| ValidSubPartitionStyles | | Optional | Some partitions can act as a container for other partitions. |
| MaxNumberOfPartitions | | Mandatory | The maximum number of partitions that can be BasedOn the Underlying extent. |
| MaxCapacity | | Mandatory | The largest partition size (in blocks) of this style supported on this platform. |
| OverlapAllowed | | Mandatory | The platform supports partitions with overlapping address ranges. |
| PartitionTableSize | | Mandatory | The number of blocks occupied by the partition table and other metadata. |

4.6.6 CIM_DiskPartitionConfigurationService

Created By: Static
 Modified By: Static
 Deleted By: Static
 Requirement: Mandatory

Table 7 describes class CIM_DiskPartitionConfigurationService.

Table 7 - SMI Referenced Properties/Methods for CIM_DiskPartitionConfigurationService

| Properties | Flags | Requirement | Description & Notes |
|---------------------------|-------|-------------|---|
| CreationClassName | | Mandatory | |
| Name | | Mandatory | |
| SystemCreationClassName | | Mandatory | |
| SystemName | | Mandatory | |
| PartitioningSchemes | | Optional | Describes the partitioning schemes supported by the platform. |
| SetPartitionStyle() | | Mandatory | |
| CreateOrModifyPartition() | | Mandatory | |

4.6.7 CIM_ElementCapabilities

Created By: Static
 Modified By: Static

Deleted By: Static
 Requirement: Mandatory

Table 8 describes class CIM_ElementCapabilities.

Table 8 - SMI Referenced Properties/Methods for CIM_ElementCapabilities

| Properties | Flags | Requirement | Description & Notes |
|----------------|-------|-------------|--|
| ManagedElement | | Mandatory | Reference to the DiskPartitionConfigurationService. |
| Capabilities | | Mandatory | Reference to the DiskPartitionConfigurationCapabilities. |

4.6.8 CIM_ElementConformsToProfile (DiskPartitionConfigurationService to Disk Partition RegisteredProfile)

The CIM_ElementConformsToProfile ties DiskPartitionConfigurationService to the registered profile for Disk Partition.

Created By: Static
 Modified By: Static
 Deleted By: Static
 Requirement: Mandatory

Table 9 describes class CIM_ElementConformsToProfile (DiskPartitionConfigurationService to Disk Partition RegisteredProfile).

Table 9 - SMI Referenced Properties/Methods for CIM_ElementConformsToProfile (DiskPartitionConfigurationService to Disk Partition RegisteredProfile)

| Properties | Flags | Requirement | Description & Notes |
|--------------------|-------|-------------|--|
| ManagedElement | | Mandatory | A DiskPartitionConfigurationService instance that represents the Disk Partition. |
| ConformantStandard | | Mandatory | RegisteredProfile instance describing the Disk Partition profile. |

4.6.9 CIM_GPTDiskPartition

CIM_GPTDiskPartition (GPT) is subclassed from CIM_GenericDiskPartition.

Created By: Extrinsic: CreateOrModifyPartition
 Modified By: Static
 Deleted By: Static
 Requirement: Optional

Table 10 describes class CIM_GPTDiskPartition.

Table 10 - SMI Referenced Properties/Methods for CIM_GPTDiskPartition

| Properties | Flags | Requirement | Description & Notes |
|-------------------------|-------|-------------|---------------------|
| SystemCreationClassName | | Mandatory | |
| SystemName | | Mandatory | |
| CreationClassName | | Mandatory | |

Table 10 - SMI Referenced Properties/Methods for CIM_GPTDiskPartition

| Properties | Flags | Requirement | Description & Notes |
|----------------|-------|-------------|---------------------|
| DeviceID | | Mandatory | |
| Name | | Mandatory | |
| NumberOfBlocks | | Optional | |
| PartitionType | | Optional | |

4.6.10 CIM_GenericDiskPartition

GenericDiskPartition is used for subclassing the various partition styles, including MBR, GPT, and VTOC.

Created By: Extrinsic: CreateOrModifyPartition

Modified By: Static

Deleted By: Static

Requirement: Mandatory

Table 11 describes class CIM_GenericDiskPartition.

Table 11 - SMI Referenced Properties/Methods for CIM_GenericDiskPartition

| Properties | Flags | Requirement | Description & Notes |
|-------------------------|-------|-------------|---------------------|
| SystemCreationClassName | | Mandatory | |
| SystemName | | Mandatory | |
| CreationClassName | | Mandatory | |
| DeviceID | | Mandatory | |
| Name | | Mandatory | |
| NumberOfBlocks | | Optional | |

4.6.11 CIM_HostedService

Created By: Static

Modified By: Static

Deleted By: Static

Requirement: Mandatory

Table 12 describes class CIM_HostedService.

Table 12 - SMI Referenced Properties/Methods for CIM_HostedService

| Properties | Flags | Requirement | Description & Notes |
|------------|-------|-------------|---|
| Antecedent | | Mandatory | Reference to the ComputerSystem in Base Server. |
| Dependent | | Mandatory | Reference to the DiskPartitionConfigurationService. |

4.6.12 CIM_InstalledPartitionTable (Capabilities to Extent)

Created By: Static

Modified By: Static
 Deleted By: Static
 Requirement: Mandatory

Table 13 describes class CIM_InstalledPartitionTable (Capabilities to Extent).

Table 13 - SMI Referenced Properties/Methods for CIM_InstalledPartitionTable (Capabilities to Extent)

| Properties | Flags | Requirement | Description & Notes |
|------------|-------|-------------|---|
| Dependent | | Mandatory | Reference to a CIM_StorageExtent |
| Antecedent | | Mandatory | Reference to a CIM_DiskPartitionConfigurationCapabilities |

4.6.13 CIM_InstalledPartitionTable (Capabilities to Partition)

Created By: Static
 Modified By: Static
 Deleted By: Static
 Requirement: Mandatory

Table 14 describes class CIM_InstalledPartitionTable (Capabilities to Partition).

Table 14 - SMI Referenced Properties/Methods for CIM_InstalledPartitionTable (Capabilities to Partition)

| Properties | Flags | Requirement | Description & Notes |
|------------|-------|-------------|---|
| Dependent | | Mandatory | Reference to a CIM_GenericDiskPartition |
| Antecedent | | Mandatory | Reference to a CIM_DiskPartitionConfigurationCapabilities |

4.6.14 CIM_LogicalDisk

Created By: Extrinsic: CreateOrModifyPartition
 Modified By: Static
 Deleted By: Static
 Requirement: Optional

Table 15 describes class CIM_LogicalDisk.

Table 15 - SMI Referenced Properties/Methods for CIM_LogicalDisk

| Properties | Flags | Requirement | Description & Notes |
|-------------------------|-------|-------------|----------------------|
| SystemCreationClassName | | Mandatory | |
| SystemName | | Mandatory | |
| CreationClassName | | Mandatory | |
| DeviceID | | Mandatory | |
| Name | | Mandatory | |
| NameFormat | | Mandatory | OS Device Name. |
| NameNamespace | | Mandatory | OS Device Namespace. |

Table 15 - SMI Referenced Properties/Methods for CIM_LogicalDisk

| Properties | Flags | Requirement | Description & Notes |
|-------------------|-------|-------------|---------------------|
| OperationalStatus | | Mandatory | |
| NumberOfBlocks | | Optional | |

4.6.15 CIM_LogicalDiskBasedOnPartition (LogicalDisk to Partition)

Created By: Extrinsic: CreateOrModifyPartition

Modified By: Static

Deleted By: Static

Requirement: Required in CIM_LogicalDisk is instantiated.

Table 16 describes class CIM_LogicalDiskBasedOnPartition (LogicalDisk to Partition).

Table 16 - SMI Referenced Properties/Methods for CIM_LogicalDiskBasedOnPartition (LogicalDisk to Partition)

| Properties | Flags | Requirement | Description & Notes |
|-----------------|-------|-------------|---|
| StartingAddress | | Mandatory | Shall be 0. |
| EndingAddress | | Mandatory | Shall be one less than NumberOfBlocks from either the LogicalDisk or Partition. |
| Dependent | | Mandatory | Reference to CIM_LogicalDisk |
| Antecedent | | Mandatory | Reference to CIM_GenericDiskPartition |

4.6.16 CIM_StorageExtent

Created By: Static

Modified By: Static

Deleted By: Static

Requirement: Mandatory

Table 17 describes class CIM_StorageExtent.

Table 17 - SMI Referenced Properties/Methods for CIM_StorageExtent

| Properties | Flags | Requirement | Description & Notes |
|-------------------------|-------|-------------|---------------------|
| SystemCreationClassName | | Mandatory | |
| SystemName | | Mandatory | |
| CreationClassName | | Mandatory | |
| DeviceID | | Mandatory | |
| Name | | Mandatory | |
| OperationalStatus | | Mandatory | |
| NumberOfBlocks | | Optional | |

4.6.17 CIM_SystemDevice (System to Extent)

Created By: Static
Modified By: Static
Deleted By: Static
Requirement: Mandatory

Table 18 describes class CIM_SystemDevice (System to Extent).

Table 18 - SMI Referenced Properties/Methods for CIM_SystemDevice (System to Extent)

| Properties | Flags | Requirement | Description & Notes |
|----------------|-------|-------------|---|
| GroupComponent | | Mandatory | Reference to the ComputerSystem in Base Server. |
| PartComponent | | Mandatory | |

4.6.18 CIM_SystemDevice (System to LogicalDisk)

Created By: Static
Modified By: Static
Deleted By: Static
Requirement: Required in CIM_LogicalDisk is instantiated.

Table 19 describes class CIM_SystemDevice (System to LogicalDisk).

Table 19 - SMI Referenced Properties/Methods for CIM_SystemDevice (System to LogicalDisk)

| Properties | Flags | Requirement | Description & Notes |
|----------------|-------|-------------|---|
| GroupComponent | | Mandatory | Reference to the ComputerSystem in Base Server. |
| PartComponent | | Mandatory | Reference to CIM_LogicalDisk |

4.6.19 CIM_SystemDevice (System to Partition)

Created By: Static
Modified By: Static
Deleted By: Static
Requirement: Mandatory

Table 20 describes class CIM_SystemDevice (System to Partition).

Table 20 - SMI Referenced Properties/Methods for CIM_SystemDevice (System to Partition)

| Properties | Flags | Requirement | Description & Notes |
|----------------|-------|-------------|---|
| GroupComponent | | Mandatory | Reference to the ComputerSystem in Base Server. |
| PartComponent | | Mandatory | |

4.6.20 CIM_VTOCDiskPartition

CIM_VTOCDiskPartition (VTOC) is subclassed from CIM_GenericDiskPartition.
Created By: Extrinsic: CreateOrModifyPartition

Modified By: Static
Deleted By: Static
Requirement: Optional

Table 21 describes class CIM_VTOCDiskPartition.

Table 21 - SMI Referenced Properties/Methods for CIM_VTOCDiskPartition

| Properties | Flags | Requirement | Description & Notes |
|-------------------------|-------|-------------|---------------------|
| SystemCreationClassName | | Mandatory | |
| SystemName | | Mandatory | |
| CreationClassName | | Mandatory | |
| DeviceID | | Mandatory | |
| Name | | Mandatory | |
| NumberOfBlocks | | Optional | |
| AsciiLabel | | Optional | |
| Flags | | Optional | |
| Tag | | Optional | |

EXPERIMENTAL

DEPRECATED

5 FC HBA Profile

The functionality of the FC HBA profile has been subsumed by 6 Storage HBA Profile.

See the latest version of this profile in SMI-S Version 1.6.1 Revision 5

DEPRECATED

EXPERIMENTAL

6 Storage HBA Profile

6.1 Synopsis

Profile Name: Storage HBA (Component Profile)

Version: 1.6.1

Organization: SNIA

Central Class: PortController

Scoping Class: ComputerSystem

Related Profiles: Table 22 describes the related profiles for Storage HBA.

Table 22 - Related Profiles for Storage HBA

| Profile Name | Organization | Version | Requirement | Description |
|------------------------|--------------|---------|--|---|
| Software Inventory | SNIA | 1.0.0 | Mandatory | |
| Software Update | DMTF | 1.0.0 | Optional | |
| Physical Asset | DMTF | 1.0.2 | Optional | |
| FC HBA Diagnostics | DMTF | 1.1.0a | Optional | See DSP1104, version 1.1.0a |
| Diagnostic Job Control | DMTF | 1.0.0b | Conditional | Conditional requirement: Required if the FC HBA Diagnostics profile is supported. See DSP1119, version 1.1.0b |
| Indications | DMTF | 1.2.2 | Mandatory | See DSP1054, version 1.2.2 |
| SAS Initiator Ports | SNIA | 1.7.0 | Support for at least one is mandatory. | Conditional requirement: Required if the FC HBA Diagnostics profile is supported. |
| FC Initiator Ports | SNIA | 1.7.0 | | Conditional requirement: Required if the FC HBA Diagnostics profile is supported. |
| FCoE Initiator Ports | SNIA | 1.7.0 | | Conditional requirement: Required if the FC HBA Diagnostics profile is supported. |

6.2 Description

The Storage HBA Profile represents the manageable elements of an HBA and optionally, the storage connected to it. An HBA can be connected to disks contained within a server's internal drive cage or an external drive enclosure or array. The profile does not include enclosure management of storage devices connected to the HBA. Storage device enclosure management is performed via the Storage Enclosure Profile.

This profile further describes how the classes are to be used to satisfy various use cases and offers suggestions to agent implementers and client application developers. Only the classes unique to a HBA are described by this profile. Other classes that are common to other profiles, reference to by the Storage HBA Profile, may be found in their respective section within this standard, DMTF specifications, or the DMTF CIM schema specification.

6.3 Implementation

6.3.1 Health and Fault Management Consideration

Not defined in this document

6.3.2 Cascading Considerations

Not defined in this document

6.3.3 Storage HBA Model Overview

The PortController class is the central class of the Storage HBA Profile. It represents an instance of an HBA. The PortController shall be associated to one or more instances of LogicalPort (defined in initiator port profiles) using the ControlledBy association. The PortController shall be associated to the ComputerSystem (from a referencing profile) using the SystemDevice association. The PortController shall also be associated to Product using the ProductElementComponent association; properties of Product provide information about the HBAs manufacturer and model.

6.3.3.1 PhysicalPackage Requirements

When the instrumentation is representing a physical HBA (as opposed to virtual HBA in a guest virtual machine), PortController shall be associated to PhysicalPackage (or a subclass such as Card), as shown in Figure 13. Physical Package shall be associated to PortController via Realizes and Product via ProductPhysicalComponent. If the instrumentation is running in a guest virtual machine and representing a virtual HBA, PhysicalPackage, Realizes, and ProductPhysicalComponent shall not be instantiated. See 6.3.12 for additional virtual system considerations.

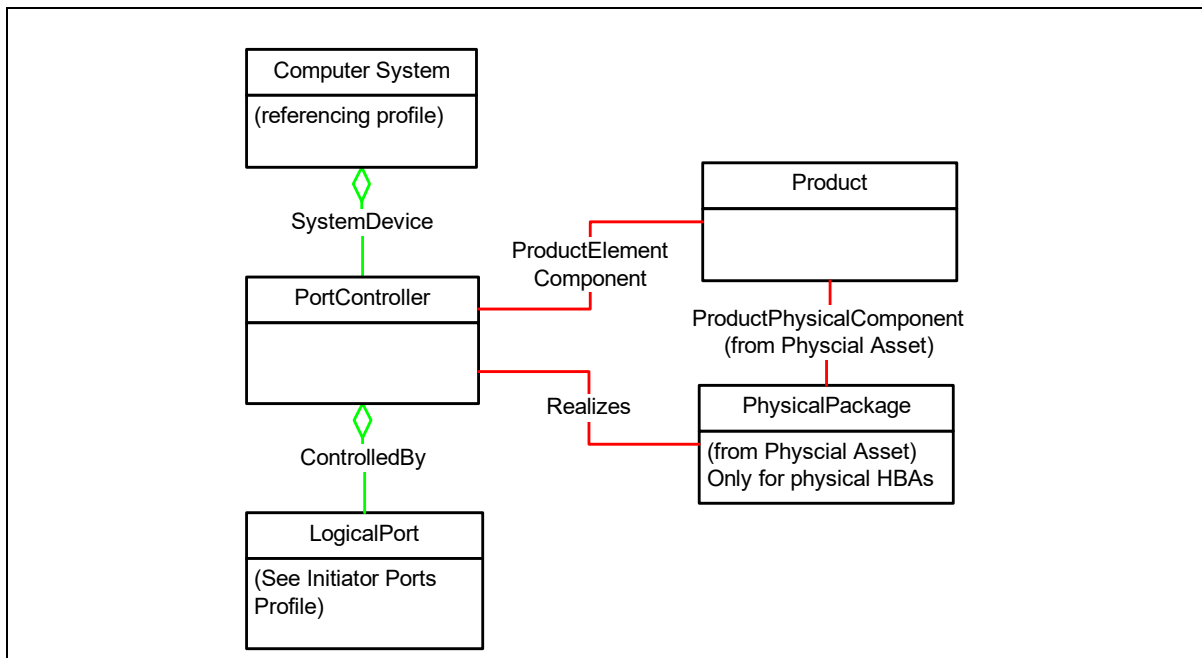


Figure 13 - Model Overview

6.3.4 CIM_ComputerSystem

In Storage HBA, the ComputerSystem Class in the diagrams represents the host containing the HBA and is not defined as part of this profile. Typically, this ComputerSystem will be defined as part of a shim profile or the Base Server Profile. Many of the other classes in the Storage HBA Profile are associated to the instance of ComputerSystem that represents the Host. This includes drives, logical ports, and physical cards.

6.3.5 Profile Registration Profile

For the Storage HBA Profile, the scoping class methodology of profile registration shall be used, as required by the Server Profile. The scoping class is the ComputerSystem in the referencing profile.

However, an implementation may use the central class methodology of profile registration from the Server Profile. The central class of the Storage HBA Profile is the instance of CIM_PortController. The instance of RegisteredProfile in the Interop namespace shall have an association to the instance of CIM_PortController in the implementation namespace, as shown in Figure 14.

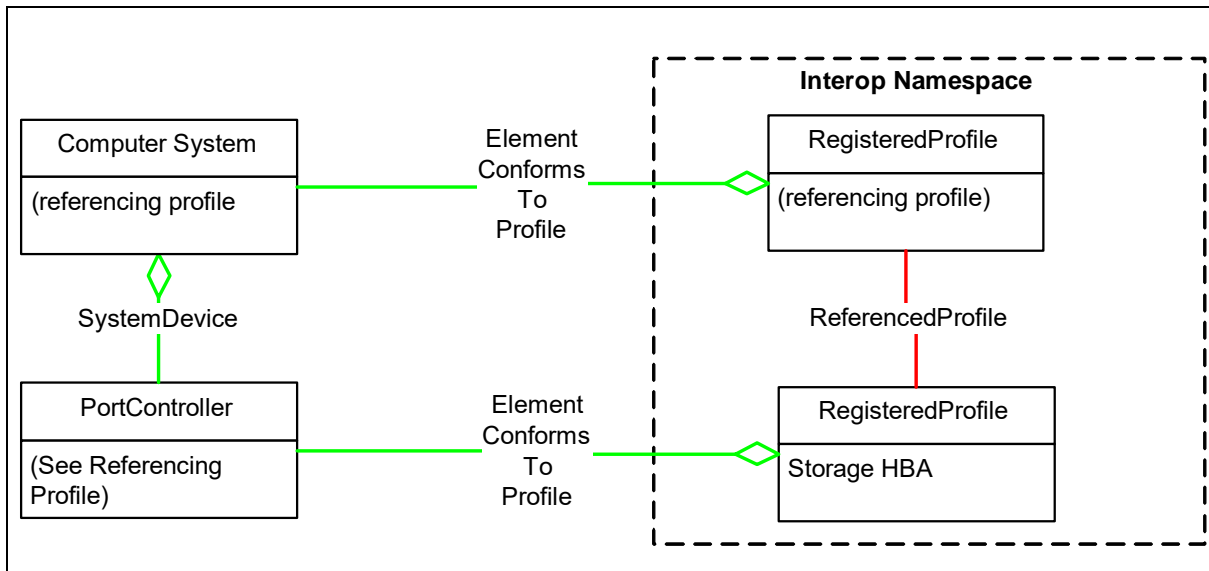


Figure 14 - Profile Registration Profile

6.3.6 Generic Initiator Ports Profile

6.3.6.1 Overview

The Storage HBA Profile utilizes specializations of the Generic Initiator Ports Profile to model the back-end ports of the HBA that are connected to the storage managed by the HBA.

6.3.6.2 CIM_LogicalPort

CIM_LogicalPort is defined in initiator port profiles and represents the logical transport port on the back-end of the HBA that is connected to the storage. This storage could be a drive cage housed inside the host or a storage device enclosure, like a JBOD. The LogicalPort class is intended to model the transport for storage commands in an abstract and agnostic manner. For example, the LogicalPort could represent a Parallel SCSI, SAS, SATA, PATA, or FC port depending on the controller implementation. Thus, the instance of this class shall be sub-classed to SPIPort, SASPort, FCPort or ATAPort depending on the subclass that best represents the transport type the HBA supports for the backend port. The implementation shall not instantiate LogicalPort.

6.3.6.3 CIM_ProtocolEndpoint

The ProtocolEndpoint class represents both ends of the logical data path between the HBA and storage where the storage protocol is transmitted. ProtocolEndpoints for the interface to disks are part of initiator ports profiles.

Like LogicalPort, the ProtocolEndpoint class is intended to model the management of storage protocol in an abstract manner. For example, the ProtocolEndpoint could represent a SCSI, ATA or SB protocol. Thus, the instance of the ProtocolEndpoint shall be subclassed to SCSIProtocolEndpoint, ATAProtocolEndpoint or SBProtocolEndpoint.

6.3.7 Software Inventory Profile

6.3.7.1 Overview

For the Storage HBA Profile, the SoftwareIdentity class from the Software Inventory Profile (DMTF) is required to model various software and firmware entities related to an HBA. Each SoftwareIdentity instance shall be associated via InstalledSoftwareIdentity to the referencing ComputerSystem and via ElementSoftwareIdentity to the PortController.

6.3.7.2 Physical HBA Considerations

The implementation shall use the Software Inventory Profile to model the firmware for the HBA. The SoftwareIdentity instance representing the driver software shall include 10 (Firmware) in the Classifications property. In the context of this profile, "Firmware" refers to firmware installed in and running on the HBA itself.

If the HBA has a separate entity for the BIOS or FCode from the firmware, the implementation may use the Software Inventory Profile to represent the BIOS/FCode. The SoftwareIdentity instance representing the driver software shall include 11 (BIOS/FCode) in the Classifications property. In the context of this profile, "BIOS/FCode" refers to BIOS/FCode extensions installed in and running on the HBA itself. Typically, these extensions are related to boot support.

The implementation shall use the Software Inventory Profile to model the driver software that interfaces with the HBA. As used here, the term "Driver" applies to software (or firmware) installed in the system OS that enables OS support for the HBA.

- If the HBA is installed in a system (a hypervisor or a general-purpose system) following a typical open-system architecture, drivers are components the OS running on the server and provide support for various devices. The Driver SoftwareIdentity in this profile models the driver(s) which enable support for the HBA.
- If the HBA is installed in a general purpose system that does not have something called drivers (for example, some mainframe OSes), then the Driver SoftwareIdentity in this profile models the OS components which enable support for the HBA.
- If the HBA is installed in a hypervisor and the hypervisor implementation is considered firmware rather than an OS, then the Driver SoftwareIdentity represents the subset of that firmware which enables support for the HBA.

In some cases, the driver is an embedded component of the OS (or RTOS or firmware) and is not independently versioned. In this case, the implementation shall populate SoftwareIdentity version information with the version information from the OS.

The use-case for requiring driver version numbers is that there may be dependencies between version numbers of the driver component of the hypervisor and the driver component running in the guest VM. Requiring each allows a client application to track these versions and report inconsistencies.

6.3.7.3 Virtual HBA Considerations

The implementation shall use the Software Inventory Profile, shown in Figure 15, to model the driver software that interfaces with the HBA. As used here, the term “Driver” applies to software installed in the virtual system OS, enabling the OS to interface to the virtual HBAs.

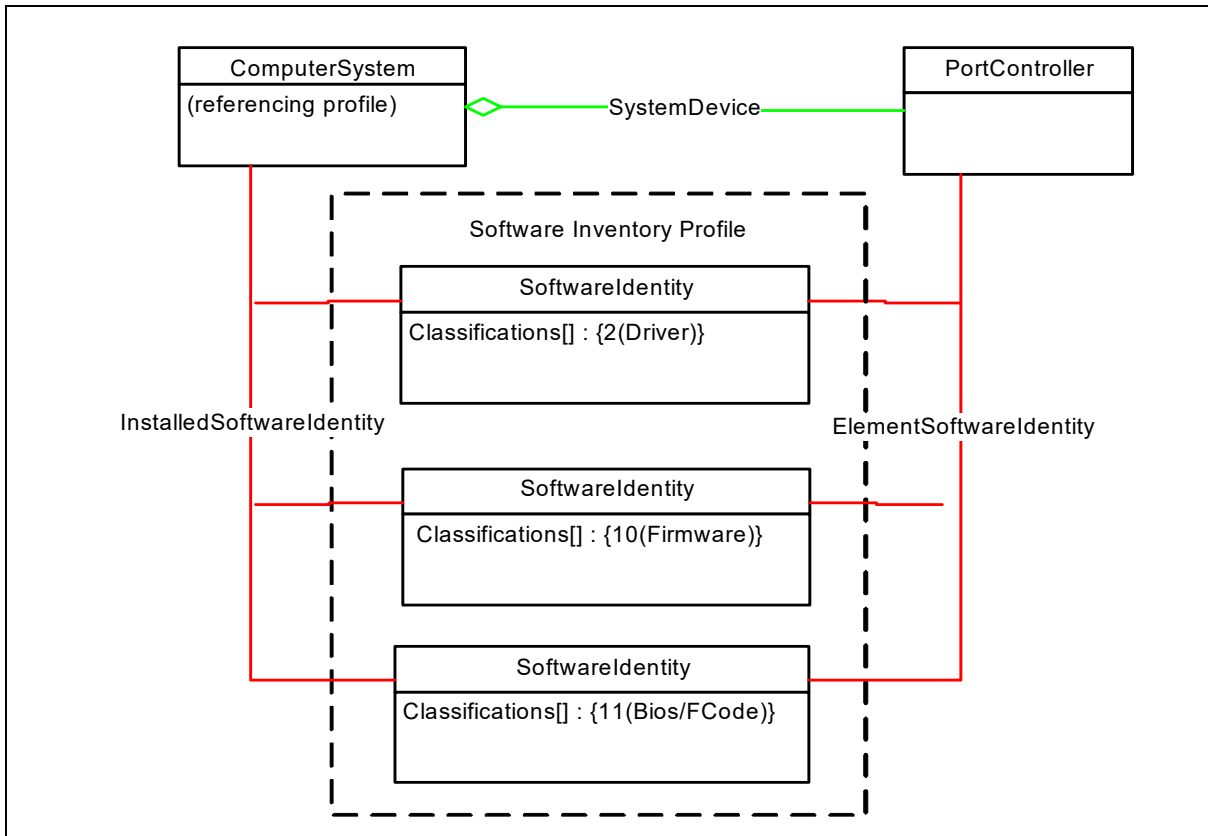


Figure 15 - Software Inventory Profile in Storage HBA

6.3.8 Software Update Profile

The implementation may optionally use the DMTF Software Update Profile to provide an interface for updating HBA software or firmware.

6.3.9 HBA Hot Swap Events

The implementation may optionally support asynchronous notification of HBA inserts and removals using the InstCreation and InstDeletion indications (see Table 25, “CIM Elements for Storage HBA,”).

6.3.10 Physical Asset Profile

The physical representation of the controller is optional. The Physical Asset Profile defines the set of classes and subclasses for describing the physical assets of a managed component. Most HBAs can be described as a physical card or chip on a motherboard. Therefore, at a minimum, the implementation shall include an instance of a subclass of PhysicalComponent or PhysicalPackage. For example, the CIM_Card class is a subclass of CIM_PhysicalPackage. The implementation may choose CIM_Card to represent a physical RAID controller card. In this case, the instance of CIM_Card is associated to the top-level controller CIM_PortController via the CIM_Realizes association.

Other physical classes such as Slots are optional, provided the sub-elements are consistent with the Physical Asset Profile. Figure 16 illustrates an HBA Card with Physical Classes.

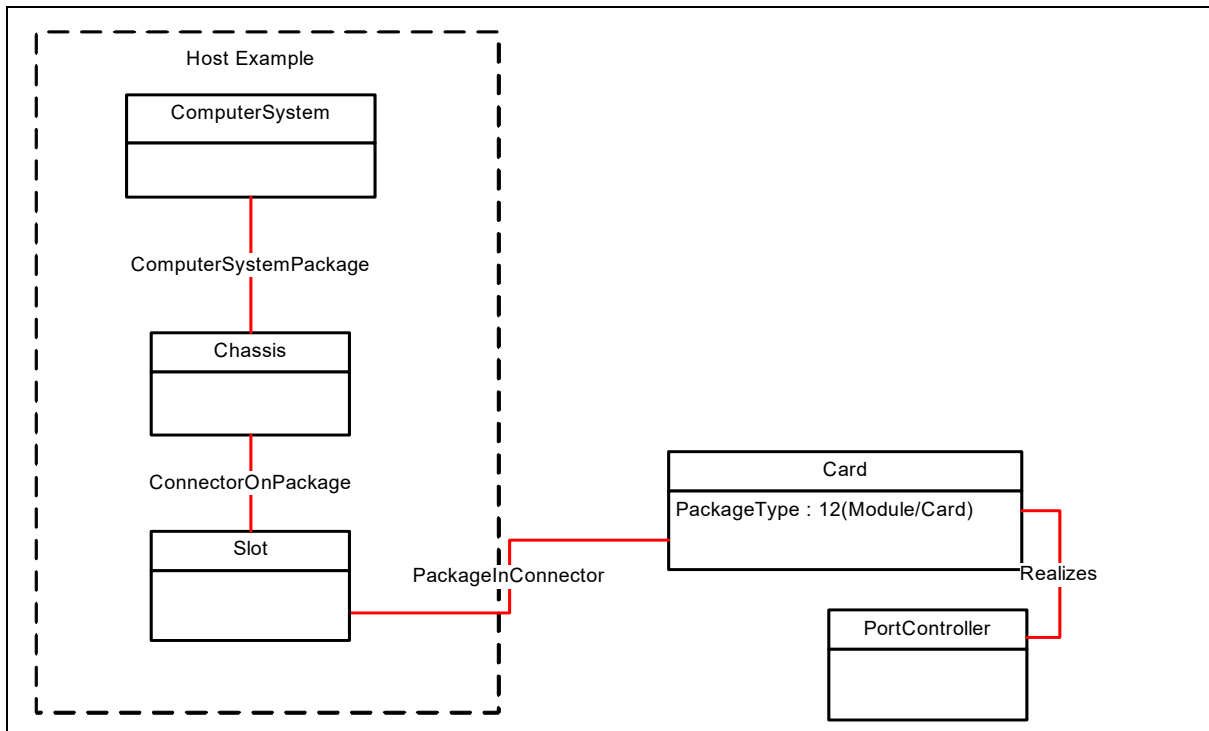


Figure 16 - HBA Card with Physical Classes

6.3.11 Modeling Attached Disk, Tape, and Optical Drives

Attached devices may be modeled using the optional remote elements model in 13.3.2 Remote Device Models.

6.3.12 Virtual System Considerations

In the “usual” configuration without any system virtualization, the instrumentation is directly working with physical HBAs which are not shared with guest virtual machines (VMs). In this case, PhysicalPackage (or a subclass) is mandatory as described in 6.3.3.1.

In a virtual system configuration, the requirements differ for the hypervisor and guest VMs.

- In a hypervisor context, PhysicalPackage (or a subclass) is mandatory as described in 6.3.3.1
- In a guest VM, PhysicalPackage shall not be instantiated.

A future version of this profile will reference emerging profiles that define how virtual HBAs are allocated and mapped to physical HBAs.

6.3.13 Fibre Channel HBAs

6.3.13.1 General FC HBA Considerations

The FC Initiator Ports Profile specialization of Generic Initiator Ports Profile is mandatory.

6.3.13.2 Physical FC HBA Considerations

In this version of the standard, implementers should use the FC HBA Profile to model physical FC HBAs, except for those used in a hypervisor context. Physical FC HBAs in a hypervisor should be modeled using this profile.

EXPERIMENTAL

6.3.14 FC HBA Diagnostics Profile

The FC HBA Diagnostics Profile is a DMTF profile that supports diagnostic tests on fibre channel HBAs. Support for the profile would only occur if the Storage HBA supports fibre channel ports and is optional in any case. The diagnostic tests supported include an Echo and Ping test for testing access to storage devices, as well as tests on the HBA itself.

When the FC HBA Diagnostics Profile is supported, there will be an instance of CIM_FCHBADiagnosticTest associated (via CIM_HostedService) to the Base Server system. That diagnostic test instance will have a CIM_AvailableDiagnosticService association to the Storage HBA PortController.

EXPERIMENTAL

6.4 Methods of the Profile

6.4.1 Overview

This section details the requirements for supporting intrinsic operations and extrinsic methods for the CIM elements defined by this profile.

6.4.2 Profile Conventions for Operations

Table 23 lists operations and requirements for CIM_PortController.

Table 23 - CIM_PortController

| Operation | Requirement | Message |
|------------------------|-------------|---------|
| GetInstance | Mandatory | None |
| ModifyInstance | Unspecified | None |
| Associators | Unspecified | None |
| AssociatorNames | Unspecified | None |
| References | Unspecified | None |
| ReferenceNames | Unspecified | None |
| EnumerateInstances | Unspecified | None |
| EnumerateInstanceNames | Unspecified | None |

Table 24 lists operations and requirements for CIM_SystemDevice.

Table 24 - CIM_SystemDevice

| Operation | Requirement | Message |
|------------------------|-------------|---------|
| GetInstance | Mandatory | None |
| ModifyInstance | Unspecified | None |
| Associators | Unspecified | None |
| AssociatorNames | Unspecified | None |
| References | Unspecified | None |
| ReferenceNames | Unspecified | None |
| EnumerateInstances | Unspecified | None |
| EnumerateInstanceNames | Unspecified | None |

6.5 Use Cases

Not defined in this document

6.6 CIM Elements

6.6.1 Overview

Table 25 describes the CIM elements for Storage HBA.

Table 25 - CIM Elements for Storage HBA

| Element Name | Requirement | Description |
|---|-------------|---|
| 6.6.2 CIM_ControlledBy | Mandatory | Associates PortController and LogicalPort. |
| 6.6.3 CIM_PortController | Mandatory | Represents the logical aspects of the HBA. Associated to RegisteredProfile. |
| 6.6.4 CIM_Product | Mandatory | |
| 6.6.5 CIM_ProductElementComponent | Mandatory | |
| 6.6.6 CIM_Realizes | Optional | |
| 6.6.7 CIM_SystemDevice | Mandatory | Associates System to PortController. |
| SELECT * FROM CIM_InstCreation WHERE SourceInstance ISA CIM_PortController | Optional | PortController (HBA) Creation. See6.3.9 HBA Hot Swap Events. |
| SELECT * FROM CIM_InstDeletion WHERE SourceInstance ISA CIM_PortController | Optional | PortController (HBA) Removal. See6.3.9 HBA Hot Swap Events. |
| SELECT * FROM CIM_AlertIndication WHERE OwningEntity='SNIA' and MessageID='Host1' | Optional | Controller firmware is older than required. |
| SELECT * FROM CIM_AlertIndication WHERE OwningEntity='SNIA' and MessageID='Host2' | Optional | Controller firmware is older than recommended. |
| SELECT * FROM CIM_AlertIndication WHERE OwningEntity='SNIA' and MessageID='Host3' | Optional | Controller is okay. |
| SELECT * FROM CIM_AlertIndication WHERE OwningEntity='SNIA' and MessageID='Host4' | Optional | Controller is not okay. |

Table 25 - CIM Elements for Storage HBA

| Element Name | Requirement | Description |
|--|-------------|-------------------------|
| SELECT * FROM CIM_AlertIndication WHERE OwningEntity='SNIA' and MessageID='Host5' | Optional | Bus rescan complete. |
| SELECT * FROM CIM_AlertIndication WHERE OwningEntity='SNIA' and MessageID='Host6' | Optional | Disk initialize failed. |
| SELECT * FROM CIM_AlertIndication WHERE OwningEntity='SNIA' and MessageID='Core11' | Optional | Drive not responding. |

6.6.2 CIM_ControlledBy

Associates PortController and LogicalPort.

Created By: Static

Modified By: Static

Deleted By: Static

Requirement: Mandatory

Table 26 describes class CIM_ControlledBy.

Table 26 - SMI Referenced Properties/Methods for CIM_ControlledBy

| Properties | Flags | Requirement | Description & Notes |
|--------------|-------|-------------|--|
| DeviceNumber | | Optional | The number of the port, relative to the PortController. This is sometimes referred to as the bus number. |
| Dependent | | Mandatory | Reference to LogicalPort. |
| Antecedent | | Mandatory | Reference to PortController. |

6.6.3 CIM_PortController

Represents the logical aspects of the HBA.

Created By: Static

Modified By: Static

Deleted By: Static

Requirement: Mandatory

Shall be associated to RegisteredProfile using ElementConformsToProfile association. The RegisteredProfile instance shall have RegisteredName set to 'Storage HBA', RegisteredOrganization set to 'SNIA', and RegisteredVersion set to '1.6.1'.

Table 27 describes class CIM_PortController.

Table 27 - SMI Referenced Properties/Methods for CIM_PortController

| Properties | Flags | Requirement | Description & Notes |
|-------------------------|-------|-------------|---------------------|
| SystemCreationClassName | | Mandatory | |
| SystemName | | Mandatory | |

Table 27 - SMI Referenced Properties/Methods for CIM_PortController

| Properties | Flags | Requirement | Description & Notes |
|-------------------|-------|-------------|---------------------|
| CreationClassName | | Mandatory | |
| DeviceID | | Mandatory | |

6.6.4 CIM_Product

Requirement: Mandatory

Table 28 describes class CIM_Product.

Table 28 - SMI Referenced Properties/Methods for CIM_Product

| Properties | Flags | Requirement | Description & Notes |
|-------------------|-------|-------------|---------------------|
| ElementName | | Mandatory | |
| Name | | Mandatory | |
| IdentifyingNumber | | Mandatory | |
| Vendor | | Mandatory | |
| Version | | Mandatory | |

6.6.5 CIM_ProductElementComponent

Requirement: Mandatory

Table 29 describes class CIM_ProductElementComponent.

Table 29 - SMI Referenced Properties/Methods for CIM_ProductElementComponent

| Properties | Flags | Requirement | Description & Notes |
|----------------|-------|-------------|-----------------------------------|
| GroupComponent | | Mandatory | Reference to a CIM_Product |
| PartComponent | | Mandatory | Reference to a CIM_PortController |

6.6.6 CIM_Realizes

Created By: Static

Modified By: Static

Deleted By: Static

Requirement: Optional

Table 30 describes class CIM_Realizes.

Table 30 - SMI Referenced Properties/Methods for CIM_Realizes

| Properties | Flags | Requirement | Description & Notes |
|------------|-------|-------------|------------------------------------|
| Dependent | | Mandatory | Reference to a CIM_PortController |
| Antecedent | | Mandatory | Reference to a CIM_PhysicalPackage |

6.6.7 CIM_SystemDevice

Associates System to PortController.

Created By: Static

Modified By: Static

Deleted By: Static

Requirement: Mandatory

Table 31 describes class CIM_SystemDevice.

Table 31 - SMI Referenced Properties/Methods for CIM_SystemDevice

| Properties | Flags | Requirement | Description & Notes |
|----------------|-------|-------------|-----------------------------------|
| GroupComponent | | Mandatory | Reference to a CIM_ComputerSystem |
| PartComponent | | Mandatory | Reference to a CIM_PortController |

EXPERIMENTAL

Physical FC HBA Considerations

EXPERIMENTAL

7 Host Discovered Resources Profile

7.1 Description

7.1.1 Synopsis

Profile Name: Host Discovered Resources (Component Profile)

Version: 1.7.0

Organization: SNIA

Central Class: LogicalDevice

Scoping Class: Base Server ComputerSystem

Related Profiles: Table 32 describes the related profiles for HostDiscoveredResources.

Table 32 - Related Profiles for HostDiscoveredResources

| Profile Name | Organization | Version | Requirement | Description |
|---------------------------|--------------|---------|-------------|----------------------------|
| SCSI Multipath Management | SNIA | 1.6.0 | Optional | |
| SB Multipath Management | SNIA | 1.0.0 | Optional | Deprecated |
| Disk Partition | SNIA | 1.6.0 | Optional | |
| Launch In Context | DMTF | 1.0.0 | Optional | |
| Indications | DMTF | 1.2.2 | Mandatory | See DSP1054, version 1.2.2 |

7.1.2 Overview

The Host Discovered Resources Profile allows a client application to discover the storage hardware resources attached to a host system, the logical storage resources available through the OS, and the relationship between these hardware and logical resources. The hardware resources include host adapters and storage devices. The logical resources include the OS special files that represent storage devices. In some cases, there is a one-to-one relationship between the logical and physical device. But multipath and disk partitioning introduce resource fan-in and fan-out that are also modeled in this profile.

Figure 17: "Host Discovered Resources Block Diagram" depicts the relationship between the Host Discovered Resources Profile and these other profiles. The areas with the shaded background are covered by the Host Discovered Resources Profile – including partitioned and multipath storage.

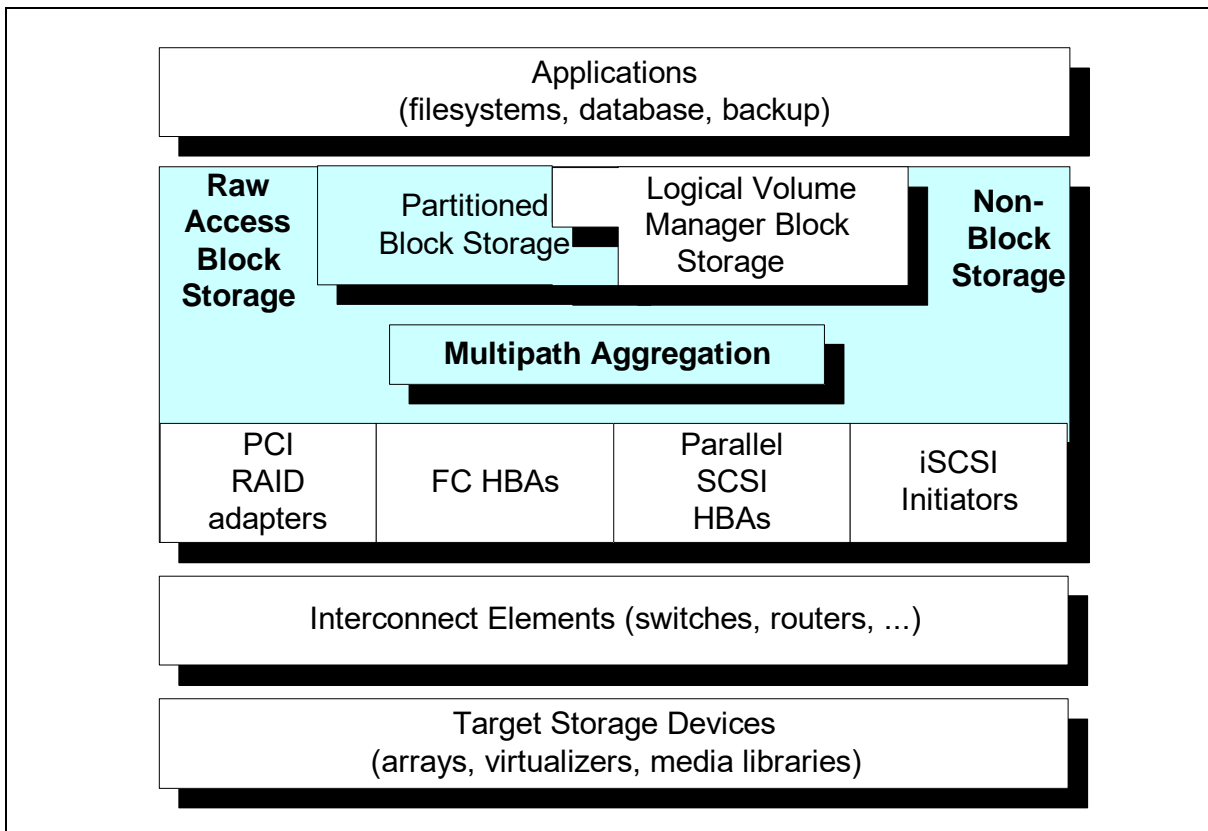


Figure 17 - Host Discovered Resources Block Diagram

Applications and Logical Volume Manager are consumers of Host Discovered Resources. The diagram depicts how an application can use Logical Volume Manager resources or use Host Discovered Resources directly. For example, a server may have some filesystems using LVM volumes and some filesystems using OS volumes.

The blocks at the bottom of the diagram represent resources (HBAs and target devices) for which the Host Discovered Resources Profile provides a host view. Note that interconnect elements between the HBAs and target devices are not part of the Host Discovered Resources Profile.

The Host Discovered Resources Profile provides a minimal amount of information about the discovered hardware resources; this includes the connectivity and correlatable IDs. The Host Discovered Resources Profile does not act as the canonical profile for any particular hardware resource; even host-resident elements like FC HBAs, iSCSI initiators, and Logical Volume Managers have separate profiles. The correlatable IDs exposed by The Host Discovered Resources Profile allow an application to associate host-discovered resources with resources from these other profiles.

For example, an array profile can describe the redundancy characteristics and performance statistics of a RAID volume. But the array profile will use a SCSI logical unit identifier as the volume's name. By combining information from the array and host-discovered resources profiles, a client can display the host special file name(s) associated with that volume. This additional name information can help the administrator (or client software) determine which applications are associated with volumes.

All references to ComputerSystem in the Host Discovered Resources Profile implies a single instance for a customer server or storage system as defined in the Base Server Profile. See Annex A: (Informative) Host Profile Deployment Guidelines, 1.6.0 Rev 3 for information on the use of host profiles with Base Server profile.

7.1.3 Host Disk Extent Class Name Conventions

The Host Discovered Resources Profile uses several different CIM classes to represent disk extents. **LogicalDisk** models an extent exposed by the OS to applications such as filesystems, databases, or logical volume managers. **GenericDiskPartition** represents a partition or slice of a disk as supported directly by the OS. **StorageVolume** represents disks or virtual volumes exported from disk arrays and virtualizers in the array or virtualizer profiles. **StorageExtent** represents disk extents that do fit these other classes; these will be intermediate extents that are neither consumed volumes nor exported logical disks.

Note that Logical Volume Managers are described in a separate profile. Logical Volume Managers may also expose partitions, but these are independent of partitions integrated into some OSes. The Host Discovered Resources Profile just addresses OS partitions.

To make it easier for clients of this profile, all consumable storage exported by this profile are modeled as instances of LogicalDisk.

The functionality of host resources discovery is broken into three areas:

- Disk partition discovery and management - see 4 Disk Partition Profile.
- Multipath Management - see 10 SCSI Multipath Management Profile.
- Discovery of Hardware Resources - see 7.1.4.

7.1.4 Discovered Hardware Resources

This profile presents a view of discovered resources with a common model based on the various command sets used in I/O devices - SCSI, ATA, or SB. Ports are modeled as instances of SCSIProtocolEndpoint, ATAProtocolEndpoint, or SBProtocolEndpoint - representing the use of the command set(s) used with the port.

The Host Discovered Resource Profile could be implemented using standard APIs (such as an HBA, SCSI, or iSCSI API) to create a generic model of the host-storage controllers and storage attached to those controllers. The model includes elements also exposed by HBA and storage agents; the details are included in these other profiles. A client uses correlatable IDs to equate objects from different agents.

The correlatable IDs for logical units (LogicalDisk, StorageExtent, TapeDrive) are the identifiers assigned by the hosting operating system (see *Storage Management Technical Specification, Part 2 Common Architecture, 1.8.0 Rev 4, 7 Correlatable and Durable Names, 7.6.6 "Operating System Device Names"* for the name requirements for OS names of disk logical units). An implementation of this profile shall also provide the correlatable names associated with the underlying devices. The requirements specified in *Storage Management Technical Specification, Part 2 Common Architecture, 1.8.0 Rev 4, 7 Correlatable and Durable Names, 7.6.2 "Standard Formats for Logical Unit Names"* applies, but instead of using the Name and NameNamespace properties, the information is contained in the OtherIdentifyingInfo and IdentifyingDescriptions array properties. The valid strings for IdentifyingDescriptions are exactly those described for NameNamespace in *Storage Management Technical Specification, Part 2 Common Architecture, 1.8.0 Rev 4, 7 Correlatable and Durable Names, 7.6.2 "Standard Formats for Logical Unit Names"*.

This profile is restricted to discovery of I/O devices and does not include remote filesystems. The SCSI, ATA, and SB models are discussed separately.

Model for SCSI Protocol Resources

The SCSI protocol is used in several transports - Fibre Channel, iSCSI, Parallel SCSI (SPI), and Serial Attached SCSI (SAS). SCSI Protocol includes initiator and target ports, and logical units (RAID volumes, tape drives) in a many-to-many-to-many relationship - in other words, an initiator port may connect to many target ports (and vice versa), and each target device many have many logical units connected to initiator and target ports.

Figure 18: "Host Discovered Resources Class Diagram" is a class diagram for Host Discovered Resources. SCSIProtocolEndpoint represents the SCSI logical port, either initiator or target. The transports type (e.g., FC, iSCSI) is specified in SCSIProtocolEndpoint ConnectionType property.

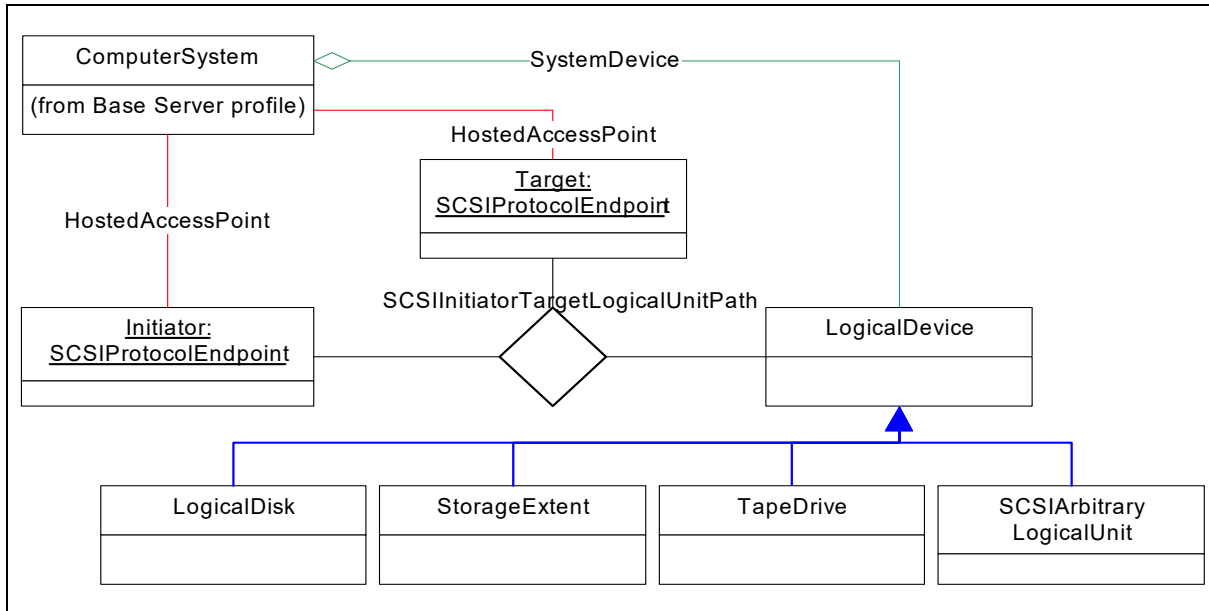


Figure 18 - Host Discovered Resources Class Diagram

The initiator ProtocolEndpoint and each target ProtocolEndpoint and LogicalDevice are associated by SCSIInitiatorTargetLogicalUnitPath.

Consider a few concrete cases. Figure 19: "Single SPI Disk Model" depicts the model for a single parallel SCSI disk. In general, Host APIs cannot differentiate a "real" disk from a virtual disk as exposed by a RAID controller, so the StorageExtent subclass of LogicalDevice is used.

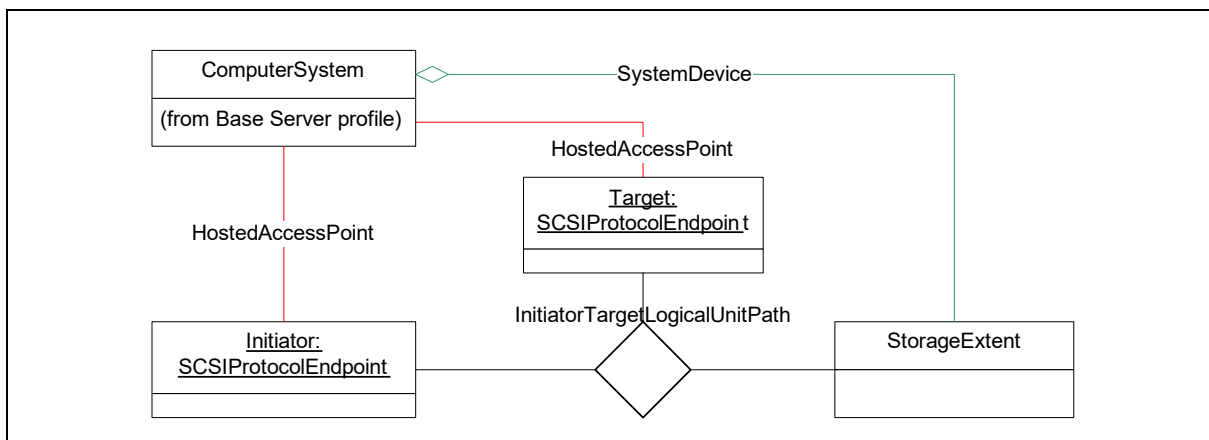


Figure 19 - Single SPI Disk Model

Figure 20: "Three FCP Logical Unit Instance Diagram" depicts a Fibre Channel RAID controller exposing three virtual disks to a single host/initiator port. There is a single initiator and target that share access to three StorageExtent instances.

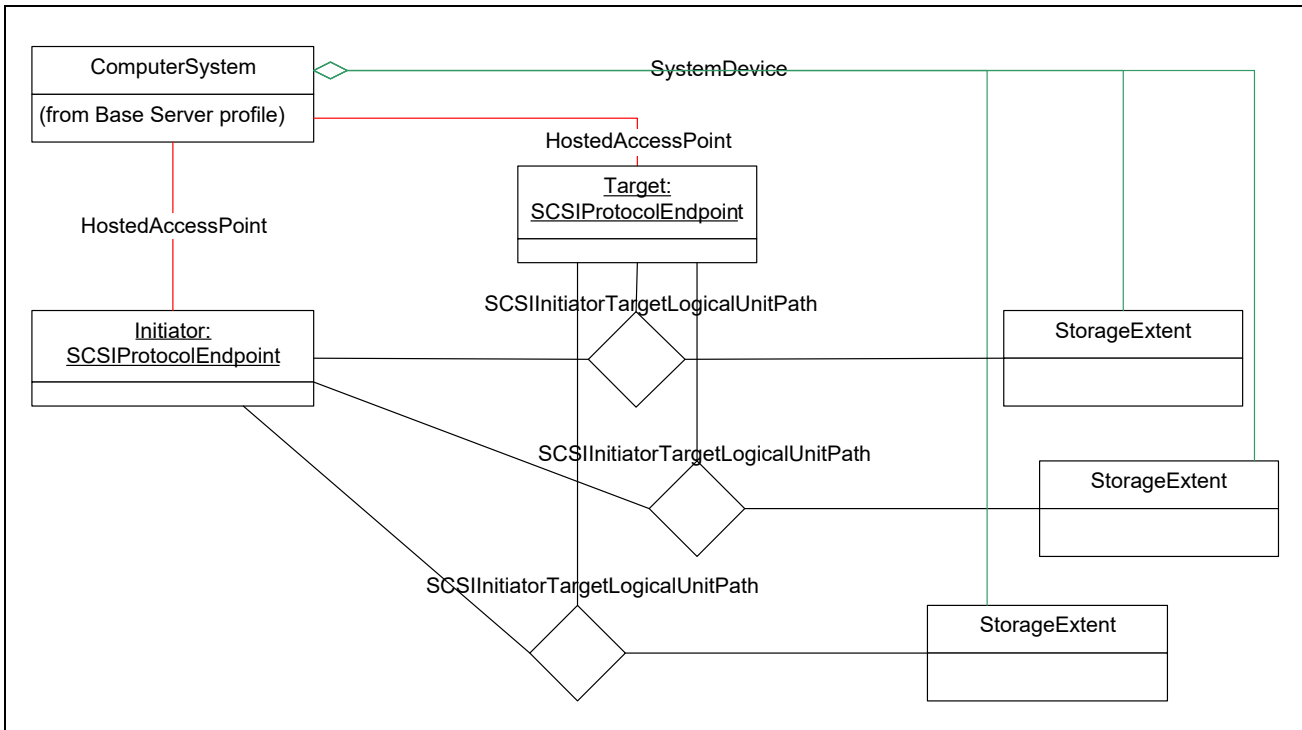


Figure 20 - Three FCP Logical Unit Instance Diagram

The Multipath Profile describes more complicated multipath configurations. See Figure 40: "Four Path Instance Diagram".

Model for ATA Protocol Resources

The model for ATA, shown in Figure 21, uses a ConnectivityCollection of ATAProtocolEndpoints.

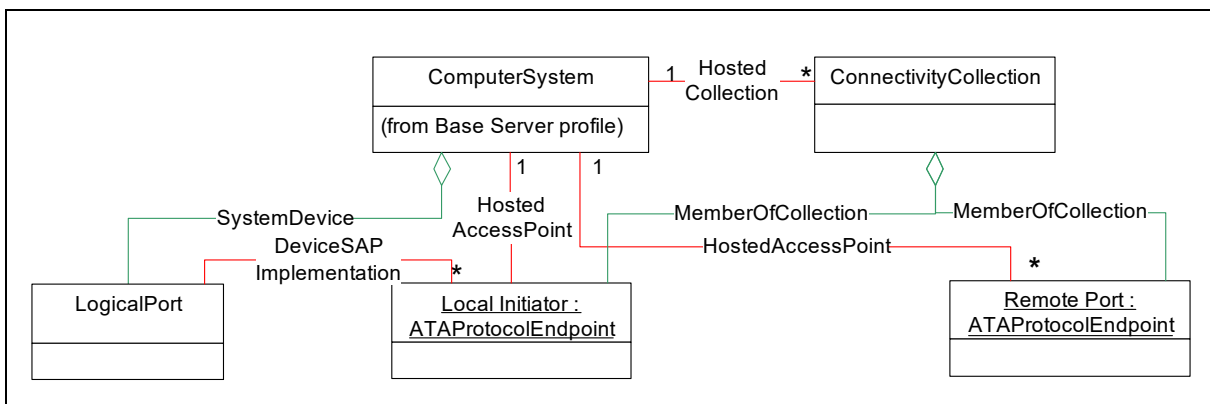


Figure 21 - ATA Discovered Resource Model

Model for SB Protocol Resources

The SB protocol is used in the Fibre Channel FC-SB-x transport. SB protocol includes initiator ("channel image") and target ports, and a logical units (ECKD volumes, tape drives) in a many-to-many-to-many relationship - in other words, an initiator port may connect to many target ports (and vice versa), and each

target device may have many logical units connected to initiator and target ports. Figure 22: "SB Host Discovered Resources" provides a general controller/device SB model. LogicalDevice subclasses model different types of SB logical unit, e.g., TapeDrive. SBProtocolEndpoint represents the SB logical port, either initiator or target. The transports type (e.g., FC) is specified in SBProtocolEndpoint ConnectionType property. The initiator ProtocolEndpoint and each target ProtocolEndpoint and LogicalDevice are associated by SBInitiatorTargetLogicalUnitPath. Each SBLogicalDevice is contained within a one SBCUImage.

Figure 22: "SB Host Discovered Resources" depicts SB Host Discovered Resources.

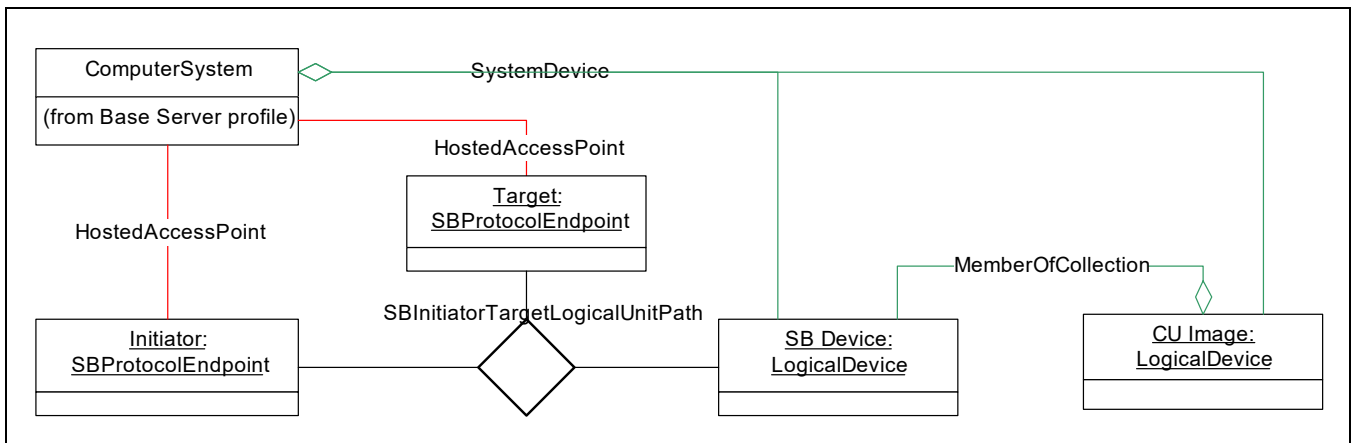


Figure 22 - SB Host Discovered Resources

Associating Hardware and OS Devices

There are two variations for disks and virtual disks - configurations with or without disk partitions.

- 1) With no partitions, each discovered (virtual) disk is modeled as LogicalDisk
- 2) With disk partitions, each partition exposed to an application or LVM is modeled as LogicalDisk. Any disk (or intermediate partition) that contains partitions is modeled as StorageExtent. DiskPartition instances are modeled between the StorageExtents and LogicalDisks. For more details, see 4 Disk Partition Profile. The requirement for disk partitions is reflected by the presence of DiskPartition-ConfigurationCapabilities.

Tape drive configurations are similar to case 1 above, with TapeDrive rather than LogicalDisk.

7.2 Health and Fault Management Considerations

Not defined in this document

7.3 Cascading Considerations

Not defined in this document

7.4 Extrinsic Methods of the Profile

StorageConfigurationService.ScsiScan

This method requests that the system rescan SCSI devices for changes in their configuration. If called on a general-purpose host, the changes are reflected in the list of devices available to applications (for example, the UNIX 'device tree').

This operation can be disruptive; optional parameters allow the caller to limit the scan to a single or set of SCSI device elements. All parameters are optional; if parameters other than Job are passed in as null, a full scan is invoked. If the caller specifies a connection type, the scan is limited to that connection type.

Job - a reference to a Job

ConnectionType - The type of connection (transport, such as FC or iSCSI), constrains the scan to initiator ports of this type. Only used if the Initiators parameter is null.

OtherConnectionType - The connection type if the ConnectionType parameter is Other.

Initiators - A list of references to initiators. Scanning will be limited to SCSI targets attached to these initiators. If this parameter is null and connection is specified, all initiators of that connection type are scanned. If this parameter and ConnectionType are null, all targets on all system initiators are probed.

Targets - A list of names or numbers for targets. These should be formatted to match the appropriate connection type. For example, PortWWNs would be specified for Fibre Channel targets.

LogicalUnits - A list of SCSI logical unit numbers representing logical units hosted on the targets specified in the Targets argument.

ScsiScan() support is optional. Support for ScsiScan() can be determined based on the inclusion of "SCSI Scan" in the SupportedAsynchronousActions array in StorageConfigurationCapabilities.

7.5 Use Cases

Not defined in this document

7.6 CIM Elements

7.6.1 Overview

Table 33 describes the CIM elements for Host Discovered Resources.

Table 33 - CIM Elements for Host Discovered Resources

| Element Name | Requirement | Description |
|---|-------------|---|
| 7.6.2 CIM_ATAInitiatorTargetLogicalUnitPath | Optional | Associates initiator and target ATAProtocolEndpoints to a logical unit. |
| 7.6.3 CIM_ATAProtocolEndpoint | Optional | |
| 7.6.4 CIM_ElementConformsToProfile (LogicalDevice to Host Discovered Resources RegisteredProfile) | Mandatory | Ties the LogicalDevice to the registered profile for Host Discovered Resources. |
| 7.6.5 CIM_HostedAccessPoint | Mandatory | This association links all ProtocolEndpoints to the Base Server profile computer system. |
| 7.6.6 CIM_LogicalDevice (LogicalDevice) | Mandatory | Represents a block logical unit that is exposed to applications such as file systems without being partitioned. |
| 7.6.7 CIM_LogicalDisk (LogicalDevice) | Optional | Represents a block logical unit that is exposed to applications such as file systems without being partitioned. |
| 7.6.8 CIM_SCSIArbitraryLogicalUnit (LogicalDevice) | Optional | A SCSI Logical Unit that exists only for management. |
| 7.6.9 CIM_SCSIInitiatorTargetLogicalUnitPath | Optional | Associates initiator and target SCSIProtocolEndpoints to a logical unit. |
| 7.6.10 CIM_SCSIProtocolEndpoint | Optional | |
| 7.6.11 CIM_StorageExtent (LogicalDevice) | Optional | Represents a block logical unit in the host that is partitioned before being exposed to applications. |
| 7.6.12 CIM_SystemDevice | Mandatory | This association links LogicalDevices to the Base Server profile computer system. |

Table 33 - CIM Elements for Host Discovered Resources

| Element Name | Requirement | Description |
|---|-------------|--|
| 7.6.13 CIM_TapeDrive (LogicalDevice) | Optional | Represents a tape drive logical unit in the host. |
| 7.6.14 CIM_SBInitiatorTargetLogicalUnitPath | Optional | Associates initiator and target SBProtocolEndpoints to a logical unit. |
| 7.6.15 CIM_SBProtocolEndpoint | Optional | |
| SELECT * FROM CIM_InstCreation WHERE SourceInstance ISA CIM_SCSIInitiatorTargetLogicalUnitPath | Mandatory | Path creation. |
| SELECT * FROM CIM_InstDeletion WHERE SourceInstance ISA CIM_SCSIInitiatorTargetLogicalUnitPath | Mandatory | Path deletion. |
| SELECT * FROM CIM_InstModification WHERE SourceInstance ISA CIM_SCSIInitiatorTargetLogicalUnitPath AND SourceInstance.CIM_SCSIInitiatorTargetLogicalUnitPath: :State <> PreviousInstance.CIM_SCSIInitiatorTargetLogicalUnitPat h::State | Mandatory | CQL -Path State change. |
| SELECT * FROM CIM_InstModification WHERE SourceInstance ISA CIM_SCSIInitiatorTargetLogicalUnitPath AND SourceInstance.CIM_SCSIInitiatorTargetLogicalUnitPath: :AdministrativeWeight <> PreviousInstance.CIM_SCSIInitiatorTargetLogicalUnitPat h::AdministrativeWeight | Mandatory | CQL -Path AdministrativeWeight change. |
| SELECT * FROM CIM_InstModification WHERE SourceInstance ISA CIM_SCSIInitiatorTargetLogicalUnitPath AND SourceInstance.CIM_SCSIInitiatorTargetLogicalUnitPath: :AdministrativeOverride <> PreviousInstance.CIM_SCSIInitiatorTargetLogicalUnitPat h::AdministrativeOverride | Mandatory | CQL -Path AdministrativeOverride change. |

7.6.2 CIM_ATAInitiatorTargetLogicalUnitPath

Created By: Static

Modified By: Static

Deleted By: Static

Requirement: Optional

Table 34 describes class CIM_ATAInitiatorTargetLogicalUnitPath.

Table 34 - SMI Referenced Properties/Methods for CIM_ATAInitiatorTargetLogicalUnitPath

| Properties | Flags | Requirement | Description & Notes |
|-------------|-------|-------------|---|
| State | | Mandatory | |
| LogicalUnit | | Mandatory | A reference to a LogicalDevice. |
| Initiator | | Mandatory | A reference to the initiator CIM_ATAProtocolEndpoint. |
| Target | | Mandatory | A reference to the target CIM_ATAProtocolEndpoint. |

7.6.3 CIM_ATAProtocolEndpoint

Created By: Static

Modified By: Static

Deleted By: Static

Requirement: Optional

Table 35 describes class CIM_ATAProtocolEndpoint.

Table 35 - SMI Referenced Properties/Methods for CIM_ATAProtocolEndpoint

| Properties | Flags | Requirement | Description & Notes |
|-------------------------|-------|-------------|---------------------|
| SystemCreationClassName | | Mandatory | |
| SystemName | | Mandatory | |
| CreationClassName | | Mandatory | |
| Name | C | Mandatory | |
| ProtocolIFType | | Mandatory | |
| ConnectionType | | Mandatory | |
| Role | | Mandatory | |

7.6.4 CIM_ElementConformsToProfile (LogicalDevice to Host Discovered Resources Registered-Profile)

The CIM_ElementConformsToProfile ties LogicalDevice to the registered profile for Host Discovered Resources.

Created By: Static

Modified By: Static

Deleted By: Static

Requirement: Mandatory

Table 36 describes class CIM_ElementConformsToProfile (LogicalDevice to Host Discovered Resources RegisteredProfile).

Table 36 - SMI Referenced Properties/Methods for CIM_ElementConformsToProfile (LogicalDevice to Host Discovered Resources RegisteredProfile)

| Properties | Flags | Requirement | Description & Notes |
|--------------------|-------|-------------|--|
| ManagedElement | | Mandatory | A LogicalDevice instance that represents the Host Discovered Resources. |
| ConformantStandard | | Mandatory | RegisteredProfile instance describing the Host Discovered Resources profile. |

7.6.5 CIM_HostedAccessPoint

Created By: Static

Modified By: Static

Deleted By: Static

Requirement: Mandatory

Table 37 describes class CIM_HostedAccessPoint.

Table 37 - SMI Referenced Properties/Methods for CIM_HostedAccessPoint

| Properties | Flags | Requirement | Description & Notes |
|------------|-------|-------------|---------------------------------|
| Dependent | | Mandatory | Reference to a ProtocolEndpoint |
| Antecedent | | Mandatory | Reference to a Computer System |

7.6.6 CIM_LogicalDevice (LogicalDevice)

Created By: Static

Modified By: Static

Deleted By: Static

Requirement: Mandatory

Table 38 describes class CIM_LogicalDevice (LogicalDevice).

Table 38 - SMI Referenced Properties/Methods for CIM_LogicalDevice (LogicalDevice)

| Properties | Flags | Requirement | Description & Notes |
|-------------------------|-------|-------------|---|
| SystemCreationClassName | | Mandatory | |
| SystemName | | Mandatory | |
| CreationClassName | | Mandatory | |
| DeviceID | | Mandatory | Opaque identifier. |
| ElementName | | Mandatory | User-friendly name. |
| Name | C | Mandatory | OS device name. |
| OtherIdentifyingInfo | C | Mandatory | The correlatable ID of the underlying logical unit. |
| IdentifyingDescriptions | C | Mandatory | |
| OperationalStatus | | Mandatory | |

7.6.7 CIM_LogicalDisk (LogicalDevice)

Created By: Static

Modified By: Static

Deleted By: Static

Requirement: Optional

Table 39 describes class CIM_LogicalDisk (LogicalDevice).

Table 39 - SMI Referenced Properties/Methods for CIM_LogicalDisk (LogicalDevice)

| Properties | Flags | Requirement | Description & Notes |
|-------------------------|-------|-------------|---------------------|
| SystemCreationClassName | | Mandatory | |
| SystemName | | Mandatory | |
| CreationClassName | | Mandatory | |
| DeviceID | | Mandatory | Opaque identifier. |

Table 39 - SMI Referenced Properties/Methods for CIM_LogicalDisk (LogicalDevice)

| Properties | Flags | Requirement | Description & Notes |
|-------------------------|-------|-------------|---|
| ElementName | | Mandatory | User-friendly name. |
| Name | C | Mandatory | OS device name. |
| NameFormat | C | Mandatory | Shall be 12 (OS Device Name). |
| NameNamespace | C | Mandatory | Shall be 8 (OS Device Namespace). |
| OtherIdentifyingInfo | C | Mandatory | The correlatable ID of the underlying logical unit. |
| IdentifyingDescriptions | C | Mandatory | |
| OperationalStatus | | Mandatory | |

7.6.8 CIM_SCSIArbitraryLogicalUnit (LogicalDevice)

Created By: Static

Modified By: Static

Deleted By: Static

Requirement: Optional

Table 40 describes class CIM_SCSIArbitraryLogicalUnit (LogicalDevice).

Table 40 - SMI Referenced Properties/Methods for CIM_SCSIArbitraryLogicalUnit (LogicalDevice)

| Properties | Flags | Requirement | Description & Notes |
|-------------------------|-------|-------------|---|
| SystemCreationClassName | | Mandatory | |
| SystemName | | Mandatory | |
| CreationClassName | | Mandatory | |
| DeviceID | | Mandatory | Opaque identifier. |
| ElementName | | Mandatory | User-friendly name. |
| Name | C | Mandatory | OS device name. |
| OtherIdentifyingInfo | C | Mandatory | The correlatable ID of the underlying logical unit. |
| IdentifyingDescriptions | C | Mandatory | |
| OperationalStatus | | Mandatory | |

7.6.9 CIM_SCSIInitiatorTargetLogicalUnitPath

Created By: Static

Modified By: Static

Deleted By: Static

Requirement: Optional

Table 41 describes class CIM_SCSIInitiatorTargetLogicalUnitPath.

Table 41 - SMI Referenced Properties/Methods for CIM_SCSIInitiatorTargetLogicalUnitPath

| Properties | Flags | Requirement | Description & Notes |
|------------------------|-------|-------------|--|
| OSDeviceName | | Optional | |
| AdministrativeWeight | M | Mandatory | |
| State | | Mandatory | |
| AdministrativeOverride | | Mandatory | |
| LogicalUnit | | Mandatory | A reference to a LogicalDevice. |
| Initiator | | Mandatory | A reference to the initiator CIM_SCSIProtocolEndpoint. |
| Target | | Mandatory | A reference to the target CIM_SCSIProtocolEndpoint. |

7.6.10 CIM_SCSIProtocolEndpoint

Created By: Static

Modified By: Static

Deleted By: Static

Requirement: Optional

Table 42 describes class CIM_SCSIProtocolEndpoint.

Table 42 - SMI Referenced Properties/Methods for CIM_SCSIProtocolEndpoint

| Properties | Flags | Requirement | Description & Notes |
|-------------------------|-------|-------------|---------------------|
| SystemCreationClassName | | Mandatory | |
| SystemName | | Mandatory | |
| CreationClassName | | Mandatory | |
| Name | C | Mandatory | |
| ProtocolIFType | | Mandatory | Shall be 1 (Other). |
| ConnectionType | | Mandatory | |
| Role | | Mandatory | |

7.6.11 CIM_StorageExtent (LogicalDevice)

Created By: Static

Modified By: Static

Deleted By: Static

Requirement: Optional

Table 43 describes class CIM_StorageExtent (LogicalDevice).

Table 43 - SMI Referenced Properties/Methods for CIM_StorageExtent (LogicalDevice)

| Properties | Flags | Requirement | Description & Notes |
|-------------------------|-------|-------------|---|
| SystemCreationClassName | | Mandatory | |
| SystemName | | Mandatory | |
| CreationClassName | | Mandatory | |
| DeviceID | | Mandatory | Opaque identifier. |
| ElementName | | Mandatory | User-friendly name. |
| Name | C | Mandatory | OS device name. |
| NameFormat | C | Mandatory | Shall be 12 (OS Device Name). |
| NameNamespace | C | Mandatory | Shall be 8 (OS Device NameSpace). |
| OtherIdentifyingInfo | C | Mandatory | The correlatable ID of the underlying logical unit. |
| IdentifyingDescriptions | C | Mandatory | |
| OperationalStatus | | Mandatory | |

7.6.12 CIM_SystemDevice

Created By: Static

Modified By: Static

Deleted By: Static

Requirement: Mandatory

Table 44 describes class CIM_SystemDevice.

Table 44 - SMI Referenced Properties/Methods for CIM_SystemDevice

| Properties | Flags | Requirement | Description & Notes |
|----------------|-------|-------------|--|
| PartComponent | | Mandatory | Reference to a Logical Device subclass |
| GroupComponent | | Mandatory | Reference to a Computer System |

7.6.13 CIM_TapeDrive (LogicalDevice)

Created By: Static

Modified By: Static

Deleted By: Static

Requirement: Optional

Table 45 describes class CIM_TapeDrive (LogicalDevice).

Table 45 - SMI Referenced Properties/Methods for CIM_TapeDrive (LogicalDevice)

| Properties | Flags | Requirement | Description & Notes |
|-------------------------|-------|-------------|---------------------|
| SystemCreationClassName | | Mandatory | |
| SystemName | | Mandatory | |

Table 45 - SMI Referenced Properties/Methods for CIM_TapeDrive (LogicalDevice)

| Properties | Flags | Requirement | Description & Notes |
|-------------------------|-------|-------------|---|
| CreationClassName | | Mandatory | |
| DeviceID | | Mandatory | Opaque identifier. |
| ElementName | | Mandatory | User-friendly name. |
| Name | C | Mandatory | OS device name. |
| OtherIdentifyingInfo | C | Mandatory | The correlatable ID of the underlying logical unit. |
| IdentifyingDescriptions | C | Mandatory | |
| OperationalStatus | | Mandatory | |

7.6.14 CIM_SBInitiatorTargetLogicalUnitPath

Created By: Static

Modified By: Static

Deleted By: Static

Requirement: Optional

Table 46 describes class CIM_SBInitiatorTargetLogicalUnitPath.

Table 46 - SMI Referenced Properties/Methods for CIM_SBInitiatorTargetLogicalUnitPath

| Properties | Flags | Requirement | Description & Notes |
|------------------|-------|-------------|---|
| OSDeviceName | | Optional | |
| UsePreferredPath | | Optional | Boolean indicating whether preferred path processing is required. |
| PreferredPath | | Optional | Boolean indicating whether this is a preferred path. |
| PathGroupState | | Optional | One of 'Unknown', 'Path grouping not supported', 'Reset', 'Grouped', 'Ungrouped'. |
| PathGroupMode | | Optional | One of 'Unknown', 'None', 'Single path', 'Multipath' (Single path and multipath only valid if PathGroupState is grouped). |
| PathGroupID | | Optional | String containing the ID from the OS, only valid if PathGroupState is Grouped. |
| LogicalUnit | | Mandatory | A reference to a LogicalDevice. |
| Initiator | | Mandatory | A reference to the initiator CIM_SBProtocolEndpoint. |
| Target | | Mandatory | A reference to the target CIM_SBProtocolEndpoint. |

7.6.15 CIM_SBProtocolEndpoint

Created By: Static

Modified By: Static

Deleted By: Static

Requirement: Optional

Table 47 describes class CIM_SBProtocolEndpoint.

Table 47 - SMI Referenced Properties/Methods for CIM_SBProtocolEndpoint

| Properties | Flags | Requirement | Description & Notes |
|-------------------------|-------|-------------|---------------------|
| SystemCreationClassName | | Mandatory | |
| SystemName | | Mandatory | |
| CreationClassName | | Mandatory | |
| Name | C | Mandatory | |
| ProtocolIFType | | Mandatory | |
| ConnectionType | | Mandatory | |
| Role | | Mandatory | |

EXPERIMENTAL

EXPERIMENTAL

8 Host Hardware RAID Controller Profile

8.1 Synopsis

Profile Name: Host Hardware RAID Controller (Component Profile)

Version: 1.7.0

Organization: SNIA

Central Class: ComputerSystem

Scoping Class: ComputerSystem

Related Profiles: Table 48 describes the related profiles for Host Hardware RAID Controller.

Table 48 - Related Profiles for Host Hardware RAID Controller

| Profile Name | Organization | Version | Requirement | Description |
|----------------------|--------------|---------|--|-------------------------------------|
| Physical Asset | DMTF | 1.0.2 | Mandatory | |
| Block Services | SNIA | 1.8.0 | Mandatory | |
| Disk Drive Lite | SNIA | 1.7.0 | Optional | |
| Software Inventory | SNIA | 1.0.0 | Mandatory | Experimental. |
| Software Update | DMTF | 1.0.0 | Optional | |
| Extent Composition | SNIA | 1.7.0 | Optional | |
| Disk Sparing | SNIA | 1.7.0 | Optional | |
| DA Target Ports | SNIA | 1.4.0 | Mandatory | |
| Erasure | SNIA | 1.7.0 | Optional | Experimental. |
| Copy Services | SNIA | 1.5.0 | Optional | Deprecated |
| Replication Services | SNIA | 1.7.0 | Optional | |
| Storage Enclosure | SNIA | 1.7.0 | Optional | Model for External Disk Enclosures. |
| Thin Provisioning | SNIA | 1.7.0 | Optional | |
| Block Storage Views | SNIA | 1.7.0 | Optional | |
| FC Initiator Ports | SNIA | 1.7.0 | Support for at least one is mandatory. | |
| SAS Initiator Ports | SNIA | 1.7.0 | | |
| Indications | DMTF | 1.2.2 | Mandatory | See DSP1054, version 1.2.2 |

The Host Hardware RAID Controller Profile describes classes, properties, and other profiles necessary to manage a host-based RAID controller. The central class and the scoping Class is the ComputerSystem representing the controller.

8.2 Description

The Host Hardware RAID Controller Profile is intended to represent the manageable elements of a host-based RAID controller and the storage it controls. A RAID controller may manage disks contained within a server's internal drive cage or an external drive enclosure.

The Host Hardware RAID Controller Profile may be used to model manageability for software-based RAID included in drivers. However, manageability for volume manager-based RAID, running on a host operating system, is out of scope for the Host Hardware RAID Controller Profile.

Figure 23, "Host Hardware RAID Controller Package Diagram" shows the relationship between the Host Hardware RAID Profile and its key component profiles.

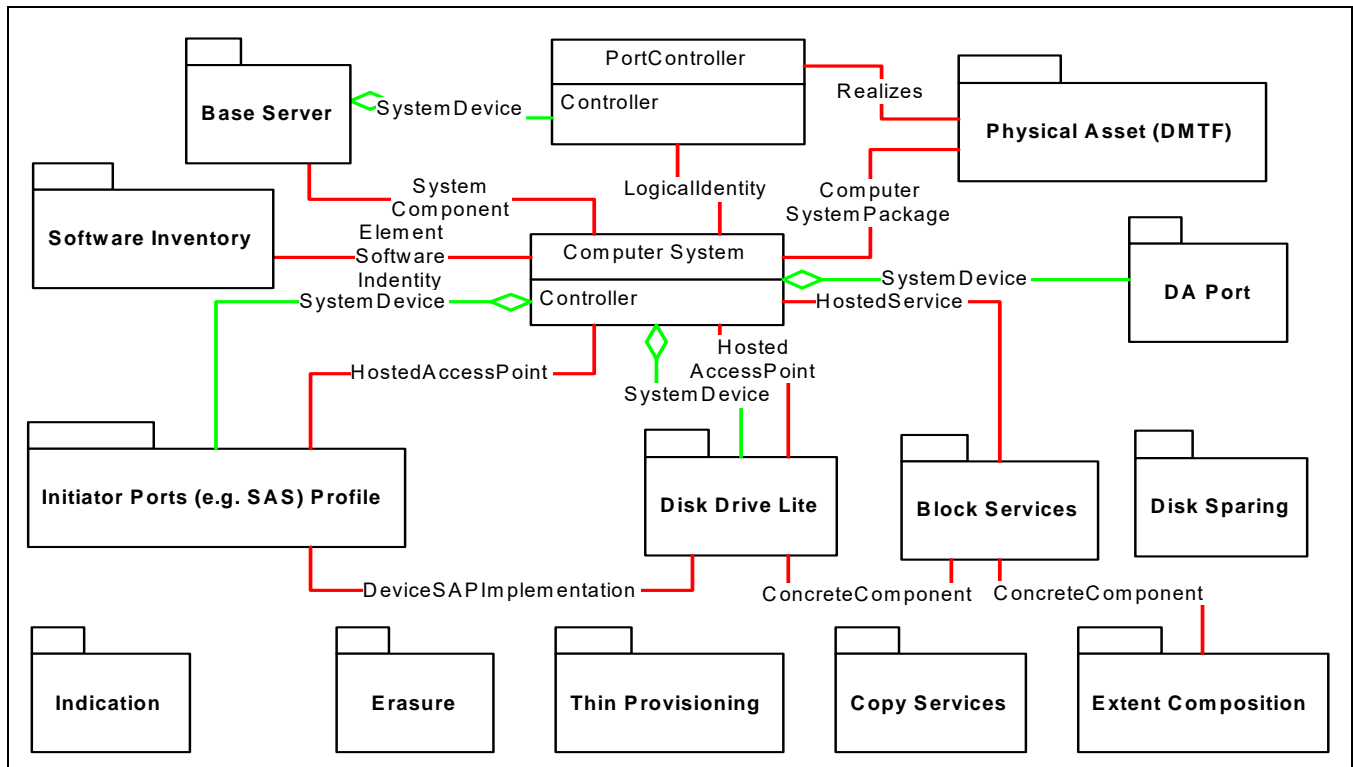


Figure 23 - Host Hardware RAID Controller Package Diagram

8.3 Implementation

8.3.1 Relationship to autonomous profiles

Although the Host Hardware RAID Controller Profile includes a **ComputerSystem** instance, it is a component profile, intended to be referenced by a separate profile modeling the host system that contains the RAID controller. In most cases, the **Base Server Profile** (see *Storage Management Technical Specification, Part 3 Common Profiles, 1.8.0 Rev 4 30 Base Server Profile*). will be the referencing profile. The **ComputerSystems** from the Host Hardware RAID Controller Profile and its referencing profile are associated using **CIM_SystemComponent**.

All references to **ComputerSystem** in the Host Hardware RAID Controller Profile imply a single instance for a customer server or storage system as defined in the **Base Server Profile**. See Annex B (Informative) **Host Profile Deployment Guidelines** for information on the use of host profiles with **Base Server profile**.

8.3.2 CIM_PortController

The PortController class represents an instance of a RAID controller and controllers the backend port to the storage managed by this controller. An implementation of Host Hardware RAID Controller Profile shall associate PortController to the instance of ComputerSystem that represents the host in the referencing profile, using the SystemDevice association. Also, the PortController shall be associated to the ComputerSystem that represents the controller using the LogicalIdentity association. Finally, the PortController shall be associated to one or more instances of LogicalPort using the ControlledBy association.

8.3.3 CIM_ComputerSystem

In the Host Hardware RAID Controller Profile, the ComputerSystem Class within this profile represents the RAID controller itself.

The ComputerSystem that represents the RAID controller system acts as the principal class of the profile. Many of the other classes in the Host Hardware RAID Controller Profile that together act as a host-based RAID controller are scoped to the instance of ComputerSystem that represents the controller. This includes attached storage pools, volumes, drives, configuration services, logical ports, and physical cards. Any implementation shall instantiate an instance of ComputerSystem associated to PortController using the LogicalIdentity association. Also, the implementation shall include the value 30 (Host-Based RAID controller) in the Dedicated property”.

Figure 24 illustrates the relationship between the Base Server ComputerSystem and the Host Hardware RAID Controller system, and the relationship of devices defined by this profile to the Host Hardware RAID Controller system.

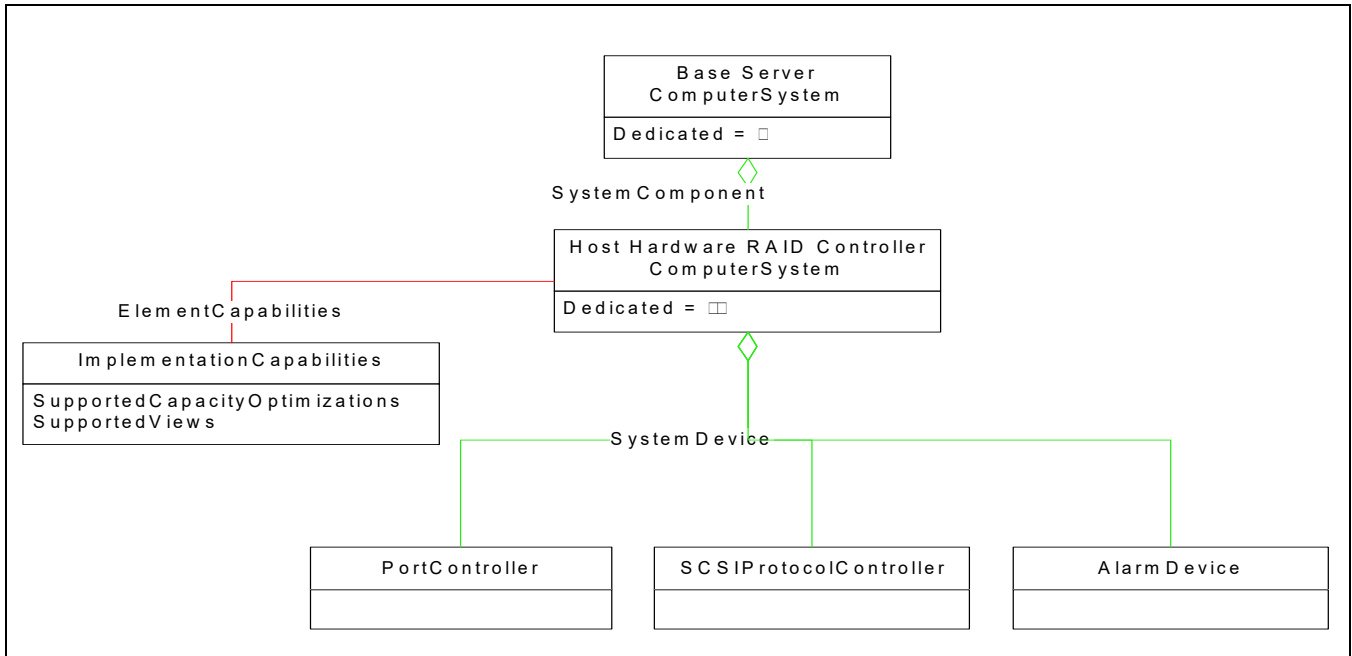


Figure 24 - Host Hardware RAID resources scoped to HHRC ComputerSystem

Figure 24 also illustrates the ImplementationCapabilities associated to the Host Hardware RAID Controller ComputerSystem. These capabilities identify the capacity optimization techniques and views supported by the implementation. Note that the Block Storage Views also calls for an instance of ViewCapabilities to identify the views supported. However, the supported views are greater than those supported in a Host Hardware RAID Controller configuration. The SupportedViews property of

ImplementationCapabilities limits the possible views supported to those that make sense in the context of a Host Hardware RAID Controller implementation.

8.3.4 CIM_AlarmDevice

Some Host-based RAID controllers have a visual or audible alarm, as shown in Figure 25, to indicate when some event has occurred on the system, like a degraded RAID StorageVolume. CIM_AlarmDevice may be implemented to represent an alarm device on the RAID controller.

Determination: The implementation may create an instance of CIM_AlarmDevice that represents an alarm device associated to ComputerSystem that represents the controller using the SystemDevice association. Alarms may be either visual (i.e., LEDs on the controller) or audible, thus implementation shall set the value of the appropriate boolean property to TRUE in the CIM_AlarmDevice class. For example, if the alarm is an audible alarm, the implementation shall set the value of AudibleAlarm property to TRUE.

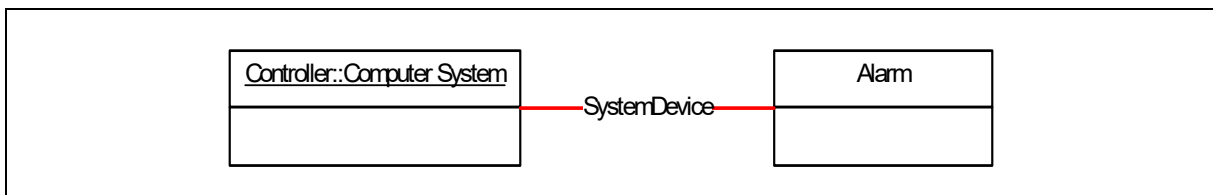


Figure 25 - Alarms in Host Hardware RAID Controller

8.3.5 Server Profile

For the Host Hardware RAID Controller Profile, the SNIA Server Profile is required. Any implementation shall follow the requirements of the SNIA Server Profile (see *Storage Management Technical Specification, Part 3 Common Profiles, 1.8.0 Rev 4 35 Server Profile*).

8.3.6 Profile Registration

For the Host Hardware RAID Controller Profile, the scoping class methodology of profile registration shall be used, as required by the server profile, as shown in Figure 26. However, an implementation may use the central class methodology. The scoping class and central class of the Host Hardware RAID Controller profile is the instance of CIM_ComputerSystem that represents the controller.

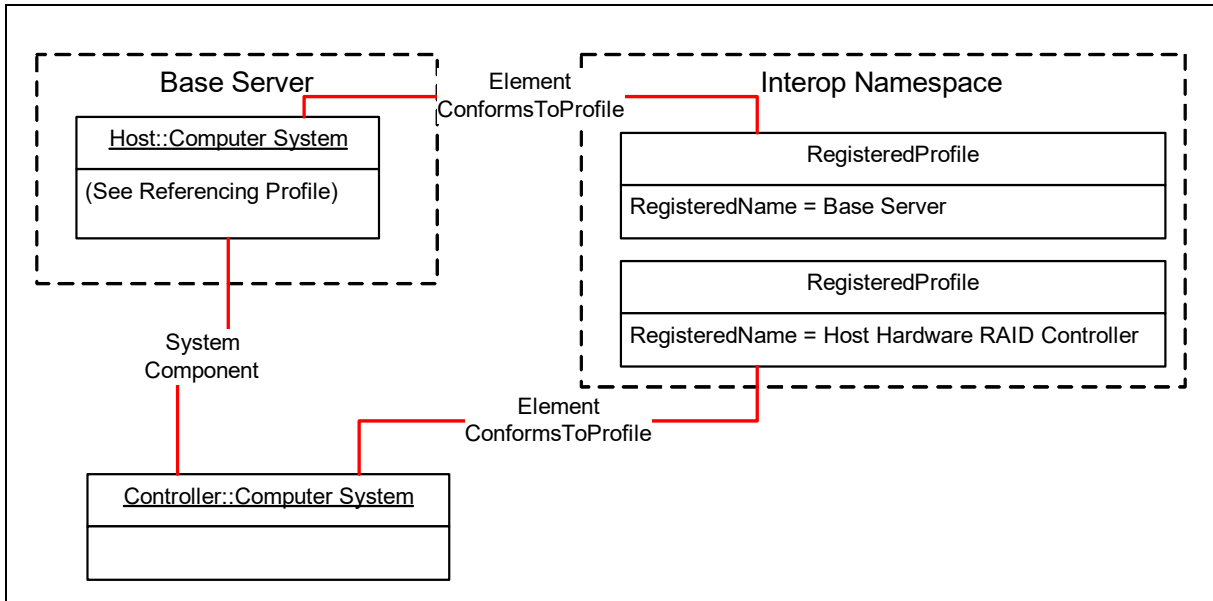


Figure 26 - Profile Registration with Host Hardware RAID Controller and Base Server Profiles

8.3.7 Profile Discovery and Advertisement

The Host Hardware RAID Controller Profile shall be advertised in SLP as “SNIA:Host Hardware RAID Controller”.

8.3.8 Physical Asset Profile

The physical representation of the controller is mandatory and realized by implementing the Physical Asset Profile, shown in Figure 27. The Physical Asset Profile defines the set of classes and subclasses for describing the physical assets of a managed component. Most host-based RAID controllers can be described as a physical card or chip on a motherboard. Therefore, at a minimum, the implementation shall include an instance of a subclass of PhysicalComponent or PhysicalPackage. The PhysicalPackage or PhysicalComponent shall be associated (using Realizes) to the PortController and to the ComputerSystem representing the controller (using ComputerSystemPackage). For example, the CIM_Card class is a subclass of PhysicalPackage. The implementation may choose CIM_Card to represent a physical RAID controller card. In this case, the instance of CIM_Card is associated to the top-level controller CIM_PortController via the Realizes association.

For any instantiation of a subclass of PhysicalComponent or PhysicalPackage class (i.e., CIM_Card), the implementation shall populate the ElementName property with the name of the RAID controller model as described by the manufacturer.

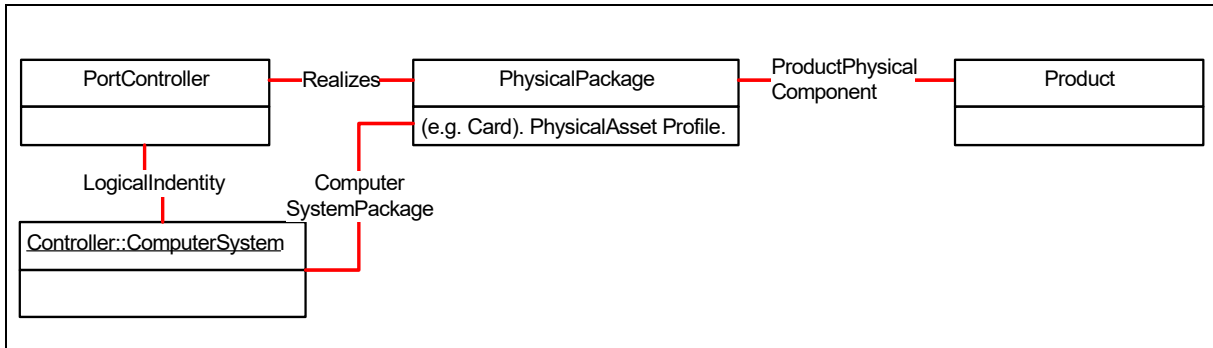


Figure 27 - Implementation of Physical Asset Profile

8.3.9 Storage Enclosure Profile

The Storage Enclosure Profile is an optional profile modeling disk enclosures dedicated to a Host Hardware RAID Controller. The associations defined in the Storage Enclosure Profile referencing ComputerSystem should reference the controller ComputerSystem defined in the Host Hardware RAID Controller Profile.

8.3.10 Implementation of Block Services Package

8.3.10.1 Overview

Figure 28 illustrates the Host Hardware RAID Controller use of Block Services. Note that most of the non-system objects must also be associated to the ComputerSystem; these associations are omitted to simplify the diagram.

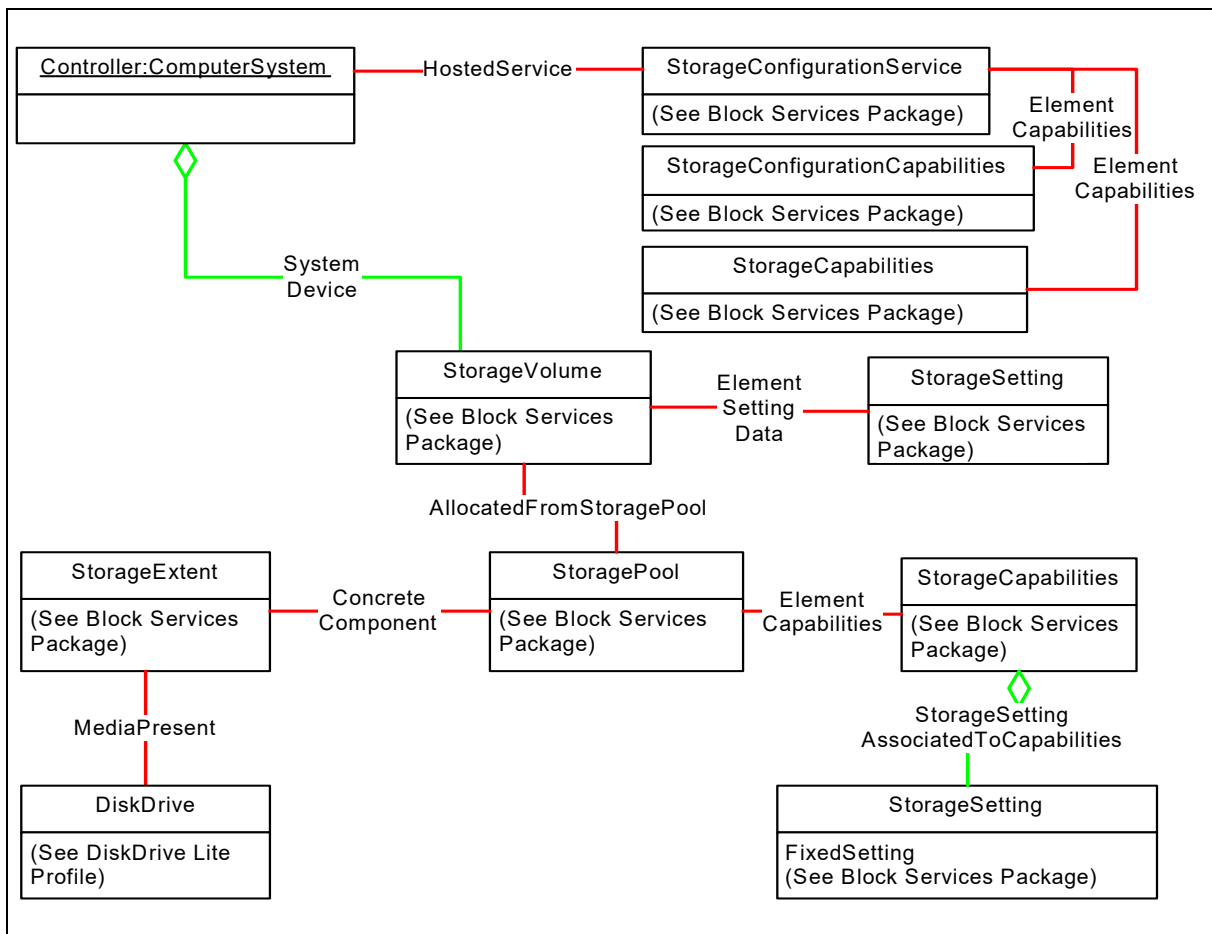


Figure 28 - Block Services Package in Host Hardware RAID Controller

8.3.10.2 Storage Pools

8.3.10.2.1 Primordial Storage Pools

As required by block services package, an implementation shall instantiate at least one primordial storage pool that represents the physical disk storage attached to the controller. However, some implementations that support disparate storage device types attached to the controller, such as a SAS/SATA JBOD, may create multiple primordial storage pools based on the storage capabilities. For example, an implementation that supports SAS/SATA JBODs attached to the RAID controller may support one primordial pool for SAS disks and a second primordial pool for SATA disks.

Primordial StoragePools shall be associated to the principal instance ComputerSystem that represents the RAID controller using the HostedStoragePool association. Primordial storage pools may increase or decrease in size or go away but, at least one primordial storage pool shall always be instantiated, even if the RemainingManagedSpace property size is zero.

8.3.10.3 StorageConfigurationCapabilities

As required by block services, implementations shall instantiate a single instance of StorageConfigurationCapabilities associated to the StorageConfigurationService instance using the ElementCapabilities association. However, for the Host Hardware RAID Controller Profile, LogicalDisk creation and modification is not supported. Therefore the following properties shall be limited to a subset of the values defined in the DMTF MOF files for the StorageConfigurationCapabilities class:

Storage Capabilities

- SupportedStorageElementTypes shall include the value 2 (StorageVolume).
- SupportedStoragePoolFeatures shall include the value 2 (InExtents) or 3 (Single InPool).
- SupportedStorageElementFeatures shall include the value 3 (StorageVolume Creation), 5 (StorageVolume Modification), 6 (Single InPool) or 10 (InElements).

8.3.10.4 Storage Capabilities

For the initial state of Host Hardware RAID Controller Profile, implementations shall instantiate at least two instances of the StorageCapabilities class.

The first instantiation of StorageCapabilities is used to model the storage capabilities of the controller. The StorageCapabilities instance shall be associated to the StorageConfigurationService using the ElementCapabilities association. This instance allows the client to easily determine the storage capabilities of the controller. This capability is fixed and may change only when new functionality is added to the controller through a firmware change/update.

The second instantiation of StorageCapabilities is associated to a primordial StoragePool using the ElementCapabilities association. This instantiation of StorageCapabilities is required by Block Services Package and defines the range of redundancy capabilities of the primordial StoragePool.

8.3.10.5 Storage Settings

Implementations shall instantiate at least one StorageSetting class associated to the StorageCapabilities (associated to the primordial StoragePool) using the StorageSettingAssociatedToCapabilities association. The StorageSetting class further defines the redundancy capabilities of the primordial StoragePool. This is a “fixed” association, and shall not be modified by the client.

8.3.11 Implementation of DAPort and SCSIProtocolController

RAID controllers make the volumes exported by the controller appear as disks (or disk partitions) to the host operating system - which in turn makes them available to filesystems and databases running on the host. Typically the drivers supporting RAID controllers cause exported volumes to appear in the operating system’s “device tree” similarly to an external RAID array: SCSI logical units attached to SCSI target devices.

SCSIProtocolController represents the SCSI target device. StorageVolumes (from the Block Services package) represent the logical units and are associated to SCSIProtocolController with the ProtocolControllerForUnit association. This association has a DeviceNumber that holds the logical unit number for the StorageVolume. The DA Target Port Profile models the simulated SCSI port related to the SCSIProtocolController. The combination of these elements allows an application with existing support for SMI-S to additionally support the Host Hardware RAID profile with minimal changes.

The model for DA Target Ports and SCSIProtocolController is shown in Figure 29, “DAPort Profile in Host Hardware Controller”.

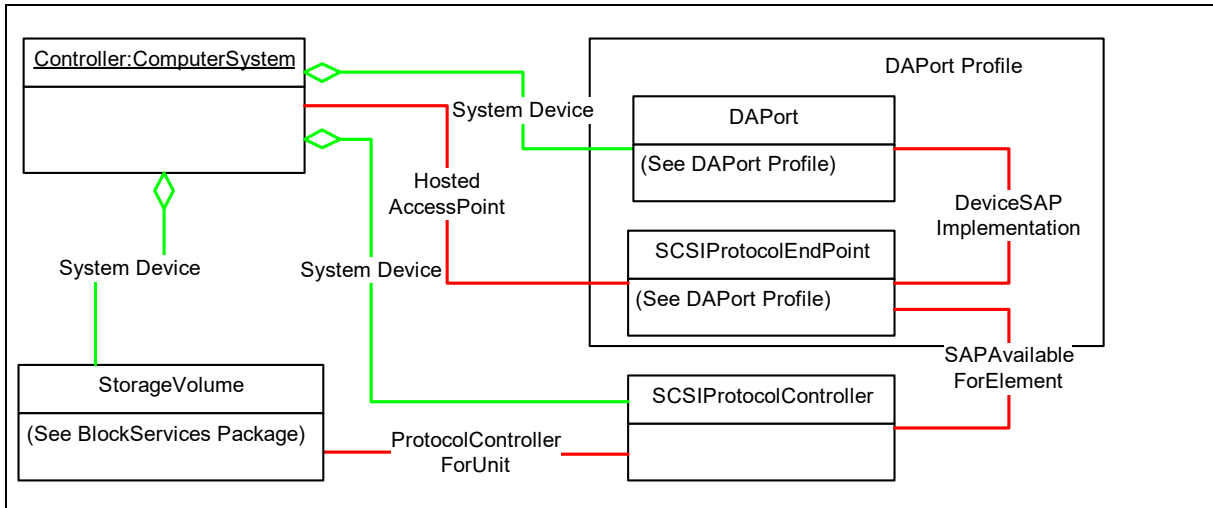


Figure 29 - DAPort Profile in Host Hardware Controller

8.3.12 Implementation of Software Inventory Profile

For the Host Hardware RAID Controller Profile, the SoftwareIdentity class from the Software Inventory Profile is required to model various software entities for a RAID controller, as shown in Figure 30. The implementation shall use the Software Inventory Profile to model the driver software for the RAID controller running on the Host Operating System and the firmware internal to the controller. If the RAID controller has a separate software entity for the BIOS from the firmware, the implementation may use the Software Inventory Profile to represent the BIOS.

To model the driver, firmware and BIOS software for the controller, the implementation shall instantiate an instance of SoftwareIdentity class associated to the top level ComputerSystem that represents the RAID controller, using the ElementSoftwareIdentity association. The SoftwareIdentity instances are differentiated by including the values Driver, Firmware, or FCode/BIOS in the Classifications property.

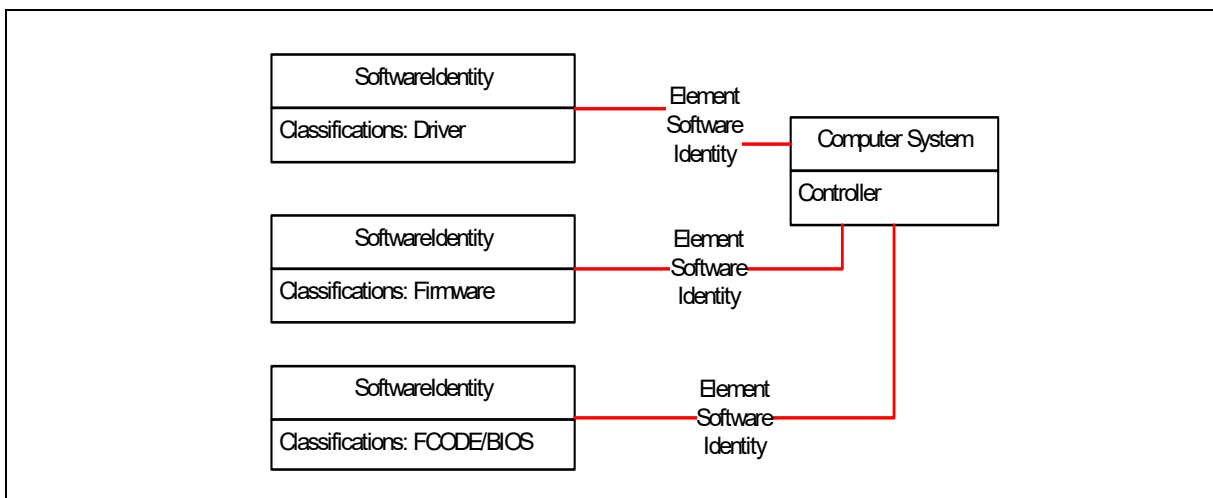


Figure 30 - Software Inventory Profile in Host Hardware RAID Controller

8.3.13 Implementation of Initiator Ports Profiles

8.3.13.1 Overview

The Host Hardware RAID Controller Profile utilizes the initiator ports profiles to model the back-end ports of the controller that are connected to the storage managed by the RAID controller, as shown in Figure 31.

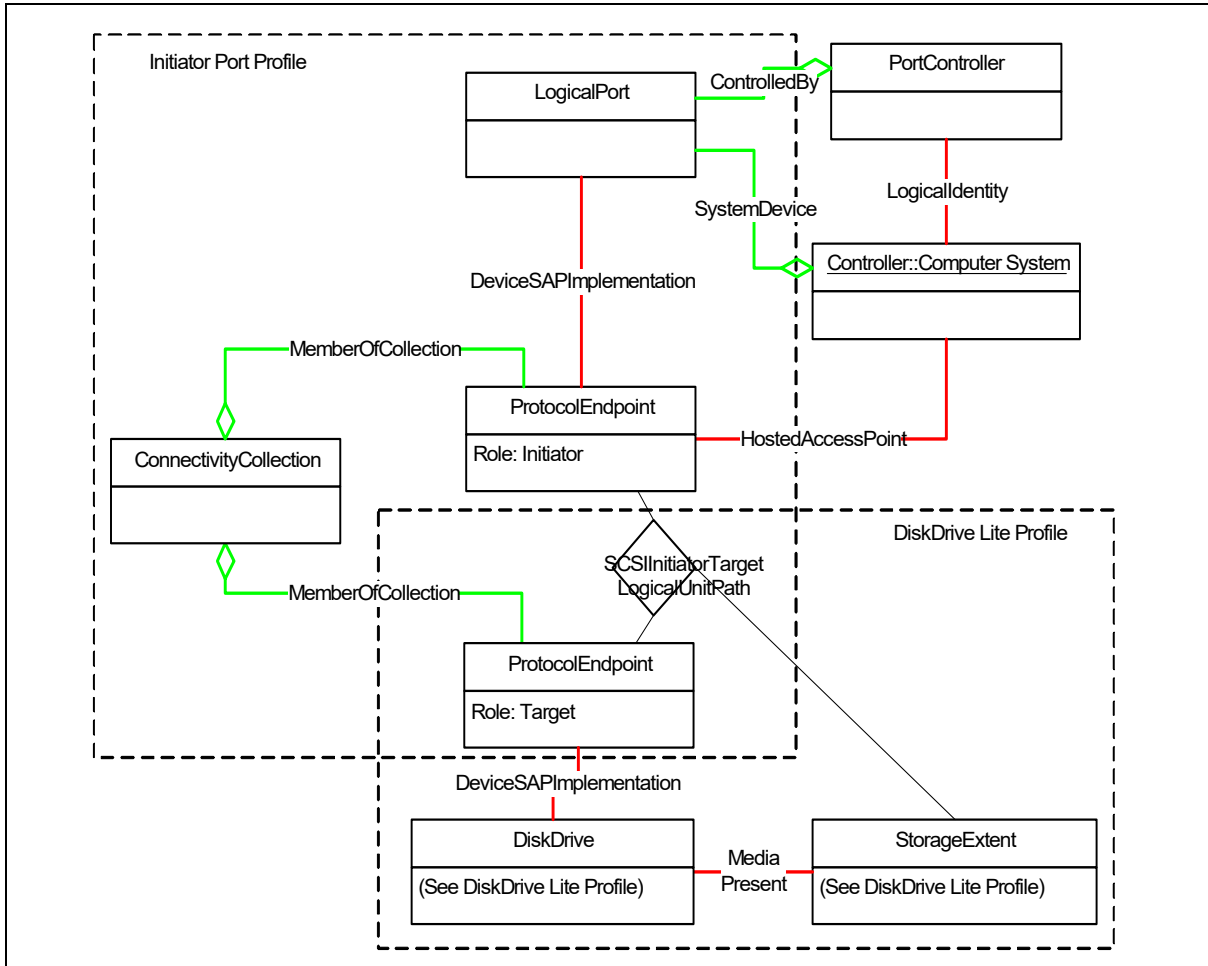


Figure 31 - Initiator Port profiles and Disk Drive Lite Profile

8.3.13.2 CIM_LogicalPort

CIM_LogicalPort represents the logical transport port on the back-end of the controller that is connected to the storage. This storage could be a drive cage housed inside the host or a storage device enclosure, like a JBOD. The LogicalPort class is intended to model the transport for storage commands in an abstract and agnostic manner. For example, the LogicalPort could represent a SCSI, SAS, ATA, or FC port depending on the controller implementation. Thus, the instance of this class shall be sub-classed to SPIPort, SASPort, FCPort or ATAPort depending on the subclass that best represents the transport type the controller supports for the backend port. The implementation shall not instantiate LogicalPort.

8.3.13.3 CIM_ProtocolEndpoint

The ProtocolEndpoint class represents the command set used between the controller and storage where the storage protocol is transmitted.

Like LogicalPort, the ProtocolEndpoint class is intended to model the storage protocol in an abstract manner. For example, the ProtocolEndpoint could represent a SCSI or ATA protocol. Thus, the instance of the ProtocolEndpoint shall be subclassed to SCSIProtocolEndpoint or ATAProtocolEndpoint.

8.3.14 Models for Imported Storage

8.3.14.1 Overview

In most cases, the storage imported by a Host Hardware Storage Controller is disk drives. It is possible that storage could be imported from another storage system (such as an Array) or non-disk devices (such as tape or optical media drives) could be attached to the RAID controller and passed through to the host.

8.3.14.2 Disks modeled with the Disk Drive Lite Profile

Individual disks are modeled using the Disk Drive Lite Profile (see *Storage Management Technical Specification, Part 4 Block Devices, 1.8.0 Rev 4 10 Disk Drive Lite Profile*). The model for imported disks is illustrated in Figure 32.

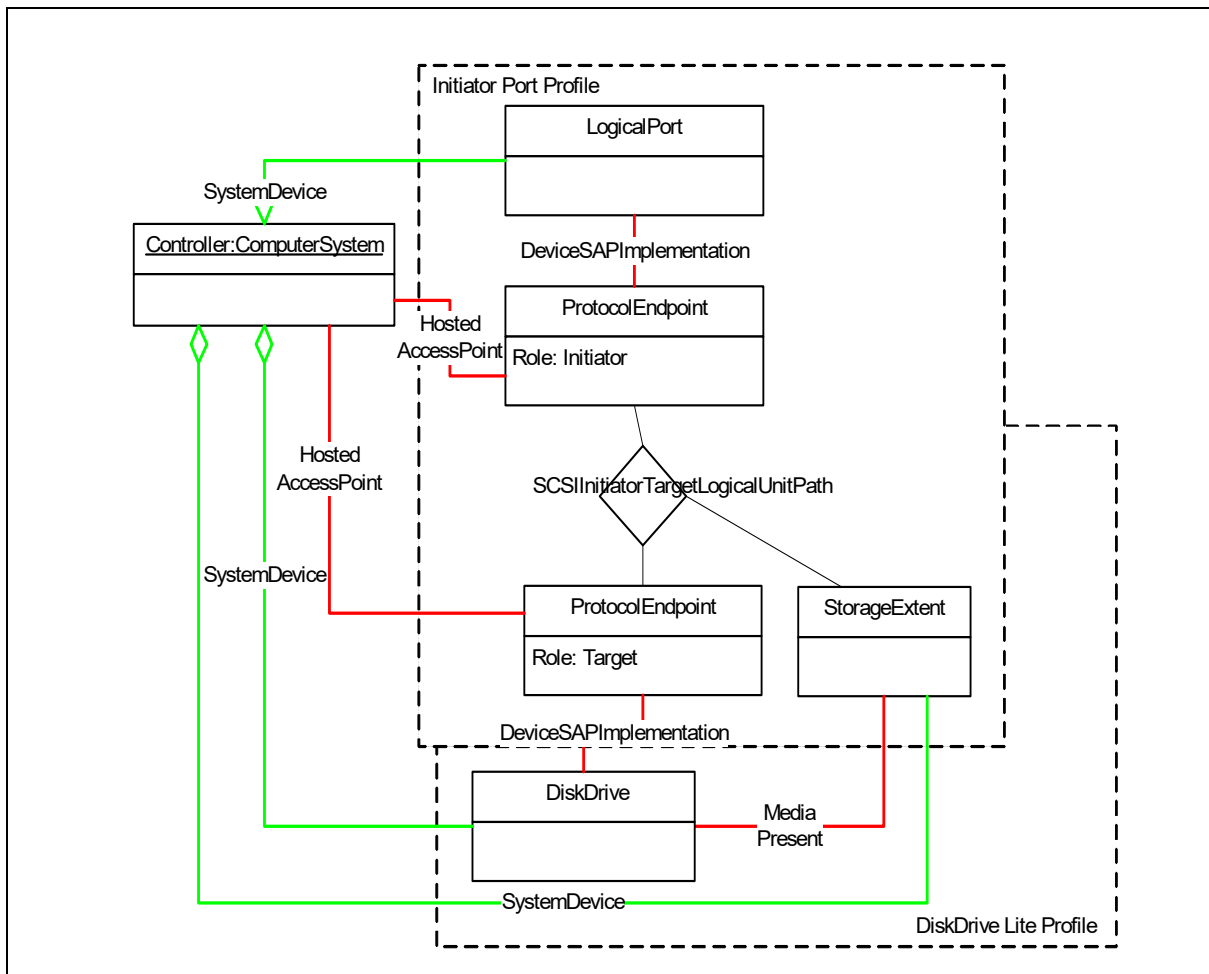


Figure 32 - Model for Imported Disks

To model one disk drive:

- The StorageExtent instance defined in Disk Drive Lite serves as the LogicalDevice defined in the initiator ports profiles

- The initiator and target ProtocolEndpoint instances (and appropriate associations) defined in the Disk Drive Lite Profile also serve as their equivalents in the Initiator Ports Profiles.

8.3.14.3 Virtual Volumes/Disks

Some host-based RAID controllers may be connected to another system that creates virtual volumes, such as a RAID Array. In this case, the implementation should model the storage from the array using a specialization of the Generic Initiator Port Profile and instantiating instances of StorageExtent to represent the imported volumes. Figure 33 shows this model.

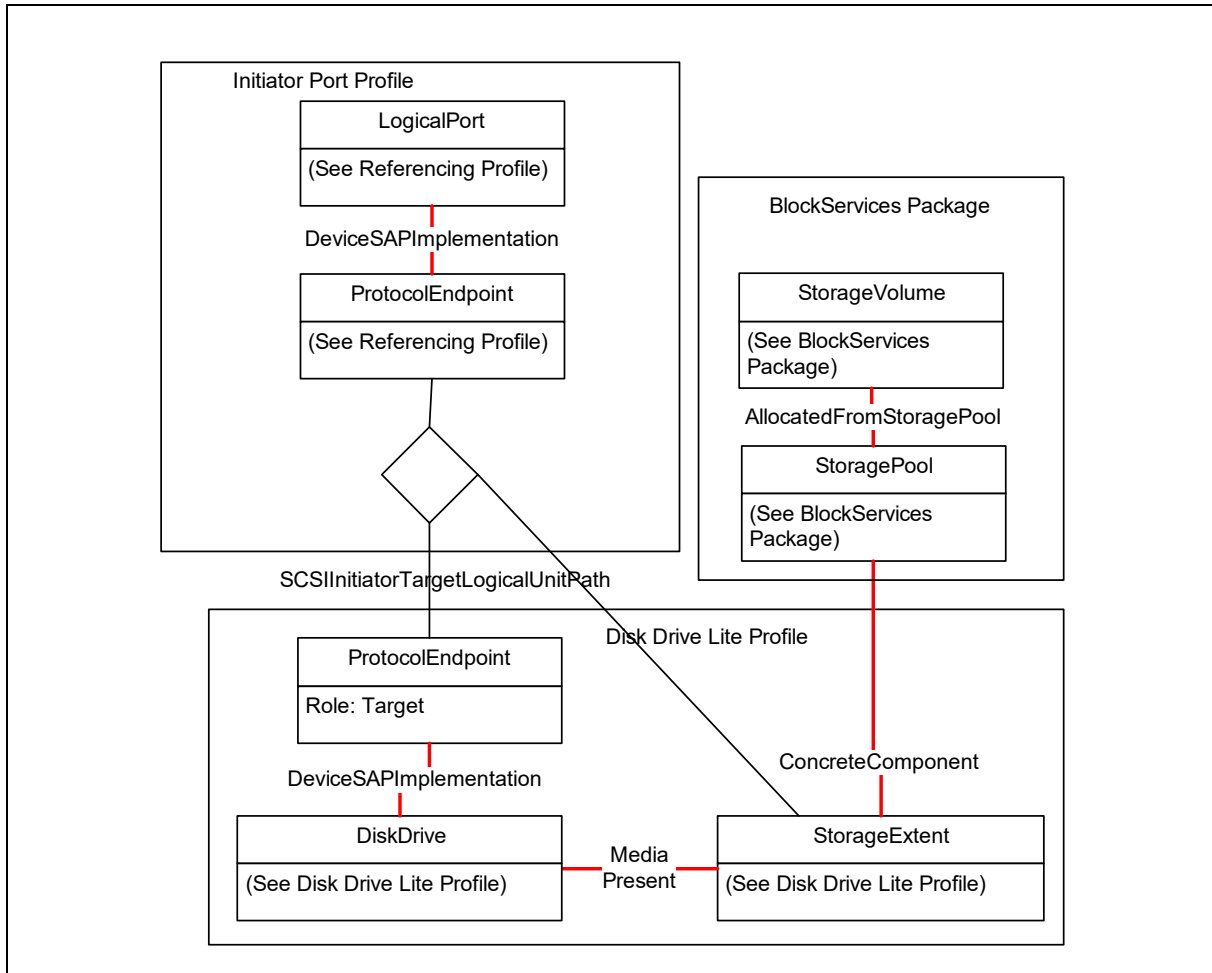


Figure 33 - Imported Virtual Volumes

8.3.14.4 Non-block Devices “Passed Through” with no Block Virtualization

A RAID controller may support attaching non-disk devices (tape or optical drives) and providing support to “pass through” these devices with no additional block virtualization. An instance of a LogicalDevice subclass (such as MediaAccessDevice) models these devices. Since these devices are exposed to the

host OS, this LogicalDevice is associated to the SCSIProtocolController (see 8.3.11 Implementation of DAPort and SCSIProtocolController). Figure 34 shows this model.

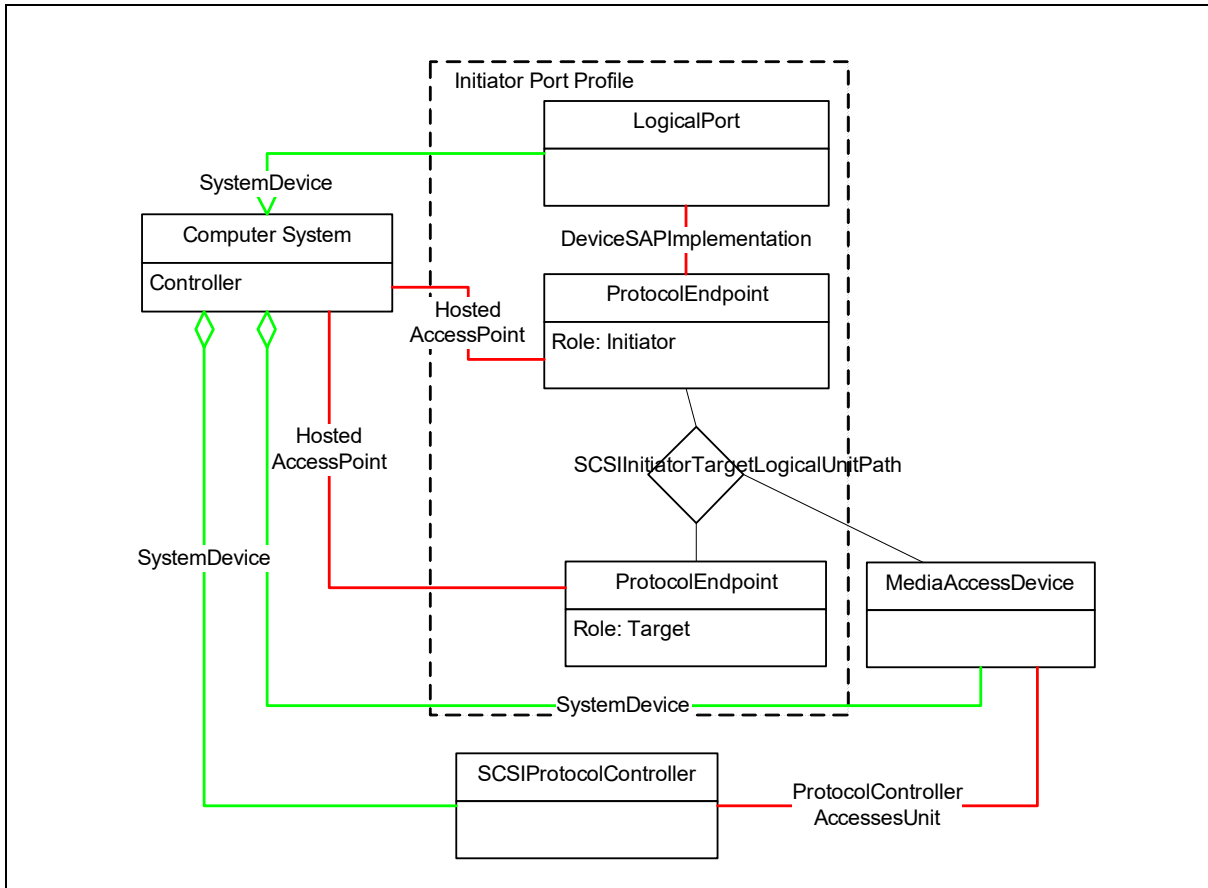


Figure 34 - Device “Pass Through” Example

8.3.15 Implementation of Extent Composition Profile

The Extent Composition Profile allows a Host Hardware RAID Controller Profile to expose the underlying storage composition of StoragePools and StorageVolumes. Composition of a StoragePool or StorageVolume is expressed through the use of StorageExtents associated to StoragePools and StorageExtents arranged in a hierarchical fashion.

For Host Hardware RAID Controller Profile, the use of the Extent Composition Profile is optional. However, the expectation is that most implementations will implement the Extent Composition Profile.

8.3.16 Disk Sparing

Many host-based RAID controllers have the ability to provide on-line, reserved storage components used to replace failed storage components. In the Host Hardware RAID Controller Profile, this behavior is modeled using the Disk Sparing Profile. If a controller supports on-line disk spares, then the implementation shall conditionally model this behavior using the Disk Sparing Profile.

Determination: At least one member of the primordial StorageExtents shall be associated to an instance of StorageRedundancySet. In turn, at least one or more of the StorageExtents that comprise a StoragePool or StorageVolume shall be associated to the same StorageRedundancySet.

8.3.17 Multi-function controllers

Many host-based RAID controllers support both RAID and non-RAID functionality on separate ports within the same controller card. If a controller supports multi-functional ports then the implementation shall conditionally model this behavior using multiple primordial storage pools. See Figure 35.

Determination: Each primordial storage pool shall represent a set of RAID or non-RAID storage attached to the RAID or non-RAID port. The CIM_StorageCapabilities class associated to the primordial storage pool shall signify which pools have RAID capabilities and which do not. The following CIM_StorageCapabilities properties and values shall be used to signify non-RAID primordial storage pool:

- PackageRedundancy(Min/Max/Default) = 0
- DataRedundancy(Min/Max/Default) = 1
- ExtentStripeLengthDefault = 1
- UserDataStripeDepthDefault = null
- ParityLayoutDefault = nul

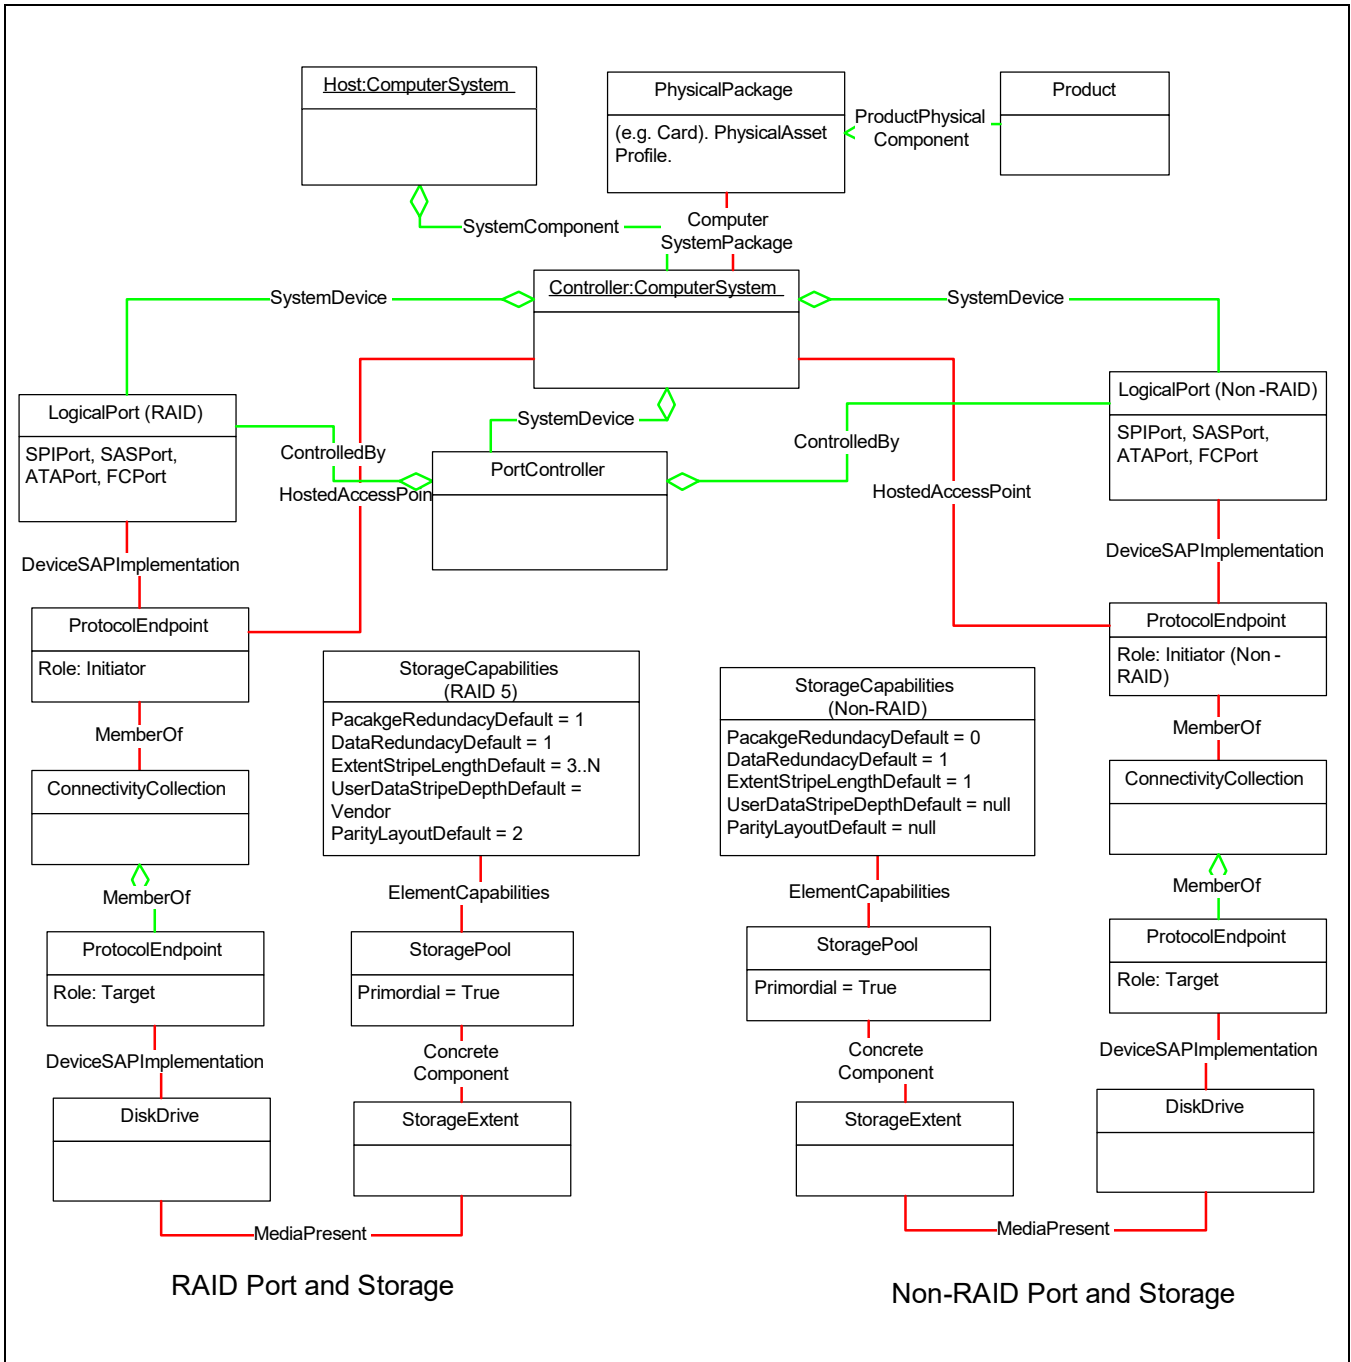


Figure 35 - Example of Mutli-Function Controllers

8.3.18 Health and Fault Management Consideration

Not defined in this document.

8.3.19 Cascading Considerations

Not defined in this document.

8.4 Methods

8.4.1 Extrinsic Methods of the Profile

8.4.1.1 AlarmDevice.SetAlarmIndicator

This method is used to enable/disable the audible or visual alarm indicator for the controller.

8.4.1.2 AlarmDevice.SetAlarmState

This method is used to set the state of the alarm. For the Host Hardware RAID Controller Profile the supported RequestedState parameters are:

- Off: Turns the alarm off for the current event, will alarm again for next event, state will automatically change from "off".
- Alternating: Turns the alarm on and off in an alternating fashion. This may be used to test the alarm.

8.4.2 Intrinsic Methods of this Profile

The profile supports read methods and association traversal. Specifically, the list of intrinsic operations supported are as follows:

- GetInstance
- Associators
- AssociatorNames
- References
- ReferenceNames
- EnumerateInstances
- EnumerateInstanceNames

8.5 Use Cases

No recipes are included in this version of the standard.

8.6 CIM Elements

8.6.1 Overview

Table 49 describes the CIM elements for Host Hardware RAID Controller.

Table 49 - CIM Elements for Host Hardware RAID Controller

| Element Name | Requirement | Description |
|--|-------------|--|
| 8.6.2 CIM_AlarmDevice | Optional | Represents indicator LEDs. |
| 8.6.3 CIM_AssociatedAlarm | Optional | Associates AlarmDevice and LogicalPort. |
| 8.6.4 CIM_ComputerSystem (Host Hardware RAID Controller) | Mandatory | System that represents the Host Hardware RAID controller. Associated to RegisteredProfile. |
| 8.6.5 CIM_ComputerSystemPackage (Associates PhysicalPackage to ComputerSystem) | Mandatory | Associates controller ComputerSystem and PhysicalPackage from the Physical Asset profile. |
| 8.6.6 CIM_ControlledBy | Mandatory | Associates PortController to LogicalPorts. |

Table 49 - CIM Elements for Host Hardware RAID Controller

| Element Name | Requirement | Description |
|--|-------------|---|
| 8.6.7 CIM_ElementCapabilities (ImplementationCapabilities to System) | Optional | Associates the conformant Host Hardware RAID Controller ComputerSystem to the CIM_ImplementationCapabilities supported by the implementation. |
| 8.6.8 CIM_ImplementationCapabilities (ImplementationCapabilities) | Optional | The capabilities of the profile implementation. |
| 8.6.9 CIM_LogicalIdentity | Mandatory | Used to associate the ComputerSystem representing the controller with PortController. |
| 8.6.10 CIM_MediaAccessDevice | Mandatory | Represents a tape or optical drive. |
| 8.6.11 CIM_PortController | Mandatory | Serves as a component of the server ComputerSystem and is associated to the controller ComputerSystem. |
| 8.6.12 CIM_Product | Mandatory | Asset information about the RAID controller. |
| 8.6.13 CIM_ProductPhysicalComponent | Mandatory | Associates Product and PhysicalPackage. |
| 8.6.14 CIM_ProtocolControllerForUnit (Extent or MediaAccessDevice) | Mandatory | Associates SCSIProtocolController to StorageExtent or MediaAccessDevice. |
| 8.6.15 CIM_ProtocolControllerForUnit (Volume) | Mandatory | Associated ProtocolController to StorageVolume. |
| 8.6.16 CIM_Realizes (Associates PhysicalPackage to PortController) | Mandatory | Associates PortController and PhysicalPackage from the Physical Asset profile. |
| 8.6.17 CIM_SAPAvailableForElement | Mandatory | Associates SCSIProtocolController to the DAPort ProtocolEndpoint. |
| 8.6.18 CIM_SCSIProtocolController | Mandatory | Represents the target/device aspects of storage exported by the RAID controller. |
| 8.6.19 CIM_SoftwareIdentity (Driver) | Mandatory | Override SoftwareIdentity from Software Inventory profile to assure Classifications property includes Driver. |
| 8.6.20 CIM_SoftwareIdentity (FCode/BIOS) | Optional | Override SoftwareIdentity from Software Inventory profile to assure Classifications property includes FCODE/BIOS. |
| 8.6.21 CIM_SoftwareIdentity (Firmware) | Optional | Override SoftwareIdentity from Software Inventory profile to assure Classifications property includes Firmware. |
| 8.6.22 CIM_StorageExtent | Optional | Models an imported volume from an external array. |
| 8.6.23 CIM_SystemComponent | Mandatory | Associates ComputerSystems representing the hosting system and the RAID controller. |
| 8.6.24 CIM_SystemDevice (Associates System to AlarmDevice) | Optional | Associates System to AlarmDevice. |
| 8.6.25 CIM_SystemDevice (Associates controller system to PortController) | Mandatory | Associates controller system to PortController. |
| 8.6.26 CIM_SystemDevice (System to SCSIProtocolController) | Mandatory | Links SCSIProtocolController to the controller system. |
| 8.6.27 CIM_ElementSoftwareIdentity (Driver) | Mandatory | Associates the CIM_ComputerSystem for the RAID Controller and SoftwareIdentity Driver instance. |
| 8.6.28 CIM_ElementSoftwareIdentity (Firmware or FCode/BIOS) | Optional | Associates the CIM_ComputerSystem for the RAID Controller and SoftwareIdentity Firmware or FCode/BIOS instance. |

Table 49 - CIM Elements for Host Hardware RAID Controller

| Element Name | Requirement | Description |
|--|-------------|---|
| SELECT * FROM CIM_InstCreation WHERE SourceInstance ISA CIM_ComputerSystem | Mandatory | Addition of a new Host Hardware RAID controller instance. |
| SELECT * FROM CIM_InstDeletion WHERE SourceInstance ISA CIM_ComputerSystem | Mandatory | Deletion of an Host Hardware RAID controller instance. |

8.6.2 CIM_AlarmDevice

Represents indicator LEDs.

Created By: Static

Modified By: Static

Deleted By: Static

Requirement: Optional

Table 50 describes class CIM_AlarmDevice.

Table 50 - SMI Referenced Properties/Methods for CIM_AlarmDevice

| Properties | Flags | Requirement | Description & Notes |
|-------------------------|-------|-------------|---------------------|
| SystemCreationClassName | | Mandatory | |
| SystemName | | Mandatory | |
| CreationClassName | | Mandatory | |
| DeviceID | | Mandatory | |
| VisibleAlarm | | Mandatory | |
| AudibleAlarm | | Mandatory | |
| Urgency | | Mandatory | |
| SetAlarmState() | | Mandatory | |
| SetAlarmIndicator() | | Mandatory | |

8.6.3 CIM_AssociatedAlarm

Associates AlarmDevice and LogicalPort.

Created By: Static

Modified By: Static

Deleted By: Static

Requirement: Optional

Table 51 describes class CIM_AssociatedAlarm.

Table 51 - SMI Referenced Properties/Methods for CIM_AssociatedAlarm

| Properties | Flags | Requirement | Description & Notes |
|------------|-------|-------------|-----------------------------|
| Antecedent | | Mandatory | Reference to an AlarmDevice |
| Dependent | | Mandatory | Reference to a LogicalPort |

8.6.4 CIM_ComputerSystem (Host Hardware RAID Controller)

System that represents the Host Hardware RAID controller.

Created By: Static

Modified By: Static

Deleted By: Static

Requirement: Mandatory

Shall be associated to RegisteredProfile using ElementConformsToProfile association. The RegisteredProfile instance shall have RegisteredName set to 'Host Hardware RAID Controller', RegisteredOrganization set to 'SNIA', and RegisteredVersion set to '1.7.0'.

Table 52 describes class CIM_ComputerSystem (Host Hardware RAID Controller).

Table 52 - SMI Referenced Properties/Methods for CIM_ComputerSystem (Host Hardware RAID Controller)

| Properties | Flags | Requirement | Description & Notes |
|---------------------|-------|-------------|--|
| CreationClassName | | Mandatory | |
| Name | | Mandatory | Identifier for the Host Hardware RAID Controller. |
| NameFormat | | Mandatory | Format for Name property. Shall be 'HID' for a hardware ID or 'Other'. |
| ElementName | | Mandatory | User friendly name. |
| Dedicated | | Mandatory | Shall include 30 (Host-Based RAID controller). |
| PrimaryOwnerContact | M | Optional | Contact a details for owner. |
| PrimaryOwnerName | M | Optional | Owner of the Host Hardware RAID. |

8.6.5 CIM_ComputerSystemPackage (Associates PhysicalPackage to ComputerSystem)

Associates controller ComputerSystem and PhysicalPackage from the Physical Asset profile. Overrides the definition in the PhysicalAsset profile to clarify that this association references the controller and not the hosting ComputerSystem.

Requirement: Mandatory

Table 53 describes class CIM_ComputerSystemPackage (Associates PhysicalPackage to ComputerSystem).

Table 53 - SMI Referenced Properties/Methods for CIM_ComputerSystemPackage (Associates Physical-Package to ComputerSystem)

| Properties | Flags | Requirement | Description & Notes |
|------------|-------|-------------|---|
| Dependent | | Mandatory | Reference to ComputerSystem with Dedicated=30 (Host-based RAID controller). |
| Antecedent | | Mandatory | |

8.6.6 CIM_ControlledBy

Associates PortController to LogicalPorts.

Created By: Static

Modified By: Static
 Deleted By: Static
 Requirement: Mandatory

Table 54 describes class CIM_ControlledBy.

Table 54 - SMI Referenced Properties/Methods for CIM_ControlledBy

| Properties | Flags | Requirement | Description & Notes |
|------------|-------|-------------|------------------------------|
| Dependent | | Mandatory | Reference to LogicalPort. |
| Antecedent | | Mandatory | Reference to PortController. |

8.6.7 CIM_ElementCapabilities (ImplementationCapabilities to System)

Associates the conformant Host Hardware RAID Controller ComputerSystem to the CIM_ImplementationCapabilities supported by the implementation.

Created By: Static
 Modified By: Static
 Deleted By: Static
 Requirement: Optional

Table 55 describes class CIM_ElementCapabilities (ImplementationCapabilities to System).

Table 55 - SMI Referenced Properties/Methods for CIM_ElementCapabilities (ImplementationCapabilities to System)

| Properties | Flags | Requirement | Description & Notes |
|----------------|-------|-------------|--|
| Capabilities | | Mandatory | The ImplementationCapabilities. |
| ManagedElement | | Mandatory | The conformant Host Hardware RAID Controller ComputerSystem that has ImplementationCapabilities. |

8.6.8 CIM_ImplementationCapabilities (ImplementationCapabilities)

The capabilities (features) of the profile implementation.

Created By: Static
 Modified By: Static
 Deleted By: Static
 Requirement: Optional

Table 56 describes class CIM_ImplementationCapabilities (ImplementationCapabilities).

Table 56 - SMI Referenced Properties/Methods for CIM_ImplementationCapabilities (ImplementationCapabilities)

| Properties | Flags | Requirement | Description & Notes |
|--------------------------------|-------|-------------|---|
| InstanceID | | Mandatory | An opaque, unique id for the implementation capability of an implementation. |
| ElementName | | Optional | A provider supplied user-friendly name for this CIM_ImplementationCapabilities element. |
| SupportedCapacityOptimizations | | Mandatory | This array of strings lists the capacity optimization techniques that are supported by the implementation. Valid string values are "none" "SNIA:Thin Provisioning" "SNIA:Data Compression" "SNIA:Data Deduplication". |
| SupportedViews | | Mandatory | This array of strings lists the view classes that are supported by the implementation. Valid string values are "none" "SNIA:VolumeView" "SNIA:DiskDriveView" "SNIA:StoragePoolView" "SNIA:ReplicaPairView". |

8.6.9 CIM_LogicalIdentity

Associates the ComputerSystem representing the controller and the PortController.

Created By: Static

Modified By: Static

Deleted By: Static

Requirement: Mandatory

Table 57 describes class CIM_LogicalIdentity.

Table 57 - SMI Referenced Properties/Methods for CIM_LogicalIdentity

| Properties | Flags | Requirement | Description & Notes |
|---------------|-------|-------------|--|
| SameElement | | Mandatory | Reference to the ComputerSystem representing the controller. |
| SystemElement | | Mandatory | Reference to the PortController. |

8.6.10 CIM_MediaAccessDevice

Represents a tape or optical drive.

Created By: Static

Modified By: Static

Deleted By: Static

Requirement: Mandatory

Table 58 describes class CIM_MediaAccessDevice.

Table 58 - SMI Referenced Properties/Methods for CIM_MediaAccessDevice

| Properties | Flags | Requirement | Description & Notes |
|-------------------------|-------|-------------|--|
| SystemCreationClassName | | Mandatory | |
| SystemName | | Mandatory | |
| CreationClassName | | Mandatory | |
| DeviceID | | Mandatory | |
| Name | | Mandatory | |
| OperationalStatus | | Mandatory | Shall be 2 5 6 8 10 11 (Okay or Predictive Failure or Error or Starting or Stopping or Stopped). |
| LocationIndicator | | Optional | |

8.6.11 CIM_PortController

Serves as a component of the server ComputerSystem and is associated to the controller ComputerSystem.

Created By: Static

Modified By: Static

Deleted By: Static

Requirement: Mandatory

Table 59 describes class CIM_PortController.

Table 59 - SMI Referenced Properties/Methods for CIM_PortController

| Properties | Flags | Requirement | Description & Notes |
|-------------------------|-------|-------------|---|
| SystemCreationClassName | | Mandatory | |
| SystemName | | Mandatory | |
| CreationClassName | | Mandatory | |
| DeviceID | | Mandatory | |
| ControllerType | | Mandatory | Shall be 1 or 4 (Other or FC). |
| OtherControllerType | | Conditional | Conditional requirement: For non-FC, PortController.OtherControllerType is mandatory. Shall be SPI or SAS or ATA or SAS/SATA. |

8.6.12 CIM_Product

Asset information about the RAID controller.

Created By: Static

Modified By: Static

Deleted By: Static

Requirement: Mandatory

Table 60 describes class CIM_Product.

Table 60 - SMI Referenced Properties/Methods for CIM_Product

| Properties | Flags | Requirement | Description & Notes |
|-------------------|-------|-------------|---|
| Name | | Mandatory | Shall have the same value as PhysicalPackage.Model. |
| IdentifyingNumber | | Mandatory | Shall have the same value as PhysicalPackage.SerialNumber. |
| Vendor | | Mandatory | Shall have the same value as PhysicalPackage.Manufacturer. |
| Version | | Mandatory | Shall have the same value as PhysicalPackage.Version. Represents a version for the physical element. |
| ElementName | | Mandatory | |

8.6.13 CIM_ProductPhysicalComponent

Associates Product and PhysicalPackage.

Created By: Static

Modified By: Static

Deleted By: Static

Requirement: Mandatory

Table 61 describes class CIM_ProductPhysicalComponent.

Table 61 - SMI Referenced Properties/Methods for CIM_ProductPhysicalComponent

| Properties | Flags | Requirement | Description & Notes |
|----------------|-------|-------------|--------------------------------|
| GroupComponent | | Mandatory | Reference to a Product |
| PartComponent | | Mandatory | Reference to a PhysicalPackage |

8.6.14 CIM_ProtocolControllerForUnit (Extent or MediaAccessDevice)

Associates SCSIProtocolController to StorageExtent or MediaAccessDevice.

Created By: Static

Modified By: Static

Deleted By: Static

Requirement: Mandatory

Table 62 describes class CIM_ProtocolControllerForUnit (Extent or MediaAccessDevice).

Table 62 - SMI Referenced Properties/Methods for CIM_ProtocolControllerForUnit (Extent or MediaAccess-Device)

| Properties | Flags | Requirement | Description & Notes |
|--------------|-------|-------------|---|
| DeviceNumber | | Mandatory | Logical Unit Number of the associated Device. Shall be formatted as unseparated uppercase hexadecimal digits, with no leading 0x. |
| DeviceAccess | | Optional | The access rights granted to the referenced logical unit as exposed through referenced ProtocolController. |

Table 62 - SMI Referenced Properties/Methods for CIM_ProtocolControllerForUnit (Extent or MediaAccess-Device)

| Properties | Flags | Requirement | Description & Notes |
|------------|-------|-------------|--|
| Antecedent | | Mandatory | Reference to a SCSIProtocolController. |
| Dependent | | Mandatory | Reference to a StorageExtent or MediaAccessDevice. |

8.6.15 CIM_ProtocolControllerForUnit (Volume)

Associated ProtocolController to StorageVolume.

Created By: Static

Modified By: Static

Deleted By: Static

Requirement: Mandatory

Table 63 describes class CIM_ProtocolControllerForUnit (Volume).

Table 63 - SMI Referenced Properties/Methods for CIM_ProtocolControllerForUnit (Volume)

| Properties | Flags | Requirement | Description & Notes |
|--------------|-------|-------------|---|
| DeviceNumber | | Mandatory | Address (e.g., LUN) of the associated Device. Shall be formatted as unseparated uppercase hexadecimal digits, with no leading 0x. |
| DeviceAccess | | Optional | The access rights granted to the referenced logical unit as exposed through referenced ProtocolController. |
| Antecedent | | Mandatory | |
| Dependent | | Mandatory | Reference to a StorageVolume. |

8.6.16 CIM_Realizes (Associates PhysicalPackage to PortController)

Associates PortController and PhysicalPackage from the Physical Asset profile.

Requirement: Mandatory

Table 64 describes class CIM_Realizes (Associates PhysicalPackage to PortController).

Table 64 - SMI Referenced Properties/Methods for CIM_Realizes (Associates PhysicalPackage to PortController)

| Properties | Flags | Requirement | Description & Notes |
|------------|-------|-------------|---------------------------------|
| Dependent | | Mandatory | Reference to a PortController. |
| Antecedent | | Mandatory | Reference to a PhysicalPackage. |

8.6.17 CIM_SAPAvailableForElement

Associates SCSIProtocolController to the DAPort ProtocolEndpoint.

Created By: Static

Modified By: Static

Deleted By: Static

Requirement: Mandatory

Table 65 describes class CIM_SAPAvailableForElement.

Table 65 - SMI Referenced Properties/Methods for CIM_SAPAvailableForElement

| Properties | Flags | Requirement | Description & Notes |
|----------------|-------|-------------|--|
| ManagedElement | | Mandatory | Reference to a SCSIProtocolController. |
| AvailableSAP | | Mandatory | Reference to a SCSIProtocolEndpoint. |

8.6.18 CIM_SCSIProtocolController

Represents the target/device aspects of storage exported by the RAID controller.

Created By: Static

Modified By: Static

Deleted By: Static

Requirement: Mandatory

Table 66 describes class CIM_SCSIProtocolController.

Table 66 - SMI Referenced Properties/Methods for CIM_SCSIProtocolController

| Properties | Flags | Requirement | Description & Notes |
|-------------------------|-------|-------------|---------------------|
| SystemCreationClassName | | Mandatory | |
| SystemName | | Mandatory | |
| CreationClassName | | Mandatory | |
| DeviceID | | Mandatory | |

8.6.19 CIM_SoftwareIdentity (Driver)

Override SoftwareIdentity from Software Inventory profile to assure Classifications property includes Driver.

Created By: Static

Modified By: Static

Deleted By: Static

Requirement: Mandatory

Table 67 describes class CIM_SoftwareIdentity (Driver).

Table 67 - SMI Referenced Properties/Methods for CIM_SoftwareIdentity (Driver)

| Properties | Flags | Requirement | Description & Notes |
|-----------------|-------|-------------|---------------------------|
| InstanceID | | Mandatory | Key. |
| Classifications | | Mandatory | Shall include 2 (Driver). |

8.6.20 CIM_SoftwareIdentity (FCode/BIOS)

Override SoftwareIdentity from Software Inventory profile to assure Classifications property includes FCODE/BIOS.

Created By: Static

Modified By: Static

Deleted By: Static

Requirement: Optional

Table 68 describes class CIM_SoftwareIdentity (FCode/BIOS).

Table 68 - SMI Referenced Properties/Methods for CIM_SoftwareIdentity (FCode/BIOS)

| Properties | Flags | Requirement | Description & Notes |
|-----------------|-------|-------------|--------------------------------|
| InstanceID | | Mandatory | Key. |
| Classifications | | Mandatory | Shall include 11 (FCODE/BIOS). |

8.6.21 CIM_SoftwareIdentity (Firmware)

Override SoftwareIdentity from Software Inventory profile to assure Classifications property includes Firmware.

Created By: Static

Modified By: Static

Deleted By: Static

Requirement: Optional

Table 69 describes class CIM_SoftwareIdentity (Firmware).

Table 69 - SMI Referenced Properties/Methods for CIM_SoftwareIdentity (Firmware)

| Properties | Flags | Requirement | Description & Notes |
|-----------------|-------|-------------|------------------------------|
| InstanceID | | Mandatory | Key. |
| Classifications | | Mandatory | Shall include 10 (Firmware). |

8.6.22 CIM_StorageExtent

Created By: External

Modified By: External

Deleted By: External

Requirement: Optional

Table 70 describes class CIM_StorageExtent.

Table 70 - SMI Referenced Properties/Methods for CIM_StorageExtent

| Properties | Flags | Requirement | Description & Notes |
|-------------------------|-------|-------------|---------------------|
| SystemCreationClassName | | Mandatory | |
| SystemName | | Mandatory | |

Table 70 - SMI Referenced Properties/Methods for CIM_StorageExtent

| Properties | Flags | Requirement | Description & Notes |
|-------------------|-------|-------------|---|
| CreationClassName | | Mandatory | |
| DeviceID | | Mandatory | |
| BlockSize | | Mandatory | |
| NumberOfBlocks | | Mandatory | The number of blocks as reported by the hardware. |
| ConsumableBlocks | | Mandatory | The number of usable blocks. |
| Primordial | | Mandatory | Shall be true. |
| OperationalStatus | | Mandatory | |

8.6.23 CIM_SystemComponent

Associates ComputerSystems representing the hosting system and the RAID controller.

Created By: Static

Modified By: Static

Deleted By: Static

Requirement: Mandatory

Table 71 describes class CIM_SystemComponent.

Table 71 - SMI Referenced Properties/Methods for CIM_SystemComponent

| Properties | Flags | Requirement | Description & Notes |
|----------------|-------|-------------|--|
| GroupComponent | | Mandatory | ComputerSystem with Dedicated=0 (Not Dedicated) hosting controllers. |
| PartComponent | | Mandatory | ComputerSystem with Dedicated=30(Host-based RAID controller)representing a controller. |

8.6.24 CIM_SystemDevice (Associates System to AlarmDevice)

Associates System to AlarmDevice.

Created By: Static

Modified By: Static

Deleted By: Static

Requirement: Optional

Table 72 describes class CIM_SystemDevice (Associates System to AlarmDevice).

Table 72 - SMI Referenced Properties/Methods for CIM_SystemDevice (Associates System to AlarmDevice)

| Properties | Flags | Requirement | Description & Notes |
|----------------|-------|-------------|---|
| GroupComponent | | Mandatory | Reference to ComputerSystem with Dedicated=30 (Host-based RAID controller). |
| PartComponent | | Mandatory | |

8.6.25 CIM_SystemDevice (Associates controller system to PortController)

Associates controller system to PortController.

Created By: Static

Modified By: Static

Deleted By: Static

Requirement: Mandatory

Table 73 describes class CIM_SystemDevice (Associates controller system to PortController).

Table 73 - SMI Referenced Properties/Methods for CIM_SystemDevice (Associates controller system to PortController)

| Properties | Flags | Requirement | Description & Notes |
|----------------|-------|-------------|---|
| GroupComponent | | Mandatory | Reference to ComputerSystem with Dedicated = 30 (Host-based RAID controller). |
| PartComponent | | Mandatory | |

8.6.26 CIM_SystemDevice (System to SCSIProtocolController)

Links SCSIProtocolController to the controller system.

Created By: Static

Modified By: Static

Deleted By: Static

Requirement: Mandatory

Table 74 describes class CIM_SystemDevice (System to SCSIProtocolController).

Table 74 - SMI Referenced Properties/Methods for CIM_SystemDevice (System to SCSIProtocolController)

| Properties | Flags | Requirement | Description & Notes |
|----------------|-------|-------------|---|
| PartComponent | | Mandatory | |
| GroupComponent | | Mandatory | Reference to ComputerSystem with Dedicated = 30 (Host-based RAID controller). |

8.6.27 CIM_ElementSoftwareIdentity (Driver)

Created By: Static

Modified By: Static

Deleted By: Static

Requirement: Mandatory

Table 75 describes class CIM_ElementSoftwareIdentity (Driver).

Table 75 - SMI Referenced Properties/Methods for CIM_ElementSoftwareIdentity (Driver)

| Properties | Flags | Requirement | Description & Notes |
|------------|-------|-------------|---|
| Antecedent | | Mandatory | Reference to the Driver SoftwareIdentity. |
| Dependent | | Mandatory | Reference to the Host Hardware RAID Controller Computer System. |

8.6.28 CIM_ElementSoftwareIdentity (Firmware or FCode/BIOS)

Created By: Static

Modified By: Static

Deleted By: Static

Requirement: Optional

Table 76 describes class CIM_ElementSoftwareIdentity (Firmware or FCode/BIOS).

Table 76 - SMI Referenced Properties/Methods for CIM_ElementSoftwareIdentity (Firmware or FCode/BIOS)

| Properties | Flags | Requirement | Description & Notes |
|------------|-------|-------------|---|
| Antecedent | | Mandatory | Reference to a Firmware or FCode/BIOS SoftwareIdentity. |
| Dependent | | Mandatory | Reference to the Host Hardware RAID Controller Computer System. |

EXPERIMENTAL

AlarmDevice.SetAlarmState

EXPERIMENTAL

9 iSCSI Initiator Profile

9.1 Description

9.1.1 Synopsis

Profile Name: iSCSI Initiator (Autonomous Profile)

Version: 1.1.0

Organization: SNIA

Central Class: CIM_ComputerSystem

Scoping Class: CIM_ComputerSystem

Related Profiles: Table 77 describes the supported profiles for iSCSI Initiator.

Table 77 - Supported Profiles for iSCSI Initiator

| Profile Name | Organization | Version | Requirement | Description |
|-----------------------|--------------|---------|-------------|-------------|
| iSCSI Initiator Ports | SNIA | 1.7.0 | Optional | |
| LaunchInContext | SNIA | 1.0.0 | Optional | |

9.1.2 Overview

An iSCSI initiator is the hardware and driver combination that acts as a client to an iSCSI target device. iSCSI initiators may utilize general –purpose Network Interface Cards (NICs) or hardware optimized for storage such as TCP Offload Engines (TOEs). iSCSI initiators may be running on a customer server or the “back end” of a bridge or virtualizer.

iSCSI terminology, shown in Table 78, spans SCSI and network concepts and introduces new terms. Table 78 is a summary of some key iSCSI terms, their equivalent CIM classes, and definitions (from the IETF iSCSI RFC).

Table 78 - iSCSI Terminology

| iSCSI Term | CIM Class Name | Notes |
|----------------|-------------------------|---|
| Network Entity | ComputerSystem | The Network Entity represents a device or gateway that is accessible from the IP network. A Network Entity shall have one or more Network Portals, each of which can be used to gain access to the IP network by some iSCSI Nodes contained in that Network Entity. |
| Session | iSCSI Session | The group of TCP connections that link an initiator with a target form a session (loosely equivalent to a SCSI I-T nexus). TCP connections can be added and removed from a session. Across all connections within a session, an initiator sees one and the same target. |
| Connection | iSCSI Connection | A connection is a TCP connection. Communication between the initiator and target occurs over one or more TCP connections. The TCP connections carry control messages, SCSI commands, parameters, and data within iSCSI Protocol Data Units (iSCSI PDUs). |
| SCSI Port | iSCSI Protocol Endpoint | A SCSI Port using an iSCSI service delivery subsystem. A collection of Network Portals that together act as a SCSI initiator or target. |

Table 78 - iSCSI Terminology (Continued)

| | | |
|----------------|---|--|
| Network Portal | TCPProtocolEndpoint, IPProtocolEndpoint, EthernetPort | The Network Portal is a component of a Network Entity that has a TCP/IP network address and that may be used by an iSCSI Node within that Network Entity for the connection(s) within one of its iSCSI sessions. A Network Portal in an initiator is identified by its IP address. A Network Portal in a target is identified by its IP address and its listening TCP port. |
| Node | SCSIProtocolController | The iSCSI Node represents a single iSCSI initiator or iSCSI target. There are one or more iSCSI Nodes within a Network Entity. The iSCSI Node is accessible via one or more Network Portals. An iSCSI Node is identified by its iSCSI Name. The separation of the iSCSI Name from the addresses used by and for the iSCSI Node allows multiple iSCSI nodes to use the same address, and the same iSCSI node to use multiple addresses. |

This profile requires the iSCSI Initiator Port Profile (see *Storage Management Technical Specification, Part 3 Common Profiles, 1.8.0 Rev 4, 15 iSCSI Initiator Port Profile*) that includes classes (EthernetPort, iSCSIProtocolEndpoint) that model SCSI ports and network portals.

Figure 36: "iSCSI Product and Package Model" models the relationships between the iSCSI port classes and physical and product classes. A single iSCSI card may contain multiple Ethernet ports. PhysicalPackage subclass Card models an add-in card with multiple Ethernet ports. Other PhysicalPackage subclasses may be used to model Ethernet ports embedded on a mainboard. PortController models a common management interface to multiple Ethernet ports.

ComputerSystem models the system hosting the initiator components. This is the same instance as iSCSI Network Entity in Figure 36: "iSCSI Product and Package Model".

An implementation includes single instances of PhysicalPackage, Product, and PortController, plus SoftwareIdentity instances for the driver, firmware, and Fcode/BIOS. The Product instance may be shared across cards with the same make and model

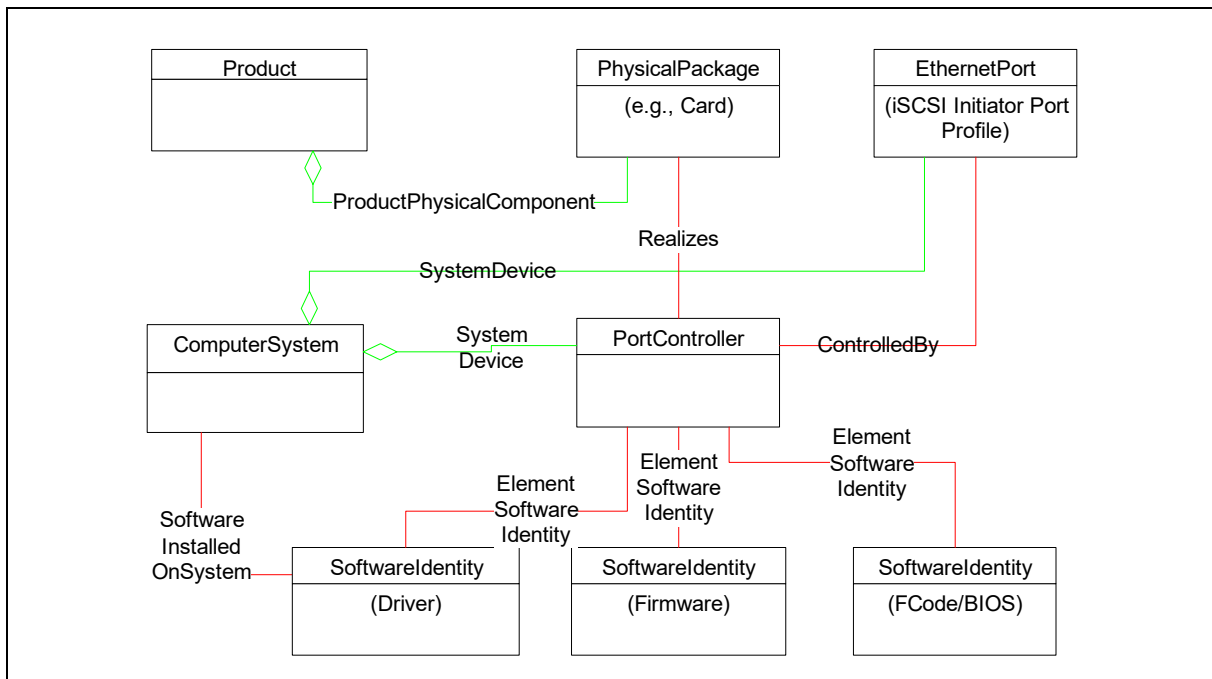


Figure 36 - iSCSI Product and Package Model

9.1.3 Sessions and Connections

A session is an active communication stream between an iSCSI initiator port and an iSCSI target port. However, any given session may contain part or all of the TCP/IP addresses within a Portal Group. Conceptually, a Portal Group is a pool of addresses which may be used to create/receive a session.

The implementation may optionally model iSCSI sessions and connections with instances of iSCSISession and iSCSIConnection classes associate to iSCSIProtocolEndpoint and TCPProtocolEndpoint (respectively) using EndpointOfNetworkPipe association.

Figure 37 shows the iSCSI Sessions and Connections Model.

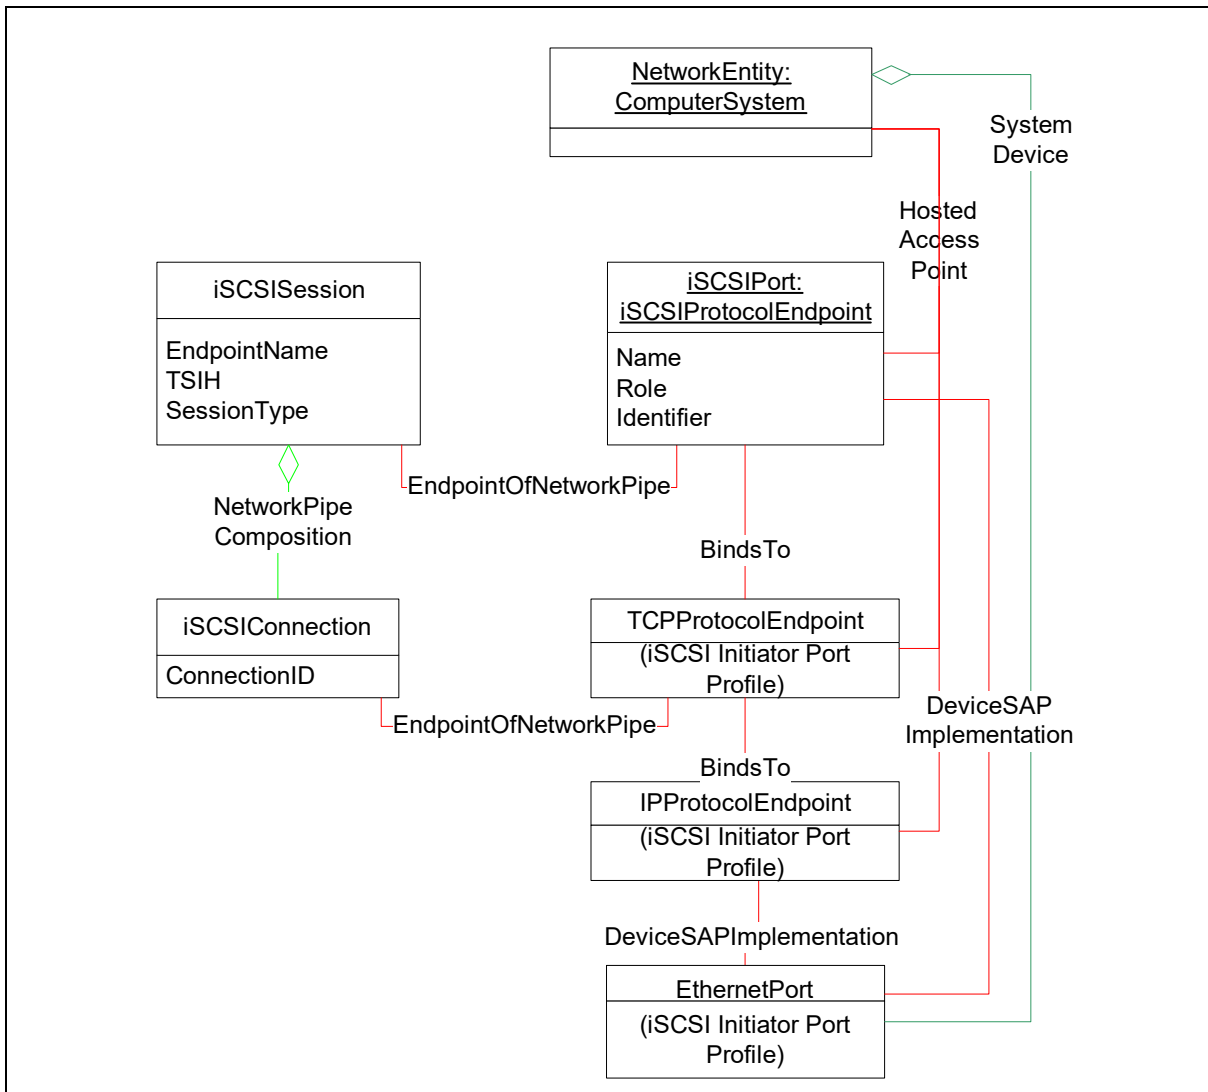


Figure 37 - iSCSI Sessions and Connections Model

There should be a single instance of SCSIProtocolController representing the initiator iSCSI node, shown in Figure 38. This is associated via SystemDevice to the ComputerSystem. See Figure 36: "iSCSI Product and Package Model".

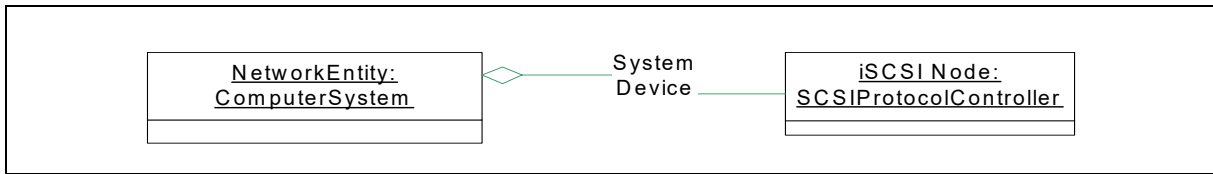


Figure 38 - iSCSI Initiator Node

9.1.4 Durable Names and Correlatable IDs of the Profile

The Name property for the iSCSI node (SCSIProtocolController) shall be a compliant iSCSI name as described in *Storage Management Technical Specification, Part 3 Common Profiles, 1.8.0 Rev 4 7.8* and NameFormat shall be set to "iSCSI Name".

The Name property for iSCSIProtocolEndpoint shall be a compliant iSCSI name as described in *Storage Management Technical Specification, Part 3 Common Profiles, 1.8.0 Rev 4 7.8* and ConnectionType shall be set to "iSCSI".

The Name property for EthernetPort shall be a compliant iSCSI name as described in *Storage Management Technical Specification, Part 2 Common Architecture, 1.8.0 Rev 4, 7.8*.

9.2 Health and Fault Management Considerations

The status of an Ethernet port may be determined by the value of the OperationalStatus property. Table 79 defines the possible states that shall be supported for EthernetPort.OperationalStatus. The main OperationalStatus shall be the first element in the array.

Table 79 - OperationalStatus Values

| OperationalStatus | Description |
|-------------------|----------------------|
| OK | Port is online |
| Error | Port has a failure |
| Stopped | Port is disabled |
| InService | Port is in Self Test |

9.3 Methods of the Profile

Not defined in this document

9.4 Use Cases

Not defined in this version of the standard.

9.5 CIM Elements

9.5.1 Overview

Table 80 describes the CIM elements for iSCSI Initiator.

Table 80 - CIM Elements for iSCSI Initiator

| Element Name | Requirement | Description |
|---|-------------|----------------------------------|
| 9.5.2 CIM_BindsTo (TCPProtocolEndpoint to IPProtocolEndpoint) | Mandatory | |
| 9.5.3 CIM_BindsTo (iSCSIProtocolEndpoint to TCPProtocolEndpoint) | Mandatory | |
| 9.5.4 CIM_ComputerSystem | Mandatory | Associated to RegisteredProfile. |
| 9.5.5 CIM_ControlledBy | Optional | |
| 9.5.6 CIM_DeviceSAPImplementation (EthernetPort to IPProtocolEndpoint) | Optional | |
| 9.5.7 CIM_DeviceSAPImplementation (EthernetPort to iSCSIProtocolEndpoint) | Optional | |
| 9.5.8 CIM_ElementSoftwareIdentity | Mandatory | |
| 9.5.9 CIM_EndpointOfNetworkPipe (Between iSCSI Session and iSCSIProtocolEndpoint) | Mandatory | |
| 9.5.10 CIM_EndpointOfNetworkPipe (Between iSCSI connection and TCPProtocolEndpoint) | Mandatory | |
| 9.5.11 CIM_InstalledSoftwareIdentity | Optional | |
| 9.5.12 CIM_NetworkPipeComposition | Mandatory | |
| 9.5.13 CIM_PhysicalPackage | Mandatory | |
| 9.5.14 CIM_PortController | Optional | |
| 9.5.15 CIM_Product | Mandatory | |
| 9.5.16 CIM_ProductPhysicalComponent | Mandatory | |
| 9.5.17 CIM_Realizes | Mandatory | |
| 9.5.18 CIM_SAPAvailableForElement | Mandatory | |
| 9.5.19 CIM_SCSIProtocolController | Mandatory | |
| 9.5.20 CIM_SoftwareIdentity | Optional | |
| 9.5.21 CIM_SystemDevice (to EthernetPort) | Mandatory | |
| 9.5.22 CIM_SystemDevice (to PortController) | Mandatory | |
| 9.5.23 CIM_SystemDevice (to ProtocolController) | Mandatory | |
| 9.5.24 CIM_iSCSIConnection | Optional | |
| 9.5.25 CIM_iSCSISession | Mandatory | |
| SELECT * FROM CIM_InstCreation WHERE SourceInstance ISA CIM_PortController | Optional | PortController (HBA) Creation. |
| SELECT * FROM CIM_InstDeletion WHERE SourceInstance ISA CIM_PorController | Optional | PortController (HBA) Removal. |

9.5.2 CIM_BindsTo (TCPProtocolEndpoint to IPProtocolEndpoint)

Created By: Static
Modified By: Static
Deleted By: Static
Requirement: Mandatory

Table 81 describes class CIM_BindsTo (TCPProtocolEndpoint to IPProtocolEndpoint).

Table 81 - SMI Referenced Properties/Methods for CIM_BindsTo (TCPProtocolEndpoint to IPProtocolEndpoint)

| Properties | Flags | Requirement | Description & Notes |
|------------|-------|-------------|------------------------------------|
| Dependent | | Mandatory | Reference to a TCPProtocolEndpoint |
| Antecedent | | Mandatory | Reference to an IPProtocolEndpoint |

9.5.3 CIM_BindsTo (iSCSIProtocolEndpoint to TCPProtocolEndpoint)

Created By: Static
Modified By: Static
Deleted By: Static
Requirement: Mandatory

Table 82 describes class CIM_BindsTo (iSCSIProtocolEndpoint to TCPProtocolEndpoint).

Table 82 - SMI Referenced Properties/Methods for CIM_BindsTo (iSCSIProtocolEndpoint to TCPProtocolEndpoint)

| Properties | Flags | Requirement | Description & Notes |
|------------|-------|-------------|---------------------------------------|
| Dependent | | Mandatory | Reference to an iSCSIProtocolEndpoint |
| Antecedent | | Mandatory | Reference to a TCPProtocolEndpoint |

9.5.4 CIM_ComputerSystem

Created By: Static
Modified By: Static
Deleted By: Static
Requirement: Mandatory

Shall be associated to RegisteredProfile using ElementConformsToProfile association. The RegisteredProfile instance shall have RegisteredName set to 'iSCSI Initiator', RegisteredOrganization set to 'SNIA', and RegisteredVersion set to '1.1.0'.

Table 83 describes class CIM_ComputerSystem.

Table 83 - SMI Referenced Properties/Methods for CIM_ComputerSystem

| Properties | Flags | Requirement | Description & Notes |
|-------------------|-------|-------------|--|
| CreationClassName | | Mandatory | |
| Name | | Mandatory | The name of the host containing the iSCSI initiator. |

Table 83 - SMI Referenced Properties/Methods for CIM_ComputerSystem

| Properties | Flags | Requirement | Description & Notes |
|----------------------------|-------|-------------|---------------------------|
| ElementName | | Mandatory | |
| NameFormat | | Mandatory | |
| OtherIdentifyingInfo | C | Mandatory | |
| OperationalStatus | | Mandatory | |
| Dedicated | | Mandatory | Shall be "Not Dedicated". |
| OtherDedicatedDescriptions | | Optional | |

9.5.5 CIM_ControlledBy

Created By: Static

Modified By: Static

Deleted By: Static

Requirement: Optional

Table 84 describes class CIM_ControlledBy.

Table 84 - SMI Referenced Properties/Methods for CIM_ControlledBy

| Properties | Flags | Requirement | Description & Notes |
|------------|-------|-------------|-------------------------------|
| Dependent | | Mandatory | Reference to an EthernetPort |
| Antecedent | | Mandatory | Reference to a PortController |

9.5.6 CIM_DeviceSAPImplementation (EthernetPort to IPProtocolEndpoint)

Created By: Static

Modified By: Static

Deleted By: Static

Requirement: Optional

Table 85 describes class CIM_DeviceSAPImplementation (EthernetPort to IPProtocolEndpoint).

Table 85 - SMI Referenced Properties/Methods for CIM_DeviceSAPImplementation (EthernetPort to IPProtocolEndpoint)

| Properties | Flags | Requirement | Description & Notes |
|------------|-------|-------------|------------------------------------|
| Antecedent | | Mandatory | Reference to an EthernetPort |
| Dependent | | Mandatory | Reference to an IPProtocolEndpoint |

9.5.7 CIM_DeviceSAPImplementation (EthernetPort to iSCSIProtocolEndpoint)

Created By: Static

Modified By: Static

Deleted By: Static

Requirement: Optional

Table 86 describes class CIM_DeviceSAPImplementation (EthernetPort to iSCSIProtocolEndpoint).

Table 86 - SMI Referenced Properties/Methods for CIM_DeviceSAPImplementation (EthernetPort to iSCSIProtocolEndpoint)

| Properties | Flags | Requirement | Description & Notes |
|------------|-------|-------------|---------------------------------------|
| Antecedent | | Mandatory | Reference to an EthernetPort |
| Dependent | | Mandatory | Reference to an iSCSIProtocolEndpoint |

9.5.8 CIM_ElementSoftwareIdentity

Created By: Static

Modified By: Static

Deleted By: Static

Requirement: Mandatory

Table 87 describes class CIM_ElementSoftwareIdentity.

Table 87 - SMI Referenced Properties/Methods for CIM_ElementSoftwareIdentity

| Properties | Flags | Requirement | Description & Notes |
|------------|-------|-------------|---------------------------------|
| Antecedent | | Mandatory | Reference to a SoftwareIdentity |
| Dependent | | Mandatory | Reference to a PortController |

9.5.9 CIM_EndpointOfNetworkPipe (Between iSCSI Session and iSCSIProtocolEndpoint)

Created By: Static

Modified By: Static

Deleted By: Static

Requirement: Mandatory

Table 88 describes class CIM_EndpointOfNetworkPipe (Between iSCSI Session and iSCSIProtocolEndpoint).

Table 88 - SMI Referenced Properties/Methods for CIM_EndpointOfNetworkPipe (Between iSCSI Session and iSCSIProtocolEndpoint)

| Properties | Flags | Requirement | Description & Notes |
|------------|-------|-------------|---------------------------------------|
| Antecedent | | Mandatory | Reference to an iSCSIProtocolEndpoint |
| Dependent | | Mandatory | Reference to an iSCSI Session |

9.5.10 CIM_EndpointOfNetworkPipe (Between iSCSI connection and TCPProtocolEndpoint)

Created By: Static

Modified By: Static

Deleted By: Static

Requirement: Mandatory

Table 89 describes class CIM_EndpointOfNetworkPipe (Between iSCSI connection and TCPProtocolEndpoint).

Table 89 - SMI Referenced Properties/Methods for CIM_EndpointOfNetworkPipe (Between iSCSI connection and TCPProtocolEndpoint)

| Properties | Flags | Requirement | Description & Notes |
|------------|-------|-------------|------------------------------------|
| Dependent | | Mandatory | Reference to an iSCSIConnection |
| Antecedent | | Mandatory | Reference to a TCPProtocolEndpoint |

9.5.11 CIM_InstalledSoftwareIdentity

Created By: Static

Modified By: Static

Deleted By: Static

Requirement: Optional

Table 90 describes class CIM_InstalledSoftwareIdentity.

Table 90 - SMI Referenced Properties/Methods for CIM_InstalledSoftwareIdentity

| Properties | Flags | Requirement | Description & Notes |
|-------------------|-------|-------------|---------------------|
| InstalledSoftware | | Mandatory | |
| System | | Mandatory | |

9.5.12 CIM_NetworkPipeComposition

Requirement: Mandatory

Table 91 describes class CIM_NetworkPipeComposition.

Table 91 - SMI Referenced Properties/Methods for CIM_NetworkPipeComposition

| Properties | Flags | Requirement | Description & Notes |
|----------------|-------|-------------|---------------------------------|
| PartComponent | | Mandatory | Reference to an iSCSIConnection |
| GroupComponent | | Mandatory | Reference to an iSCSI Session |

9.5.13 CIM_PhysicalPackage

Created By: Static

Modified By: Static

Deleted By: Static

Requirement: Mandatory

Table 92 describes class CIM_PhysicalPackage.

Table 92 - SMI Referenced Properties/Methods for CIM_PhysicalPackage

| Properties | Flags | Requirement | Description & Notes |
|-------------------|-------|-------------|-------------------------------------|
| CreationClassName | | Mandatory | Key. |
| Tag | | Mandatory | Key. |
| Manufacturer | | Mandatory | Maps to IMA_PHBA_PROPERTIES.vendor. |
| Model | | Mandatory | Maps to IMA_PHBA_PROPERTIES.model. |

9.5.14 CIM_PortController

Created By: Static

Modified By: Static

Deleted By: Static

Requirement: Optional

Table 93 describes class CIM_PortController.

Table 93 - SMI Referenced Properties/Methods for CIM_PortController

| Properties | Flags | Requirement | Description & Notes |
|-------------------------|-------|-------------|---------------------|
| SystemCreationClassName | | Mandatory | |
| SystemName | | Mandatory | |
| CreationClassName | | Mandatory | |
| DeviceID | | Mandatory | |
| ControllerType | | Mandatory | |

9.5.15 CIM_Product

Created By: Static

Modified By: Static

Deleted By: Static

Requirement: Mandatory

Table 94 describes class CIM_Product.

Table 94 - SMI Referenced Properties/Methods for CIM_Product

| Properties | Flags | Requirement | Description & Notes |
|-------------------|-------|-------------|---|
| ElementName | | Mandatory | |
| Name | | Mandatory | |
| IdentifyingNumber | | Mandatory | Maps to IMA_PHBA_PROPERTIES, serialNumber. |
| Vendor | | Mandatory | Maps to IMA_PHBA_PROPERTIES, vendor. |
| Version | | Mandatory | Maps to IMA_PHBA_PROPERTIES, hardwareVersion. |

9.5.16 CIM_ProductPhysicalComponent

Created By: Static
Modified By: Static
Deleted By: Static
Requirement: Mandatory

Table 95 describes class CIM_ProductPhysicalComponent.

Table 95 - SMI Referenced Properties/Methods for CIM_ProductPhysicalComponent

| Properties | Flags | Requirement | Description & Notes |
|----------------|-------|-------------|-------------------------|
| GroupComponent | | Mandatory | Reference to a Product. |
| PartComponent | | Mandatory | PhysicalPackage. |

9.5.17 CIM_Realizes

Created By: Static
Modified By: Static
Deleted By: Static
Requirement: Mandatory

Table 96 describes class CIM_Realizes.

Table 96 - SMI Referenced Properties/Methods for CIM_Realizes

| Properties | Flags | Requirement | Description & Notes |
|------------|-------|-------------|---------------------------------|
| Dependent | | Mandatory | Reference to a PortController. |
| Antecedent | | Mandatory | Reference to a PhysicalPackage. |

9.5.18 CIM_SAPAvailableForElement

Requirement: Mandatory

Table 97 describes class CIM_SAPAvailableForElement.

Table 97 - SMI Referenced Properties/Methods for CIM_SAPAvailableForElement

| Properties | Flags | Requirement | Description & Notes |
|----------------|-------|-------------|--|
| AvailableSAP | | Mandatory | Reference to an iSCSIProtocolEndpoint. |
| ManagedElement | | Mandatory | Reference to a SCSIProtocolController. |

9.5.19 CIM_SCSIProtocolController

Created By: Static
Modified By: Static
Deleted By: Static
Requirement: Mandatory

Table 98 describes class CIM_SCSIProtocolController.

Table 98 - SMI Referenced Properties/Methods for CIM_SCSIProtocolController

| Properties | Flags | Requirement | Description & Notes |
|-------------------------|-------|-------------|------------------------------------|
| SystemCreationClassName | | Mandatory | |
| SystemName | | Mandatory | |
| CreationClassName | | Mandatory | |
| DeviceID | | Mandatory | |
| ElementName | | Mandatory | iSCSI Alias. |
| Name | CD | Mandatory | Maps to IMA_NODE_PROPERTIES, name. |
| NameFormat | | Mandatory | |

9.5.20 CIM_SoftwareIdentity

Created By: Static

Modified By: Static

Deleted By: Static

Requirement: Optional

Table 99 describes class CIM_SoftwareIdentity.

Table 99 - SMI Referenced Properties/Methods for CIM_SoftwareIdentity

| Properties | Flags | Requirement | Description & Notes |
|-----------------|-------|-------------|--|
| InstanceID | | Mandatory | |
| VersionString | | Mandatory | Maps to IMA_PHBA_PROPERTIES, driverVersion/firmwareVersion/optionRomVersion as per the Classifications property. |
| Manufacturer | | Mandatory | Maps to IMA_PHBA_PROPERTIES.vendor. |
| Classifications | | Mandatory | Either 'Driver', 'Firmware', or 'BIOS/FCode' (2, 10, or 11). |

9.5.21 CIM_SystemDevice (to EthernetPort)

Created By: Static

Modified By: Static

Deleted By: Static

Requirement: Mandatory

Table 100 describes class CIM_SystemDevice (to EthernetPort).

Table 100 - SMI Referenced Properties/Methods for CIM_SystemDevice (to EthernetPort)

| Properties | Flags | Requirement | Description & Notes |
|----------------|-------|-------------|---------------------|
| PartComponent | | Mandatory | |
| GroupComponent | | Mandatory | |

9.5.22 CIM_SystemDevice (to PortController)

Created By: Static
Modified By: Static
Deleted By: Static
Requirement: Mandatory

Table 101 describes class CIM_SystemDevice (to PortController).

Table 101 - SMI Referenced Properties/Methods for CIM_SystemDevice (to PortController)

| Properties | Flags | Requirement | Description & Notes |
|----------------|-------|-------------|---------------------|
| GroupComponent | | Mandatory | |
| PartComponent | | Mandatory | |

9.5.23 CIM_SystemDevice (to ProtocolController)

Created By: Static
Modified By: Static
Deleted By: Static
Requirement: Mandatory

Table 102 describes class CIM_SystemDevice (to ProtocolController).

Table 102 - SMI Referenced Properties/Methods for CIM_SystemDevice (to ProtocolController)

| Properties | Flags | Requirement | Description & Notes |
|----------------|-------|-------------|---------------------|
| GroupComponent | | Mandatory | |
| PartComponent | | Mandatory | |

9.5.24 CIM_iSCSIConnection

Created By: Static
Modified By: Static
Deleted By: Static
Requirement: Optional

Table 103 describes class CIM_iSCSIConnection.

Table 103 - SMI Referenced Properties/Methods for CIM_iSCSIConnection

| Properties | Flags | Requirement | Description & Notes |
|------------------------------|-------|-------------|---|
| InstanceID | | Mandatory | |
| ConnectionID | | Mandatory | |
| MaxReceiveDataSegmentLength | | Mandatory | Maps to IMA_GetMaxRecvDataSegmentLengthProperties, IMA_SetMaxRecvDataSegmentLength. |
| MaxTransmitDataSegmentLength | | Mandatory | |

Table 103 - SMI Referenced Properties/Methods for CIM_iSCSIConnection

| Properties | Flags | Requirement | Description & Notes |
|--------------------------|-------|-------------|---|
| HeaderDigestMethod | | Mandatory | |
| OtherHeaderDigestMethod | | Optional | |
| DataDigestMethod | | Mandatory | |
| OtherDataDigestMethod | | Optional | |
| ReceivingMarkers | | Mandatory | |
| SendingMarkers | | Mandatory | |
| ActiveiSCSIVersion | | Mandatory | |
| AuthenticationMethodUsed | | Mandatory | Maps to IMA_GetInUseInitiatorAuthMethods. |
| MutualAuthentication | | Mandatory | |

9.5.25 CIM_iSCSISession

Created By: Static

Modified By: Static

Deleted By: Static

Requirement: Mandatory

Table 104 describes class CIM_iSCSISession.

Table 104 - SMI Referenced Properties/Methods for CIM_iSCSISession

| Properties | Flags | Requirement | Description & Notes |
|------------------------------------|-------|-------------|---|
| InstanceID | | Mandatory | |
| Directionality | | Mandatory | |
| SessionType | | Mandatory | |
| TSIH | | Mandatory | |
| EndPointName | | Mandatory | Maps to IMA_TARGET_PROPERTIES, name. |
| CurrentConnections | | Mandatory | |
| InitialR2T | | Mandatory | Maps to IMA_GetInitialR2TProperties, IMA_SetInitialR2T. |
| ImmediateData | | Mandatory | Maps to IMA_GetImmediateDataProperties, IMA_SetImmediateData. |
| MaxOutstandingR2T | | Mandatory | Maps to IMA_GetMaxOutstandingR2TProperties, IMA_SetMaxOutstandingR2T. |
| MaxUnsolicitedFirstDataBurstLength | | Mandatory | Maps to IMA_GetMaxFirstBurstLengthProperties, IMA_SetMaxFirstBurstLength. |
| MaxDataBurstLength | | Mandatory | Maps to IMA_GetMaxBurstLengthProperties, IMA_SetMaxBurstLength. |
| DataSequenceInOrder | | Mandatory | Maps to IMA_GetDataSequenceInOrderProperties, IMA_SetDataSequenceInOrder. |
| DataPDUInOrder | | Mandatory | Maps to IMA_GetDataPDUInOrderProperties, IMA_SetDataPDUInOrder. |
| ErrorRecoveryLevel | | Mandatory | Maps to IMA_GetErrorRecoveryLevelProperties, IMA_SetErrorRecoveryLevel. |
| MaxConnectionsPerSession | | Mandatory | Maps to IMA_GetMaxConnectionsProperties, IMA_SetMaxConnections. |
| DefaultTimeToWait | | Mandatory | Maps to IMA_GetDefaultTime2WaitProperties, IMA_SetDefaultTime2Wait. |
| DefaultTimeToRetain | | Mandatory | Maps to IMA_GetDefaultTime2RetainProperties, IMA_SetDefaultTime2Retain. |

EXPERIMENTAL

EXPERIMENTAL

10 SCSI Multipath Management Profile

10.1 Description

10.1.1 Synopsis

Profile Name: SCSI Multipath Management (Component Profile)

Version: 1.6.0

Organization: SNIA

Central Class: SCSIPathConfigurationService

Scoping Class: Base Server ComputerSystem

Related Profiles: Not defined in this document:

10.1.2 Overview

Multipath access to SCSI devices is handled in a similar way on many operating systems. As viewed from host adapters, each combination of host adapter (initiator) port, target device port, and logical unit appears to be a separate logical unit. For example, each path to a multipath device appears to be a separate device. Multipath drivers aggregate these into a single device that acts to storage applications like a single path device, but provides administrative interfaces for load balancing and failback.

Host Discovered Resources incorporates multipath logic as part of the mapping from logical (operating system) resources to hardware resources. If the discovered block storage has a single path, then LogicalIdentity associates the discovered StorageVolume instance with the OS/Partition StorageExtent/LogicalDisk representing the underlying volume. The subclass of StorageExtent follows the extent naming conventions described in 7.1.3.

The rest of the examples in this section use LogicalDisks since multipath disk arrays are more common, but the same approach can be extended to other storage types. For example, a TapeDrive can model multipath access to a tape drive.

MultipathConfigurationCapabilities allows clients to determine which features and capabilities are exposed. SCSIPathConfigurationService may provide methods for management load balancing and failback. A system may have multiple multipath drivers with different capabilities and interfaces – each

driver is modeled with a separate instance of MultipathConfigurationCapabilities and SCSIPathConfigurationService, as illustrated in Figure 39: "Multipath Management Class Diagram".

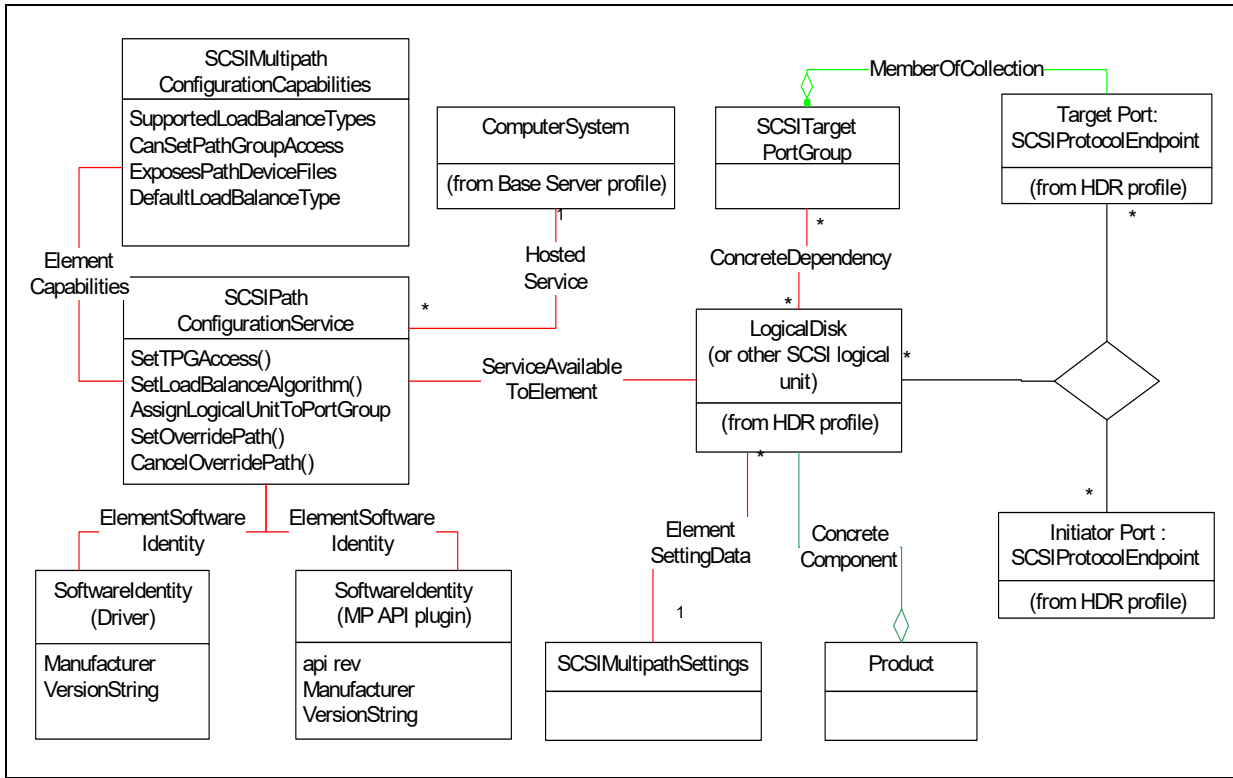


Figure 39 - Multipath Management Class Diagram

All references to ComputerSystem in the SCSI Multipath Management Profile implies a single instance for a customer server or storage system as defined in the Base Server Profile. See Annex A: (Informative) Host Profile Deployment Guidelines, 1.6.0 Rev 3 for information on the use of host profiles with Base Server profile.

Figure 40: "Four Path Instance Diagram" shows the relationship of target and initiator ports

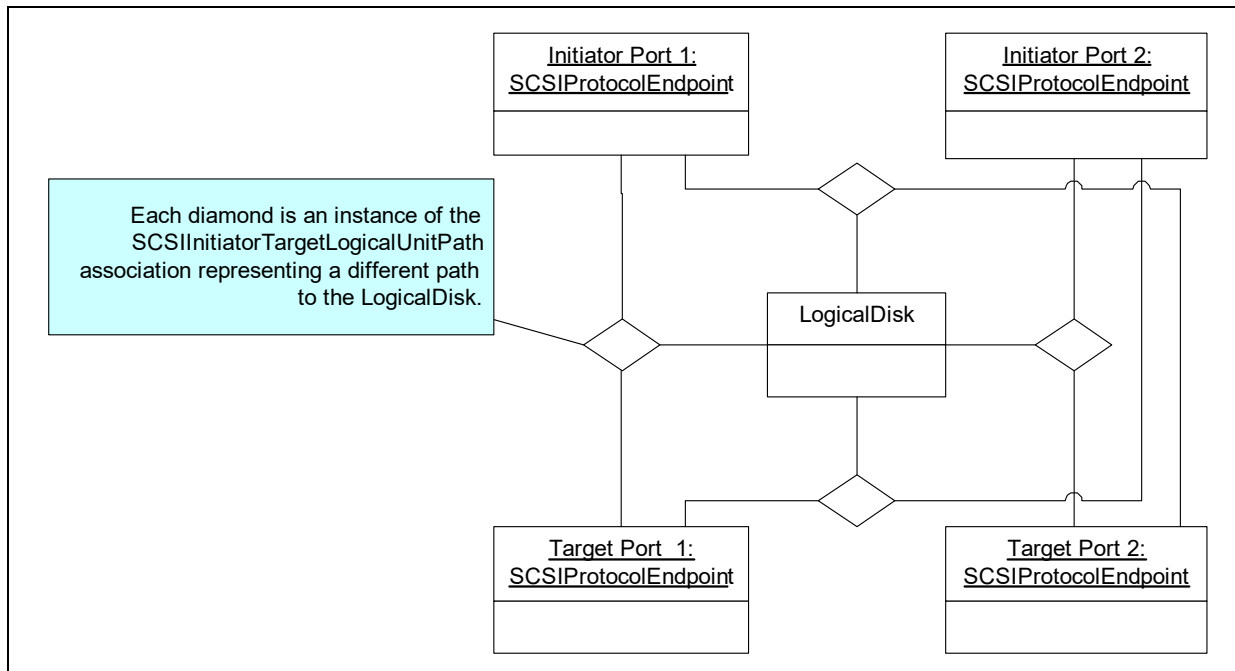


Figure 40 - Four Path Instance Diagram

(SCSIProtocolEndpoint instances) and a disk (LogicalDisk) with four paths. SCSIInitiatorTargetLogicalUnitPath instances represent each path and associate each permutation of initiator SCSIProtocolEndpoint, target SCSIProtocolEndpoint, and the LogicalDisk.

10.1.3 Asymmetric Multipath Target Devices

Some devices implement asymmetric multipath access, i.e., in non-failover mode, each LUN is only available through certain target ports, but can be accessed through other ports during failover. The SMI-S model uses the SPC-3 interface for asymmetric access. This model has target port groups – collections of target ports sharing a common access state for a group of logical units. Multipath drivers for asymmetric access devices optionally provide an interface to “failback” after a failover condition has been corrected. The SMI-S interface follows the SPC-3 interface; the caller shall specify the desired access state for each target port group (TargetPortGroup). This interface is the SetTPGAccess method of SCSIPathConfigurationService. Driver support for this method (and other methods and capabilities) is indicated by properties of MultipathConfigurationCapabilities.

In the past, devices exposed vendor-specific SCSI multipath interfaces. As such, drivers with device-specific logic were shipped with target devices, logical volume managers, and HBAs. The SPC-3 has been enhanced to allow more interoperability and operating systems are including multipath support for any target that complies with the standards. However, there are still cases where a single customer host includes multiple multipath drivers, each with different capabilities and interfaces. And a single target device may be connected in such a way that multiple multipath drivers are involved at multiple places in the driver stack.

The SNIA Multipath Management API provides an interoperable interface to multipath driver features. Each multipath driver includes a corresponding plug-in for the multipath API. The SNIA Multipath Management Profile utilizes the Multipath API to interface to each multipath driver and provide all the associations from the discovered hardware resources to the consumable operating system resources.

The instrumentation shall instantiate SCSIInitiatorTargetLogicalUnitPath instances representing each path to SCSI logical units (LogicalDevice subclasses) attached to the hosting system.

The instrumentation shall instantiate at least one instance of `SCSIMultipathConfigurationCapabilities` for each multipath API plug-in registered on the system.

If the multipath API plug-ins provide support for interfaces to change load balancing and force failover, the instrumentation should support these methods.

10.2 Health and Fault Management Considerations

This profile specifies logical paths between elements (ports and logical units). The health and fault management information for these elements is specified in the profiles for those elements - for example, port profiles.

10.3 Methods of the Profile

10.3.1 Implementation Requirements

All methods are part of `SCSIPathConfigurationService` and are optional.

10.3.2 SCSIPathConfigurationService.SetTPGAccess

This method allows a client to manually failover or fallback. The parameters are:

- `LogicalDevice` - A reference to an instance of a subclass of `LogicalDevice` representing a SCSI logical unit where the command shall be sent.
- `TargetPortGroups` - Array of references to instances of `SCSITargetPortGroup`. All the referenced `TargetPortGroup` instances shall be part of the same target device
- `AccessStates[]` - An array of desired access states. Each access state in this array is the desired access state for the `SCSITargetPortGroup` in the corresponding entry in the `TargetPortGroups` parameter. The `Active` value is not part of SPC-3; it is a convenience for clients that are not sure whether to specify `Active/Optimized` or `Active/Non-optimized`. The instrumentation selects a value based on historic information, knowledge of the target configuration, or trial and error. Note that `SCSITargetPortGroup.AccessState` includes the value 'Transitioning' that is excluded here - a caller cannot request transitioning, though it may be reported by a target device.

10.3.3 SCSIPathConfigurationService.SetLoadBalanceAlgorithm

This method requests that the target change the load balance algorithm for the referenced `LogicalDevice` instance. The parameters are

- `LogicalDevice` - a reference to an instance of a subclass of `LogicalDevice` representing a SCSI logical unit.
- `LoadBalanceAlgorithm` - The desired load balance algorithm - possible values are "Unknown", "Other", "No Load Balancing", "Round Robin", "Least Blocks", "Least IO", or "Product Specific"
- `OtherLoadBalanceAlgorithm` - When `LoadBalanceAlgorithm` is 'Other', this parameter specifies a description of the load balancing algorithm. When `LoadBalanceAlgorithm` is 'Product Specific', this property provides a string specifying the vendor/product/version of the `ManagedElement`.

10.3.4 SCSIPathConfigurationService.AssignLogicalUnitToPortGroup

This method allows an administrator to assign a logical unit to a target port group. Each LU is typically associated with two target port groups, one in active state and one in standby state. The result of this method is that the LU associations change to a pair of target port groups. Only valid if the target device supports asymmetric access state and `SCSIMultipathConfigurationCapabilities.SupportsLuAssignment` is set. The parameters are:

- `LogicalDevice` - a reference to an instance of a subclass of `LogicalDevice` representing a SCSI logical unit.

- TargetPortGroup - A reference to a target port group. The Target Port Group should be in an active state.

10.3.5 SCSIPathConfigurationService.SetOverridePath

This method allows an administrator to temporarily disable load balancing for a specific logical unit. The path specified as a parameter shall have its AdministrativeOverride property set to 'Overriding' and all I/O to the logical unit shall be directed to this path. All other paths to this logical unit shall have AdministrativeOverride set to 'Overridden'. There is one parameter:

- Path - A reference to a SCSIInitiatorTargetLogicalUnitPath.

10.3.6 SCSIPathConfigurationService.CancelOverridePath

This method clears an override path as set in SetOverridePath and load balancing is enabled. All paths to the logical unit specified as a parameter shall have AdministrativeOverride property set to 'No override in effect'. There is one parameter:

- Path - A reference to a SCSIInitiatorTargetLogicalUnitPath.

After an override is canceled, the previous load balance algorithm should be restored.

10.4 Use Cases

Not defined in this version of the standard.

10.5 CIM Elements

10.5.1 Overview

Table 105 describes the CIM elements for SCSI Multipath Management.

Table 105 - CIM Elements for SCSI Multipath Management

| Element Name | Requirement | Description |
|---|-------------|--|
| 10.5.2 CIM_ConcreteComponent | Mandatory | Associates Product and LogicalDevice subclass instances representing SCSI logical units. |
| 10.5.3 CIM_ConcreteDependency | Mandatory | Associates SCSTargetPortGroup to LogicalDevice subclass instances representing SCSI logical units. |
| 10.5.4 CIM_ElementCapabilities | Mandatory | Associates SCSIMultipathConfigurationCapabilities and SCSIPathConfigurationService. |
| 10.5.5 CIM_ElementConformsToProfile (SCSIPathConfigurationService to SCSI Multipath Management RegisteredProfile) | Mandatory | Ties the SCSIPathConfigurationService to the registered profile for SCSI Multipath Management. |
| 10.5.6 CIM_ElementSettingData | Mandatory | Associates SCSIMultipathSettings and LogicalDevice subclass instances representing SCSI logical units. |
| 10.5.7 CIM_ElementSoftwareIdentity (Driver) | Mandatory | Associates SCSIPathConfigurationService and the Driver SoftwareIdentity instance. |
| 10.5.8 CIM_ElementSoftwareIdentity (MP API Plugin) | Mandatory | Associates SCSIPathConfigurationService and the MP API Plugin SoftwareIdentity instance. |
| 10.5.9 CIM_HostedService | Mandatory | Associates SCSIPathConfigurationService and the ComputerSystem from Base Server. |
| 10.5.10 CIM_MemberOfCollection | Mandatory | Associates SCSTargetPortGroup and SCSIProtocolEndpoint. |
| 10.5.11 CIM_Product | Mandatory | Models a Product as defined in MP API. |

Table 105 - CIM Elements for SCSI Multipath Management

| Element Name | Requirement | Description |
|--|-------------|---|
| 10.5.12 CIM_SCSIMultipathConfigurationCapabilities | Mandatory | A class derived from Capabilities that models the capabilities of a multipath driver. |
| 10.5.13 CIM_SCSIMultipathSettings | Mandatory | Settings related to management of multiple paths to SCSI devices. |
| 10.5.14 CIM_SCSIPathConfigurationService | Mandatory | A class providing methods related to management of multiple paths to SCSI devices. |
| 10.5.15 CIM_SCSITargetPortGroup | Mandatory | Models SCSI Target Port Groups. |
| 10.5.16 CIM_ServiceAvailableToElement | Mandatory | Associates SCSIPathConfigurationService with instances representing SCSI logical units. |
| 10.5.17 CIM_SoftwareIdentity (Driver) | Mandatory | Driver. |
| 10.5.18 CIM_SoftwareIdentity (MP API Plugin) | Mandatory | MP API Plugin. |

10.5.2 CIM_ConcreteComponent

Associates Product and LogicalDevice subclass instances representing SCSI logical units.

Requirement: Mandatory

Table 106 describes class CIM_ConcreteComponent.

Table 106 - SMI Referenced Properties/Methods for CIM_ConcreteComponent

| Properties | Flags | Requirement | Description & Notes |
|----------------|-------|-------------|---|
| GroupComponent | | Mandatory | Reference to Product. |
| PartComponent | | Mandatory | Reference to LogicalDevice subclass representing a SCSI logical unit. |

10.5.3 CIM_ConcreteDependency

Associates SCSITargetPortGroup to LogicalDevice subclass instances representing SCSI logical units.

Requirement: Mandatory

Table 107 describes class CIM_ConcreteDependency.

Table 107 - SMI Referenced Properties/Methods for CIM_ConcreteDependency

| Properties | Flags | Requirement | Description & Notes |
|------------|-------|-------------|---|
| Antecedent | | Mandatory | Reference to LogicalDevice subclass representing a SCSI logical unit. |
| Dependent | | Mandatory | Reference to SCSITargetPortGroup. |

10.5.4 CIM_ElementCapabilities

Associates SCSIMultipathConfigurationCapabilities and SCSIPathConfigurationService.

Created By: External

Modified By: External

Deleted By: External

Requirement: Mandatory

Table 108 describes class CIM_ElementCapabilities.

Table 108 - SMI Referenced Properties/Methods for CIM_ElementCapabilities

| Properties | Flags | Requirement | Description & Notes |
|----------------|-------|-------------|---|
| Capabilities | | Mandatory | Reference to SCISIMultipathConfigurationCapabilities. |
| ManagedElement | | Mandatory | Reference to SCISIPathConfigurationService. |

10.5.5 CIM_ElementConformsToProfile (SCSIPathConfigurationService to SCSI Multipath Management RegisteredProfile)

The CIM_ElementConformsToProfile ties SCISIPathConfigurationService to the registered profile for SCSI Multipath Management.

Created By: Static

Modified By: Static

Deleted By: Static

Requirement: Mandatory

Table 109 describes class CIM_ElementConformsToProfile (SCSIPathConfigurationService to SCSI Multipath Management RegisteredProfile).

Table 109 - SMI Referenced Properties/Methods for CIM_ElementConformsToProfile (SCSIPathConfigurationService to SCSI Multipath Management RegisteredProfile)

| Properties | Flags | Requirement | Description & Notes |
|--------------------|-------|-------------|---|
| ManagedElement | | Mandatory | A SCISIPathConfigurationService instance that represents the SCSI Multipath Management. |
| ConformantStandard | | Mandatory | RegisteredProfile instance describing the SCSI Multipath Management profile. |

10.5.6 CIM_ElementSettingData

Associates SCISIMultipathSettings and LogicalDevice subclass instances representing SCSI logical units.

Requirement: Mandatory

Table 110 describes class CIM_ElementSettingData.

Table 110 - SMI Referenced Properties/Methods for CIM_ElementSettingData

| Properties | Flags | Requirement | Description & Notes |
|----------------|-------|-------------|---|
| SettingData | | Mandatory | Reference to SCISIMultipathSettings. |
| ManagedElement | | Mandatory | Reference to LogicalDevice subclass representing a SCSI logical unit. |

10.5.7 CIM_ElementSoftwareIdentity (Driver)

Associates SCISIPathConfigurationService and the Driver SoftwareIdentity instance.

Created By: External

Modified By: External

Deleted By: External
 Requirement: Mandatory

Table 111 describes class CIM_ElementSoftwareIdentity (Driver).

Table 111 - SMI Referenced Properties/Methods for CIM_ElementSoftwareIdentity (Driver)

| Properties | Flags | Requirement | Description & Notes |
|------------|-------|-------------|--|
| Antecedent | | Mandatory | Reference to Driver SoftwareIdentity. |
| Dependent | | Mandatory | Reference to the SCSIPathConfigurationService. |

10.5.8 CIM_ElementSoftwareIdentity (MP API Plugin)

Associates SCSIPathConfigurationService and the MP API Plugin SoftwareIdentity instance.

Created By: External
 Modified By: External
 Deleted By: External
 Requirement: Mandatory

Table 112 describes class CIM_ElementSoftwareIdentity (MP API Plugin).

Table 112 - SMI Referenced Properties/Methods for CIM_ElementSoftwareIdentity (MP API Plugin)

| Properties | Flags | Requirement | Description & Notes |
|------------|-------|-------------|--|
| Antecedent | | Mandatory | Reference to MP API Plugin SoftwareIdentity. |
| Dependent | | Mandatory | Reference to the SCSIPathConfigurationService. |

10.5.9 CIM_HostedService

Associates SCSIPathConfigurationService and the ComputerSystem from Base Server.

Created By: External
 Modified By: External
 Deleted By: External
 Requirement: Mandatory

Table 113 describes class CIM_HostedService.

Table 113 - SMI Referenced Properties/Methods for CIM_HostedService

| Properties | Flags | Requirement | Description & Notes |
|------------|-------|-------------|---|
| Antecedent | | Mandatory | Reference to ComputerSystem in Base Server. |
| Dependent | | Mandatory | Reference to SCSIPathConfigurationService. |

10.5.10 CIM_MemberOfCollection

Associates CSITargetPortGroup and SCSIProtocolEndpoint representing a target port.

Requirement: Mandatory

Table 114 describes class CIM_MemberOfCollection.

Table 114 - SMI Referenced Properties/Methods for CIM_MemberOfCollection

| Properties | Flags | Requirement | Description & Notes |
|------------|-------|-------------|---|
| Collection | | Mandatory | Reference to SCSITargetPortGroup. |
| Member | | Mandatory | Reference to a target SCSIProtocolEndpoint. |

10.5.11 CIM_Product

Models a Product as defined in MP API.

Requirement: Mandatory

Table 115 describes class CIM_Product.

Table 115 - SMI Referenced Properties/Methods for CIM_Product

| Properties | Flags | Requirement | Description & Notes |
|-------------------|-------|-------------|---------------------|
| ElementName | | Mandatory | |
| Name | | Mandatory | |
| IdentifyingNumber | | Mandatory | |
| Vendor | | Mandatory | |
| Version | | Mandatory | |

10.5.12 CIM_SCSIMultipathConfigurationCapabilities

A class derived from Capabilities that models the capabilities of a multipath driver.

Created By: External

Modified By: External

Deleted By: External

Requirement: Mandatory

Table 116 describes class CIM_SCSIMultipathConfigurationCapabilities.

Table 116 - SMI Referenced Properties/Methods for CIM_SCSIMultipathConfigurationCapabilities

| Properties | Flags | Requirement | Description & Notes |
|---------------------------|-------|-------------|--|
| InstanceID | | Mandatory | Key. |
| ElementName | | Mandatory | Unique ID for the capabilities instance. |
| SupportedLoadBalanceTypes | | Mandatory | |
| CanSetTPGAccess | | Mandatory | |
| ExposesPathDeviceFiles | | Mandatory | |
| DefaultLoadBalanceType | | Mandatory | |

10.5.13 CIM_SCSIMultipathSettings

A class derived from CIM_SettingData describing settings related to management of multiple paths to SCSI devices. It is associated to one of more instances of subclasses of LogicalDevice that represent SCSI logical units.

Requirement: Mandatory

Table 117 describes class CIM_SCSIMultipathSettings.

Table 117 - SMI Referenced Properties/Methods for CIM_SCSIMultipathSettings

| Properties | Flags | Requirement | Description & Notes |
|-----------------------------|-------|-------------|--|
| InstanceID | | Mandatory | Key. |
| Asymmetric | | Mandatory | Indicates whether the associated logical unit has asymmetric multipath access. |
| CurrentLoadBalanceType | | Mandatory | |
| OtherCurrentLoadBalanceType | | Conditional | Conditional requirement: support for CurrentLoadBalanceType of \Other\.' |
| AutoFailbackEnabled | | Mandatory | |
| PollingRateMax | | Optional | |
| CurrentPollingRate | | Optional | |

10.5.14 CIM_SCSIPathConfigurationService

A class derived from CIM_Service providing methods related to management of multiple paths to SCSI devices.

Created By: External

Modified By: External

Deleted By: External

Requirement: Mandatory

Table 118 describes class CIM_SCSIPathConfigurationService.

Table 118 - SMI Referenced Properties/Methods for CIM_SCSIPathConfigurationService

| Properties | Flags | Requirement | Description & Notes |
|--------------------------------|-------|-------------|---|
| SystemCreationClassName | | Mandatory | The scoping System CreationClassName. |
| SystemName | | Mandatory | The scoping System Name. |
| CreationClassName | | Mandatory | The name of the concrete subclass. |
| Name | | Mandatory | Uniquely identifies the Service. |
| SetTPGAccess() | | Conditional | Conditional requirement: support for SetTPGAccess method. |
| SetLoadBalanceAlgorithm() | | Optional | |
| AssignLogicalUnitToPortGroup() | | Optional | |
| SetOverridePath() | | Conditional | Conditional requirement: support for override path methods. |
| CancelOverridePath() | | Conditional | Conditional requirement: support for override path methods. |

10.5.15 CIM_SCSITargetPortGroup

A class derived from SystemSpecificCollection that models SCSI Target Port Groups. SCSITargetPortGroup is part of the model for devices with asymmetric access to logical units - access is optimized for a subset of target ports. SCSITargetPortGroup is aggregated to SCSIProtocolEndpoints that expose a common access state.

Created By: External

Modified By: External

Deleted By: External

Requirement: Mandatory

Table 119 describes class CIM_SCSITargetPortGroup.

Table 119 - SMI Referenced Properties/Methods for CIM_SCSITargetPortGroup

| Properties | Flags | Requirement | Description & Notes |
|----------------------|-------|-------------|---|
| InstanceID | | Mandatory | Opaque and unique identifier. |
| ElementName | | Optional | A user-friendly name. |
| AccessState | | Optional | Access to all associated logical units through all aggregated ports share this access state. |
| SupportsLuAssignment | | Mandatory | Indicates whether the implementation provides an interface to reassign logical units to target port groups. |
| ExplicitFailover | | Mandatory | Indicates the implementation provides an interface to explicitly request activation of a TPG. |
| Preferred | | Optional | Indicates that access to the associated logical units through ports in this TPG is preferred over access through other ports. |
| Identifier | | Optional | An integer identifier for the TPG. |

10.5.16 CIM_ServiceAvailableToElement

Associates SCSIPathConfigurationService with instances representing SCSI logical units.

Created By: External

Modified By: External

Deleted By: External

Requirement: Mandatory

Table 120 describes class CIM_ServiceAvailableToElement.

Table 120 - SMI Referenced Properties/Methods for CIM_ServiceAvailableToElement

| Properties | Flags | Requirement | Description & Notes |
|-----------------|-------|-------------|---|
| ServiceProvided | | Mandatory | Reference to SCSIPathConfigurationService. |
| UserOfService | | Mandatory | Reference to LogicalDevice subclass representing a SCSI logical unit. |

10.5.17 CIM_SoftwareIdentity (Driver)

SoftwareIdentity representing the Driver software.

Created By: External

Modified By: External

Deleted By: External

Requirement: Mandatory

Table 121 describes class CIM_SoftwareIdentity (Driver).

Table 121 - SMI Referenced Properties/Methods for CIM_SoftwareIdentity (Driver)

| Properties | Flags | Requirement | Description & Notes |
|-----------------|-------|-------------|--|
| InstanceID | | Mandatory | The name used to identify this SoftwareIdentity. |
| VersionString | | Mandatory | Software Version should be in the form [Major], [Minor].[Revision] or [Major].[Minor][letter][revision]. |
| Manufacturer | | Mandatory | Manufacturer of this Software. |
| Classifications | | Mandatory | Shall be 2 (Driver). |

10.5.18 CIM_SoftwareIdentity (MP API Plugin)

SoftwareIdentity representing the MP API plugin software.

Created By: External

Modified By: External

Deleted By: External

Requirement: Mandatory

Table 122 describes class CIM_SoftwareIdentity (MP API Plugin).

Table 122 - SMI Referenced Properties/Methods for CIM_SoftwareIdentity (MP API Plugin)

| Properties | Flags | Requirement | Description & Notes |
|----------------------------|-------|-------------|--|
| InstanceID | | Mandatory | The name used to identify this SoftwareIdentity. |
| VersionString | | Mandatory | Software Version should be in the form [Major], [Minor].[Revision] or [Major].[Minor][letter][revision]. |
| Manufacturer | | Mandatory | Manufacturer of this Software. |
| Classifications | | Mandatory | Shall be 1 (Other). |
| ClassificationDescriptions | | Mandatory | Shall be 'MP API Plugin'. |

EXPERIMENTAL

DEPRECATED

11 SB Multipath Management Profile

See the last version of this profile in SMI-S Version 1.6.1. Revision 5.

DEPRECATED

12 Memory Configuration Profile

12.1 Synopsis

Profile Name: Memory Configuration (Component Profile)

Version: 1.0.0

Organization: SNIA

Central Class: MemoryConfigurationService

Scoping Class: ComputerSystem

Related Profiles: Table 123 describes the related profiles for the Memory Configuration Profile:

Table 123 - Related Profiles

| Profile Name | Organization | Version | Requirement | Description |
|--------------------------|--------------|---------|-------------|--------------|
| Profile Registration | DMTF | 1.1.0 | Mandatory | |
| Multi-type System Memory | DMTF | 1.0.0 | Mandatory | DMTF DSP1071 |

12.2 Description

12.2.1 Overview

Memory subsystems which offer logical configuration options are candidates for management using the Memory Configuration Profile. This profile describes memory resource pools which serve to group memory resources with like characteristics. For example, a system containing both volatile memory modules and battery backed persistent memory modules might group the logical capacity on these memory modules into two separate pools. A configuration service provides allocation, deallocation and assignment related operations for a pool. An allocation operation reserves some amount of capacity from a pool and assigns it to the system. A deallocation returns allocated capacity to the pool to be reused. Assignment indicates that access to an allocated memory resource is to be restricted in some way. Consider the case of memory being assigned as a cache; access to the cache would likely be restricted to hardware or software performing the caching operation and not generally available to the system. Finally the profile describes various means for a system to advertise the memory configuration options it supports. Availability of memory configuration features is contingent upon a number of factors including the capabilities of the system memory modules, the memory controller features and the features of the BIOS, operating system or other memory management software.

12.2.2 Class Diagram

Figure 41 shows the Memory Configuration Profile class hierarchy. For simplicity, the prefix CIM_ has been removed from the names of the classes.

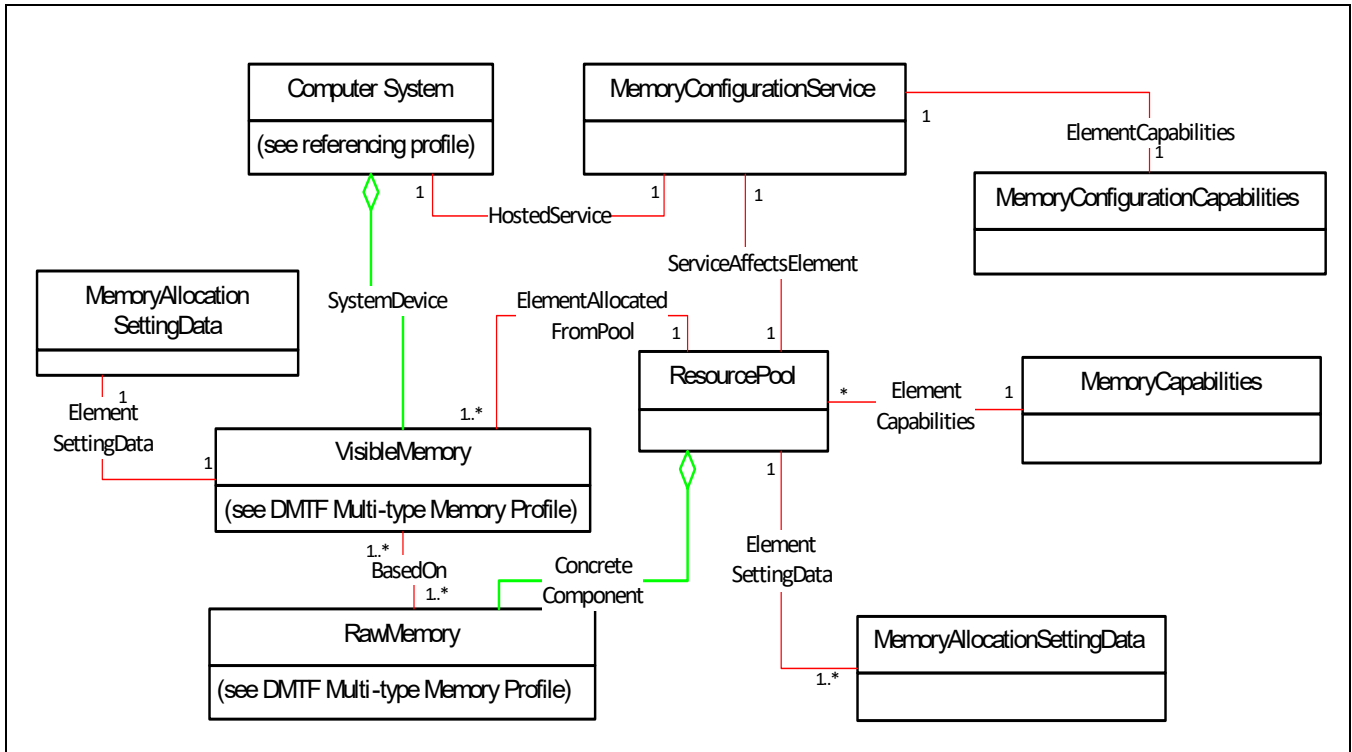


Figure 41 - Memory Configuration Class Diagram

12.2.3 MemoryConfigurationService

The MemoryConfigurationService is the central class of the profile. It models the system’s support for modifying a system’s logical memory configuration.

12.2.4 ResourcePool(Memory)

ResourcePool instances aggregate memory capacity with like capabilities.

12.2.5 MemoryConfigurationCapabilities & MemoryCapabilities

The profile supports run-time detection of memory features. MemoryConfigurationCapabilities advertises the system’s support for modification of the logical memory configuration. MemoryCapabilities indicates the capabilities of the memory modules and other system components.

12.2.6 MemoryAllocationSettingData

MemoryAllocationSettingData records the parameters used during an allocation or assignment operation.

12.2.7 Registered Profile

Figure 41 includes CIM_RegisteredProfile which is expected to be implemented per the Profile Registration Profile (*Storage Management Technical Specification, Part 3 Common Profiles, 1.8.0 Rev 4 Clause 36 Profile Registration Profile*).

12.2.8 DMTF: Multi-type System Memory Profile

RawMemory and VisibleMemory classes are described in detail in the DMTF Multi-type System Memory Profile. A RawMemory instance represents the unconfigured (primordial) capacity of a given memory module. RawMemory instances are the constituents of a (memory) ResourcePool. VisibleMemory instances model memory capacity that has been allocated (concrete) from a (memory) ResourcePool.

12.3 Implementation

12.3.1 CIM_ResourcePool (memory)

Implementations of this profile shall contain at least one instance of CIM_ResourcePool. CIM_ResourcePool pools are primordial in nature, containing unprepared or unassigned capacity. It is presumed that CIM_RawMemory instances that together constitute a given CIM_ResourcePool are compatible such that they can be manipulated in aggregate by a MemoryConfigurationService. This profile does not mandate any specific level of compatibility between members of a ResourcePool.

12.3.2 Determining Pool Capacity

The capacity of a (memory) ResourcePool instance shall be the total unconfigured capacity of the pool's constituent CIM_RawMemory instances. Any capacity gains or losses due to device usage/configuration (e.g., replication, metadata) shall not be included in the capacity reported for the pool.

12.3.3 CIM_MemoryCapabilities

Implementations of this profile shall include at least one instance of CIM_MemoryCapabilities. Each instance shall describe the capabilities of one or more instances of CIM_ResourcePools as determined by the CIM_ElementCapabilities association.

12.3.4 CIM_MemoryConfigurationService

Implementations of this profile shall contain at least one instance of CIM_MemoryConfigurationService. Instances of this class shall conditionally support allocation, deallocation and assignment of memory resources from associated (see 12.3.8 CIM_ServiceAffectsElement) CIM_ResourcePools. Availability of any given extrinsic shall be determined by examining the CIM_MemoryConfigurationCapabilities instance to which it is associated (CIM_ElementCapabilities).

12.3.5 CIM_MemoryConfigurationCapabilities

Implementations of this profile shall contain at least one instance of CIM_MemoryConfigurationCapabilities. Each instance shall be associated with one or more instances of CIM_MemoryConfigurationService via a CIM_ElementCapabilities association.

12.3.6 CIM_MemoryAllocationSettingData

The availability of CIM_MemoryAllocationSettingData instances is conditional. Whenever CIM_MemoryConfigurationService extrinsics are used to allocate a CIM_VisibleMemory instance, a companion instance of CIM_MemoryAllocationSettingData shall be available. The companion instance shall be the goal setting used in the AllocateFromPool extrinsic method (see 12.4.2.2 CIM_MemoryConfigurationService.AllocateFromPool()).

When an allocation operation results in a staged request that requires some triggering event (e.g., a reboot) an instance of CIM_MemoryAllocationSettingData shall exist to represent the staged request. These instances are associated with the impacted CIM_ResourcePool rather than a CIM_VisibleMemory instance.

12.3.6.1 Specify Allocation Properties

Workload performance for a given memory region is influenced by the properties specified in the CIM_MemoryAllocationSettingData instance at memory region creation time.

12.3.7 CIM_ElementCapabilities

CIM_ElementCapabilities shall associate the CIM_MemoryConfigurationCapabilities to CIM_MemoryConfigurationService. Capabilities so associated shall describe the extrinsic method support offered by the service instance. The characteristics attribute of CIM_ElementCapabilities is not used.

CIM_ElementCapabilities shall associate CIM_MemoryCapabilities to CIM_ResourcePoolCapabilities so associated describe the memory module and related platform memory features that determine configurability. The characteristics attribute of CIM_ElementCapabilities is not used.

12.3.8 CIM_ServiceAffectsElement

CIM_ServiceAffectsElement associations shall relate CIM_MemoryConfigurationService instances with the CIM_ResourcePool(s) they are able to operate on.

12.3.9 CIM_ConcreteComponent

CIM_RawMemory instances pooled together for management purposes are represented by CIM_ResourcePool instances. CIM_RawMemory instances shall be associated with a CIM_ResourcePool instance by the CIM_ConcreteComponent association.

12.3.10 CIM_ElementAllocatedFromPool

CIM_VisibleMemory instances are created from resources managed in aggregate as a CIM_ResourcePool. CIM_VisibleMemory instances shall be associated to the CIM_ResourcePool from which they draw their resources by a CIM_ElementAllocatedFromPool association.

12.3.11 CIM_HostedService

An instance of the CIM_HostedService shall associate a CIM_MemoryConfigurationService with the CIM_ComputerSystem where its underlying configuration (software and hardware) facilities are located.

12.3.12 CIM_ElementSettingData

CIM_ElementSettingData represents the relationship between an allocated memory extent and the settings supplied during its creation. An instance of CIM_ElementSettingData shall exist between CIM_VisibleMemory and an associated CIM_MemoryAllocationSettingData instance. For these instances IsCurrent shall be set to 1 "Is Current". IsNext shall be set to 2 "Is Not Next". The value IsDefault is determined by the implementation.

CIM_ElementSettingData shall also be used to associate staged CIM_MemoryAllocationSetting instances to the ResourcePool that hosts the resources impacted by the CIM_MemoryAllocationSetting instance. Once the allocation transitions from a staged "request" to an actual CIM_VisibleMemory instance this association no longer exists. For these instances IsCurrent shall be set to 2 "Is Not Current". IsNext shall be set to 1 "Is Next". The value IsDefault is determined by the implementation.

12.3.13 CIM_ElementConformsToProfile

CIM_ElementConformsToProfile shall associate a RegisteredProfile instance representing the MemoryConfigurationService profile to the central class of the profile CIM_MemoryConfigurationService.

12.4 Methods

12.4.1 Overview

This clause details the requirements for supporting intrinsic operations and extrinsic methods for the CIM elements defined by this profile.

12.4.2 CIM_MemoryConfigurationService

12.4.2.1 Overview

Implementations of this profile shall support the operations listed in Table 124 for CIM_MemoryConfigurationService. Each operation shall be supported as defined in DMTF DSP0200 *CIM Operations over HTTP*.

Table 124 - Operations: CIM_MemoryConfigurationService

| Operation | Requirement | Messages |
|------------------------|-------------|----------|
| GetInstance | Mandatory | None |
| Associators | Mandatory | None |
| AssociatorNames | Mandatory | None |
| References | Mandatory | None |
| ReferenceNames | Mandatory | None |
| EnumerateInstances | Mandatory | None |
| EnumerateInstanceNames | Mandatory | None |

12.4.2.2 CIM_MemoryConfigurationService.AllocateFromPool()

The AllocateFromPool() method is used to configure unprepared, raw memory resources resulting in one or more system visible memory regions. Support for this method is signaled by its inclusion in the SupportedAsynchronousActions attribute in CIM_MemoryConfigurationCapabilities. Return values are listed in Table 125.

Table 125 - CIM_MemoryConfigurationService.AllocateFromPool() Method: Return Code Values

| Value | Description |
|-------|--|
| 0 | Request was successfully executed |
| 1 | Request was successfully staged for future execution. |
| 2 | Method is not supported in this implementation |
| 2 | Unknown |
| 3 | Timeout |
| 4 | Failed |
| 5 | Invalid parameter |
| 4096 | Request was successfully staged for future execution |
| 4097 | Insufficient Resources |
| 4098 | Inconsistent Parameters |
| 4099 | Request did not complete in its entirety and partial results could not be undone |

AllocateFromPool() parameters are listed in Table 126:

Table 126 - CIM_MemoryConfigurationService.AllocateFromPool() Method: Parameters

| Qualifiers | Name | Type | Description |
|------------|-----------|-----------------------|--|
| IN, REQ | Pool | CIM_ResourcePool REF | The pool of memory resources from which to allocate the visible memory region. |
| IN,REQ | Goal[] | string | One or more embedded instances of CIM_MemoryAllocationSetting which describe the allocation request. |
| OUT | Extents[] | CIM_VisibleMemory REF | If the return code is 0, this value shall contain references to the created VisibleMemory instances. When the request is successful but has been staged for future execution or an error occurs, this parameter is not used. |

12.4.2.3 CIM_MemoryConfigurationService.ReturnToPool()

The ReturnToPool() method deletes an instance of CIM_VisibleMemory, returning capacity to the CIM_ResourcePool from which it originated, as shown in Table 127.

Table 127 - CIM_MemoryConfigurationService.ReturnToPool() Method: Return Code Values

| Value | Description |
|-------|--|
| 0 | Request was successfully executed |
| 1 | Request was successfully staged for future execution |
| 2 | Method is not supported in this implementation |
| 3 | Unknown |
| 4 | Timeout |
| 5 | Failed |
| 4096 | Request was successfully staged for future execution |
| 4099 | Request did not complete in its entirety and partial results could not be undone |

ReturnToPool() parameters are listed in Table 128:

Table 128 - CIM_MemoryConfigurationService.ReturnToPool() Method: Parameters

| Qualifiers | Name | Type | Description |
|------------|----------------|-----------------------|----------------------------|
| IN, REQ | MemoryExtent[] | CIM_VisibleMemory REF | The instance to deallocate |

12.4.3 CIM_ResourcePool (memory)

Table 129 lists operations and requirements for CIM_ResourcePool.

Table 129 - Operations: CIM_ResourcePool

| Operation | Requirement | Messages |
|------------------------|-------------|----------|
| GetInstance | Mandatory | None |
| Associators | Mandatory | None |
| AssociatorNames | Mandatory | None |
| References | Mandatory | None |
| ReferenceNames | Mandatory | None |
| EnumerateInstances | Mandatory | None |
| EnumerateInstanceNames | Mandatory | None |

12.4.4 CIM_MemoryCapabilities

Implementations of this profile shall support the operations listed in Table 130 for the CIM_MemoryCapabilities class.

Table 130 - Operations: CIM_MemoryCapabilities

| Operation | Requirement | Messages |
|------------------------|-------------|----------|
| GetInstance | Mandatory | None |
| Associators | Mandatory | None |
| AssociatorNames | Mandatory | None |
| References | Mandatory | None |
| ReferenceNames | Mandatory | None |
| EnumerateInstances | Mandatory | None |
| EnumerateInstanceNames | Mandatory | None |

12.4.5 CIM_MemoryConfigurationCapabilities

Implementations of this profile shall support the operations listed in Table 131 for the CIM_MemoryConfigurationCapabilities class.

Table 131 - Operations: CIM_MemoryConfigurationCapabilities

| Operation | Requirement | Messages |
|--------------------|-------------|----------|
| GetInstance | Mandatory | None |
| Associators | Mandatory | None |
| AssociatorNames | Mandatory | None |
| References | Mandatory | None |
| ReferenceNames | Mandatory | None |
| EnumerateInstances | Mandatory | None |

Table 131 - Operations: CIM_MemoryConfigurationCapabilities

| Operation | Requirement | Messages |
|------------------------|-------------|----------|
| EnumerateInstanceNames | Mandatory | None |

12.4.6 CIM_MemoryAllocationSettingData

Table 132 lists operations and requirements for CIM_MemoryAllocationSettingData.

Table 132 - Operations: CIM_MemoryAllocationSettingData

| Operation | Requirement | Messages |
|------------------------|-------------|----------|
| GetInstance | Mandatory | None |
| Associators | Mandatory | None |
| AssociatorNames | Mandatory | None |
| References | Mandatory | None |
| ReferenceNames | Mandatory | None |
| EnumerateInstances | Mandatory | None |
| EnumerateInstanceNames | Mandatory | None |
| DeleteInstance | Optional | |

12.4.7 CIM_ElementCapabilities

Table 133 lists operations and requirements for CIM_ElementCapabilities.

Table 133 - Operations: CIM_ElementCapabilities

| Operation | Requirement | Messages |
|------------------------|-------------|----------|
| GetInstance | Mandatory | None |
| EnumerateInstances | Mandatory | None |
| EnumerateInstanceNames | Mandatory | None |

12.4.8 CIM_ServiceAffectsElement

Table 134 lists operations and requirements for CIM_ServiceAffectsElement.

Table 134 - Operations: CIM_ServiceAffectsElement

| Operation | Requirement | Messages |
|------------------------|-------------|----------|
| GetInstance | Mandatory | None |
| EnumerateInstances | Mandatory | None |
| EnumerateInstanceNames | Mandatory | None |

12.4.9 CIM_ConcreteComponent

Table 135 lists operations and requirements for CIM_ConcreteComponent.

Table 135 - Operations: CIM_ConcreteComponent

| Operation | Requirement | Messages |
|------------------------|-------------|----------|
| GetInstance | Mandatory | None |
| EnumerateInstances | Mandatory | None |
| EnumerateInstanceNames | Mandatory | None |

12.4.10 CIM_ElementAllocatedFromPool

Table 136 lists operations and requirements for CIM_ElementAllocatedFromPool

Table 136 - Operations: CIM_ElementAllocatedFromPool

| Operation | Requirement | Messages |
|------------------------|-------------|----------|
| GetInstance | Mandatory | None |
| EnumerateInstances | Mandatory | None |
| EnumerateInstanceNames | Mandatory | None |

12.4.11 CIM_HostedService

Table 137 lists operations and requirements for CIM_HostedService.

Table 137 - Operations: CIM_HostedService

| Operation | Requirement | Messages |
|------------------------|-------------|----------|
| GetInstance | Mandatory | None |
| EnumerateInstances | Mandatory | None |
| EnumerateInstanceNames | Mandatory | None |

12.4.12 CIM_ElementSettingData

Table 138 lists operations and requirements for CIM_ElementSettingData.

Table 138 - Operations: CIM_ElementSettingData

| Operation | Requirement | Messages |
|------------------------|-------------|----------|
| GetInstance | Mandatory | None |
| EnumerateInstances | Mandatory | None |
| EnumerateInstanceNames | Mandatory | None |

12.4.13 CIM_ElementConformsToProfile

Table 139 lists operations and requirements for CIM_ElementConformsToProfile.

Table 139 - Operations: CIM_ElementConformsToProfile

| Operation | Requirement | Messages |
|------------------------|-------------|----------|
| GetInstance | Mandatory | None |
| EnumerateInstances | Mandatory | None |
| EnumerateInstanceNames | Mandatory | None |

12.5 Use Cases

12.5.1 Advertising Profile Conformance

Figure 42 shows how an instance of CIM_RegisteredProfile is used to indicate the presence of a conforming implementation of the Memory Configuration Profile and to identify instances of its central class CIM_MemoryConfigurationService

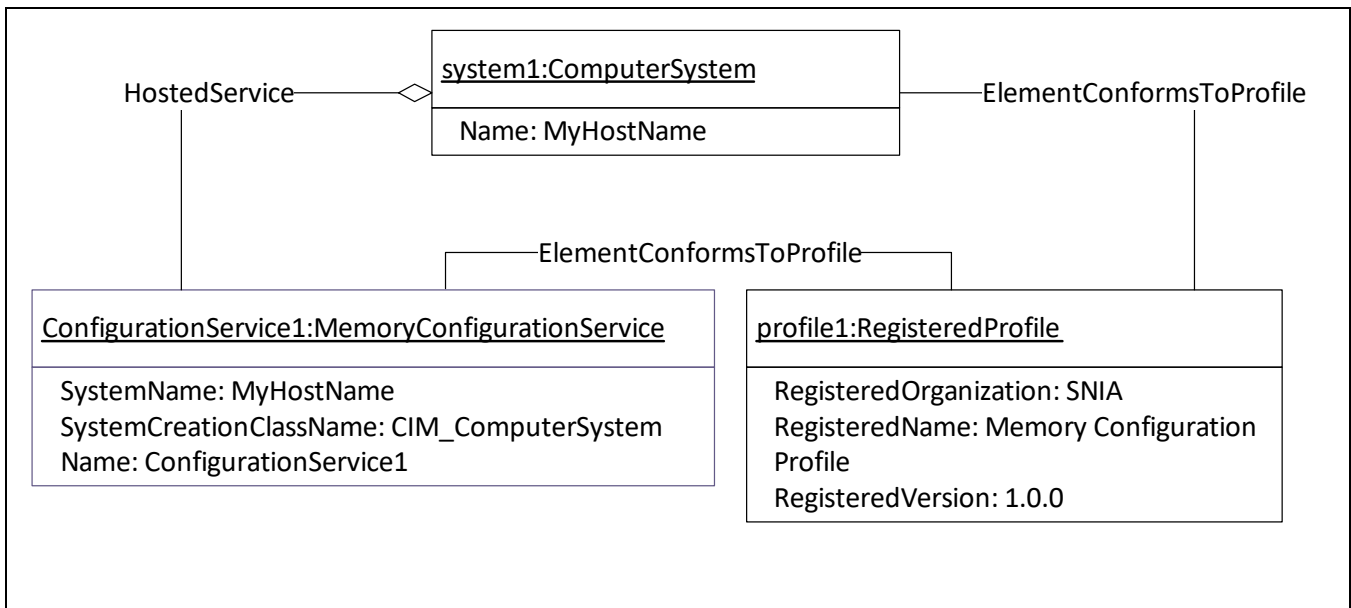


Figure 42 - Use Case - Profile Registration

12.5.2 Determine Support for Memory Configuration

One of several possible ways to determine configuration capabilities is to enumerate MemoryConfigurationCapabilities instances and examine the SupportedOperations attribute. If the desired configuration capability is located in the SupportedOperations list, the service instance offering this capability is located using the ElementCapabilities association. Figure 43 illustrates the case where the MemoryConfigurationService advertises support for memory allocation.

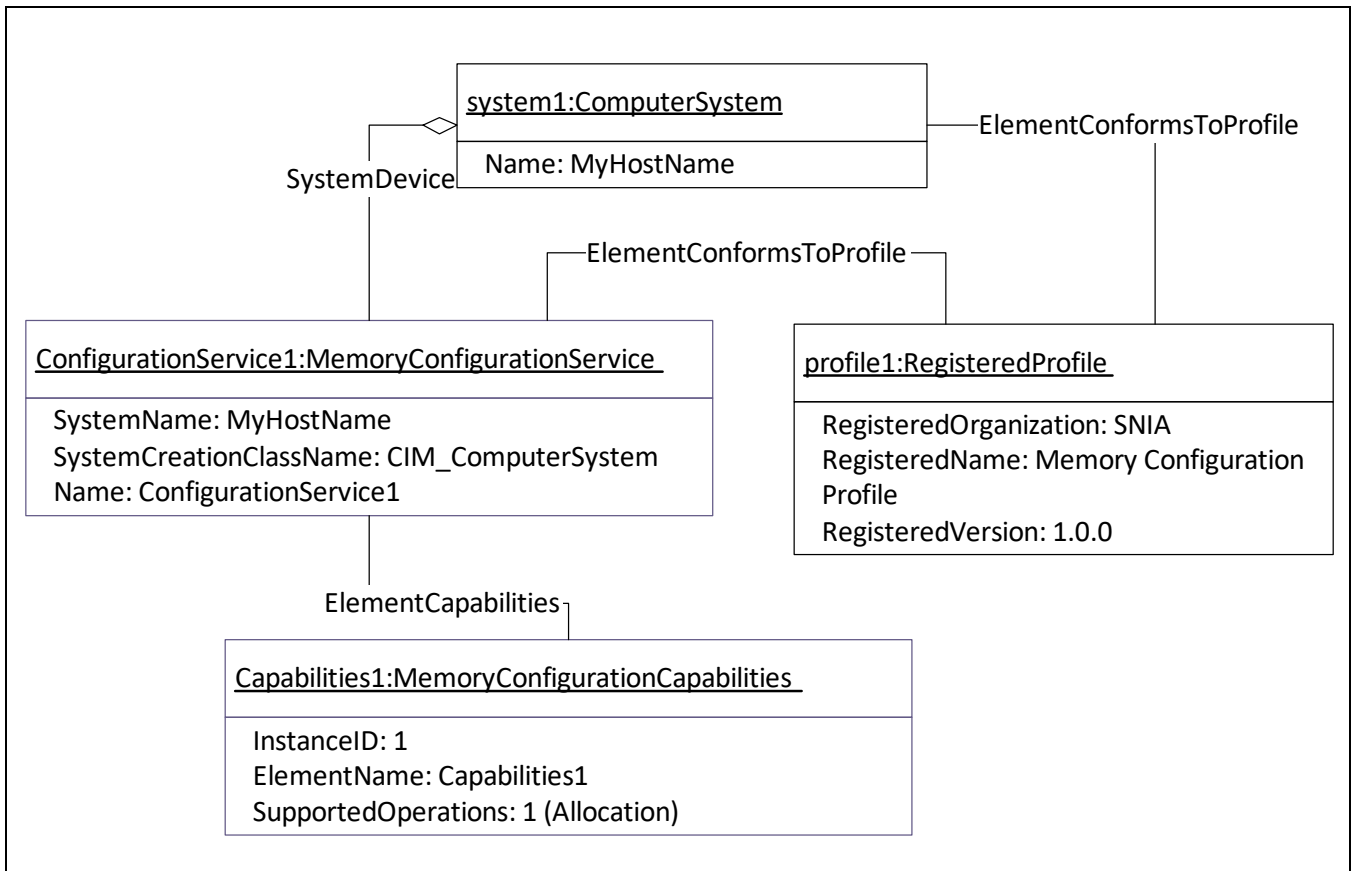


Figure 43 - Use Case - Memory Configuration Capabilities

12.5.3 Determine Support for Memory Features

A client seeking memory resources with specific capabilities can enumerate instances of CIM_MemoryCapabilities. For example, if a client is looking for memory with persistent characteristics it can examine the MemoryModes attribute looking for the persistent value. If a MemoryCapabilities instance with the persistent capability is found the CIM_ElementCapabilities association is used to locate the memory resource pool. An instance diagram for this use case is shown in Figure 44.

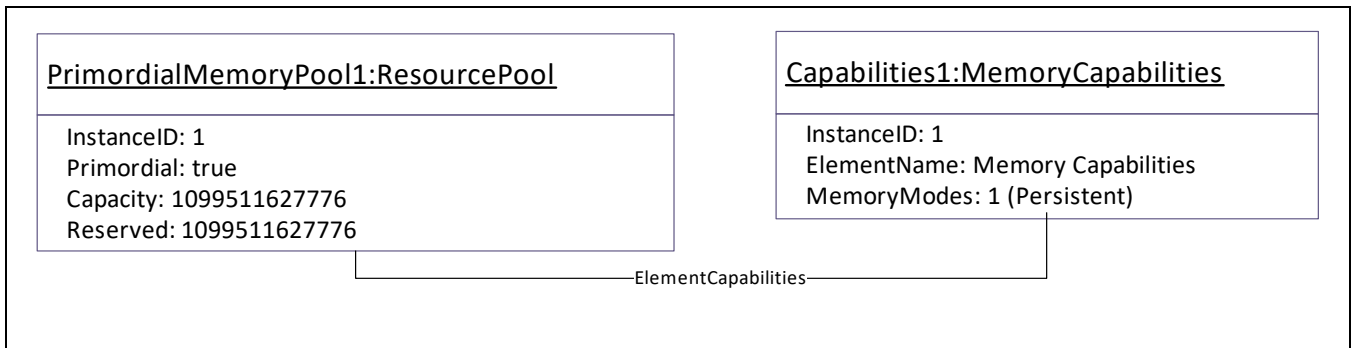


Figure 44 - Use Case - Memory Capability Discovery

12.5.4 Determine Available Capacity

Capacity available for allocation for a given pool is determined by enumerating instances of CIM_ResourcePool and subtracting the Reserved attribute from the Capacity attribute, as shown in Figure 44.

12.5.5 Allocate Capacity

Clients wishing to allocate capacity from a (memory) CIM_ResourcePool can locate the MemoryConfigurationService that handles allocation requests by following the CIM_ServiceAffectsElement association from the pool to the service. Once the service is located the AllocateFromPool method is used to request an allocation. The end result of the allocation is the appearance of a CIM_VisibleMemory instance along with a CIM_MemoryAllocationSettingData instance. The CIM_VisibleMemory instance is associated to the CIM_ResourcePool by an ElementAllocatedFromPool association. The CIM_ResourcePool.Reserved value is updated to reflect the allocation. In some cases the allocation request may require a reset or other event to complete. In this case the AllocateFromPool call results in a CIM_MemoryAllocationSetting instance associated with the CIM_ResourcePool until the triggering event occurs. The cases where a triggering event is required is given in Figure 45, the completed allocation is shown in Figure 46.

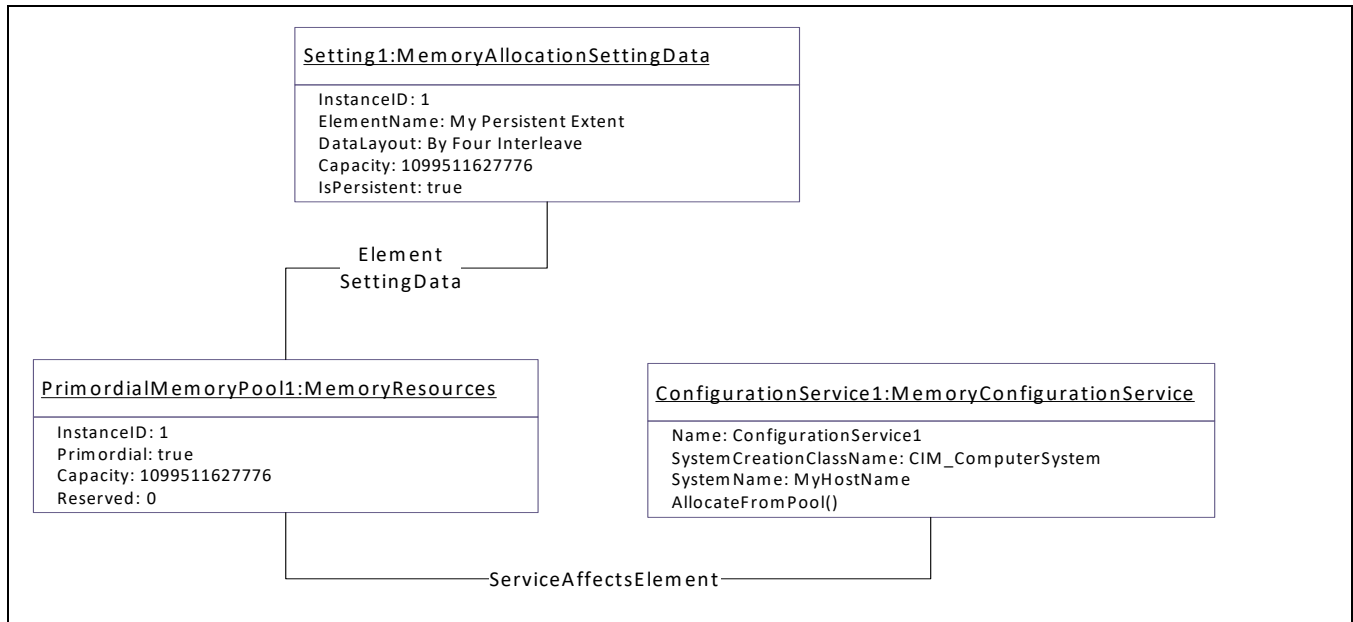


Figure 45 - Use Case - Allocation

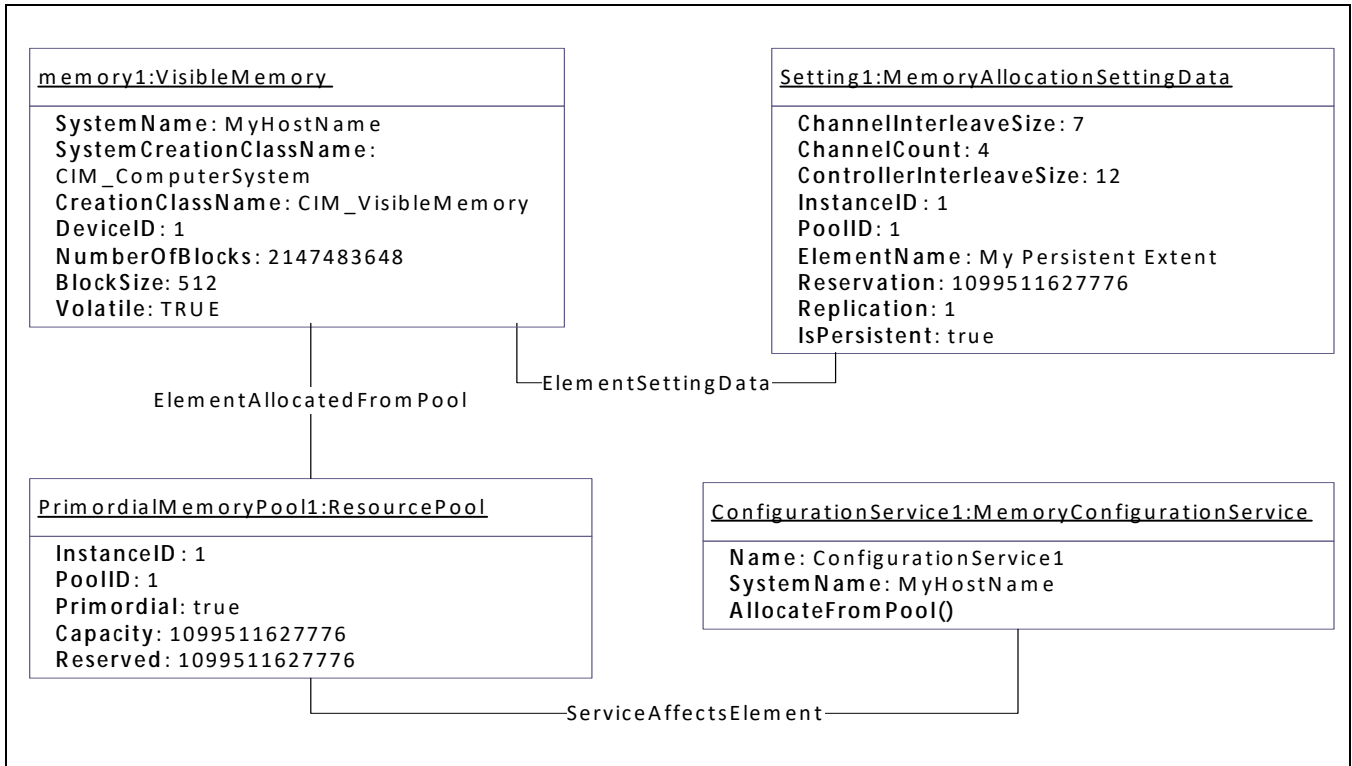


Figure 46 - Use Case - Allocation Complete

12.5.6 Deallocate Capacity

Clients wishing to deallocate a CIM_VisibleMemory instance first locate the pool from which it was allocated (ElementAllocatedFromPool to ResourcePool). Refer to Figure 47. Secondly locate the MemorConfigurationService instance associated with the pool (ServiceAffectsElement to MemoryConfigurationService). The ReturnToPool() method on the MemoryConfigurationService is then called with a reference to the VisibleMemory instance to be deleted. As with allocate, the deallocation may require a triggering event such as a device or system reset to take effect.

Figure 47 and Figure 48 depict the model before and after deallocation.

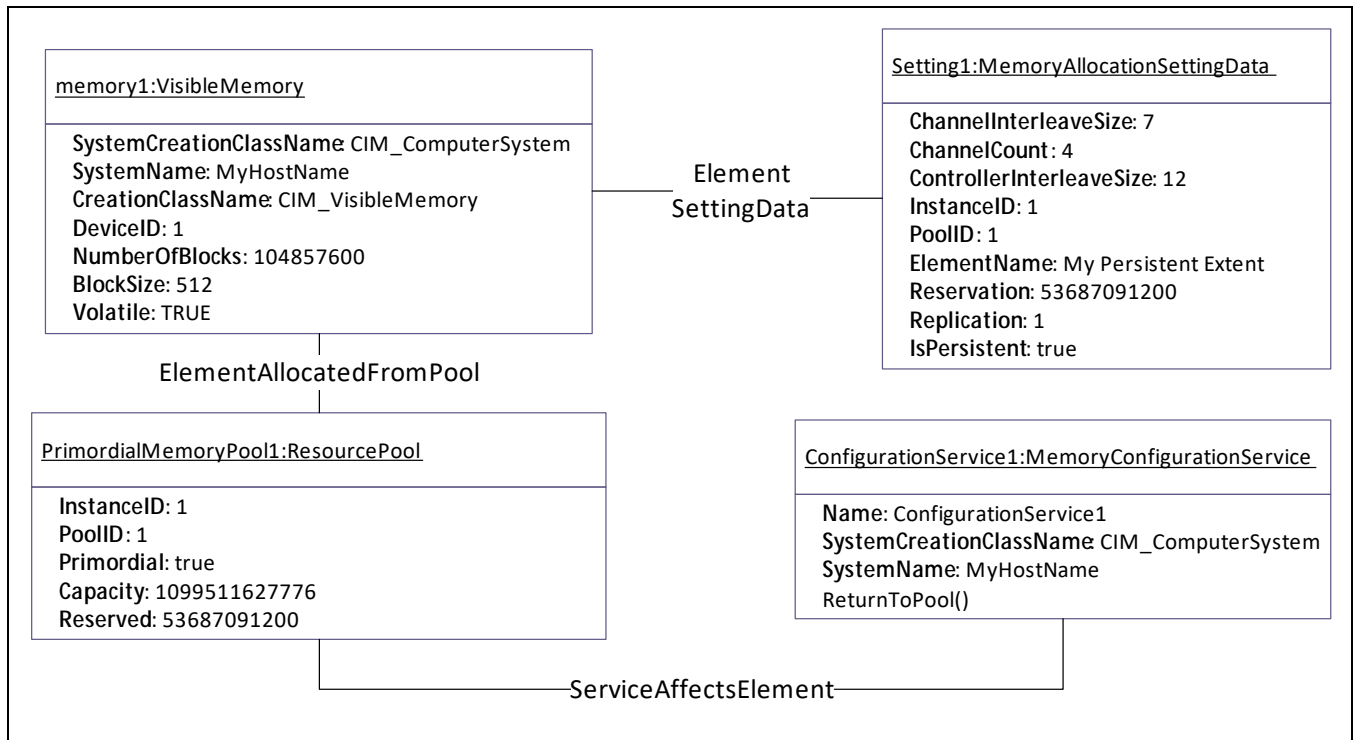


Figure 47 - Use Case - Before Deallocation

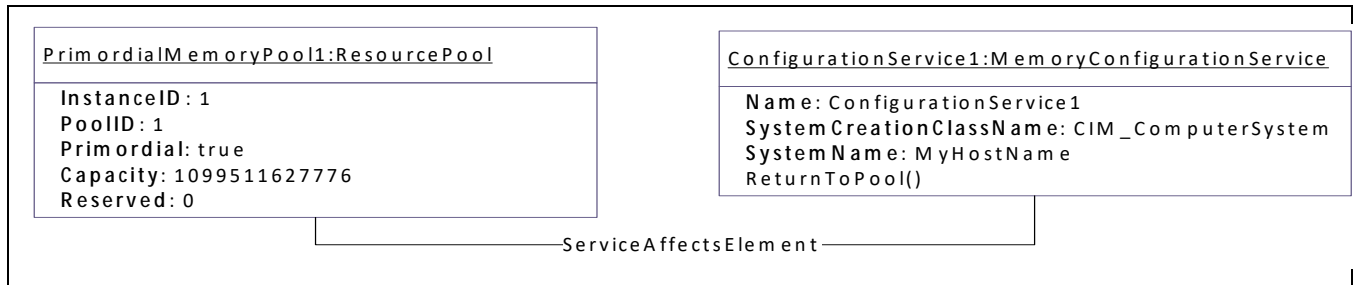


Figure 48 - Use Case - After Deallocation

12.5.7 Delete a Pending Request

An allocation request that has not taken place because it requires a state transition of some kind (e.g., a system reset) can be deleted by using the intrinsic DeleteInstance() method on the MemoryAllocationSettingData instance that represents the request.

12.6 CIM Elements

12.6.1 Overview

Table 140 shows the instances of CIM Elements for this profile. Instances of the following CIM Elements shall be implemented as described in Clauses (“Implementation”) and (“Methods”) may impose additional requirements on these elements.

Table 140 - CIM Elements

| Element Name | Requirement | Description |
|-------------------------------------|-------------|-------------|
| CIM_RegisteredProfile | Mandatory | See 12.6.2 |
| CIM_MemoryConfigurationService | Mandatory | See 12.6.3 |
| CIM_ResourcePool | Mandatory | See 12.6.4 |
| CIM_MemoryCapabilities | Mandatory | See 12.6.5 |
| CIM_MemoryConfigurationCapabilities | Mandatory | See 12.6.6 |
| CIM_MemoryAllocationSettingData | Mandatory | See 12.6.7 |
| CIM_ElementSettingData | Mandatory | See 12.6.8 |
| CIM_HostedService | Mandatory | See 12.6.9 |
| CIM_ElementAllocatedFromPool | Mandatory | See 12.6.10 |
| CIM_ConcreteComponent | Mandatory | See 12.6.11 |
| CIM_ElementCapabilities | Mandatory | See 12.6.12 |

12.6.2 CIM_RegisteredProfile

CIM_RegisteredProfile is used to advertise implementation conformance with the Memory Configuration Profile. The CIM_RegisteredProfile class is defined by the [Profile Registration Profile \(Storage Management Technical Specification, Part 3 Common Profiles, 1.8.0 Rev 4 36 Profile Registration Profile\)](#). With the exception of the mandatory values specified in Table 141, the behavior of the CIM_RegisteredProfile instance is per the Profile Registration Profile. Table 141 contains the requirements for elements of this class.

Table 141 - Class: CIM_RegisteredProfile

| Elements | Requirement | Notes |
|------------------------|-------------|--|
| RegisteredName | Mandatory | This property shall have a value of “Memory Configuration” |
| RegisteredVersion | Mandatory | This property shall have a value of “1.0.0” |
| RegisteredOrganization | Mandatory | This property shall have a value of 11 (SNIA) |

12.6.3 CIM_MemoryConfigurationService

The CIM_MemoryConfigurationService provides extrinsic methods suitable for configuring a memory subsystem. Implementations support attributes shown in Table 142.

Table 142 - Class: CIM_MemoryConfigurationService

| Element | Requirement | Notes |
|-------------------------|-------------|--|
| CreationClassName | Mandatory | Key |
| Name | Mandatory | Key |
| SystemCreationClassName | Mandatory | Key |
| SystemName | Mandatory | Key |
| AllocateFromPool() | Conditional | Support is conditional on the existence of AllocateFromPool (2) in SupportedSynchronousOperations and SupportedAsynchronousActions in CIM_MemoryConfigurationCapabilities. |
| ReturnToPool() | Conditional | Support is conditional on the existence of ReturnToPool (3) in SupportedSynchronousOperations or SupportedAsynchronousOperations in CIM_MemoryConfigurationCapabilities. |

12.6.4 CIM_ResourcePool

CIM_ResourcePool (see Table 143) represents a pool of memory resources. It provides an aggregation point for like memory resources and a source of capacity for the allocation extrinsic provided by the CIM_MemoryConfigurationService

Requirement: Mandatory.

Table 143 - Class: CIM_ResourcePool

| Element | Requirement | Notes |
|-----------------|-------------|--|
| InstaceID | Mandatory | Key |
| PoolID | Mandatory | None |
| Primordial | Mandatory | True |
| Capacity | Mandatory | Total raw capacity of the pool. This value can also be calculated by summing the capacity of the constituent CIM_RawMemory instances. |
| ResourceType | Optional | Memory |
| AllocationUnits | Mandatory | "Bytes" |
| Reserved | Optional | The total capacity allocated from the pool. This value is calculated in terms of the raw capacity consumed by any allocations (e.g., if an allocation utilizes more capacity than is exposed for metadata or replication, the Reserved total includes this extra capacity) |

12.6.5 CIM_MemoryCapabilities

CIM_MemoryCapabilities models the features of a given set of memory resources. Implementations support attributes as given in Table 144.

Table 144 - Class: CIM_MemoryCapabilities

| Element | Requirement | Notes |
|-----------------------------------|-------------|---|
| InstanceID | Mandatory | Key |
| ElementName | Mandatory | User friendly name for this capability instance |
| MemoryModes | Mandatory | Indicates the platform's support for various memory access mode. |
| ReplicationSupport | Mandatory | Indicates the platform's support for various types of memory replication. |
| ReliabilitySupport | Mandatory | Indicates the platform's support for memory reliability features. |
| Alignment | Optional | Alignment required when allocating memory regions |
| ChannelInterleaveSupport | Optional | List of supported memory channel interleave sizes |
| ChannelInterleaveWaySupport | Optional | Describes support for interleaving across memory channels. |
| MemoryControllerInterleaveSupport | Optional | Describes support for interleaving across memory controllers. |
| MemoryAffinitySupport | Optional | Processor affinity support (e.g., UMA, NUMA) |

12.6.6 CIM_MemoryConfigurationCapabilities

CIM_MemoryConfigurationCapabilities describes the features available from an associated MemoryConfigurationService instance. Implementations support attributes as given in Table 145.

Table 145 - Class: CIM_MemoryConfigurationCapabilities

| Element | Requirement | Notes |
|-----------------------------------|-------------|--|
| InstanceID | Mandatory | Key |
| ElementName | Mandatory | User friendly name for this capability instance |
| SupportedSynchronousOperations[] | Mandatory | A list of synchronous operations supported by the associated CIM_MemoryConfigurationService. |
| SupportedAsynchronousOperations[] | Mandatory | A list of asynchronous operations supported by the associated CIM_MemoryConfigurationService |

12.6.7 CIM_MemoryAllocationSettingData

CIM_MemoryAllocationSettingData, shown in Table 146, describe parameters related to the allocation of visible memory from a memory resource pool. It can be used to describe an existing allocation in which case it associates with a CIM_VisibleMemory via CIM_ElementSettingData as the current setting. It can represent an allocation request that is in progress (e.g., requires a system reset to take effect) in which case it is associated with CIM_ResourcePool by CIM_ElementSettingData as the next setting

Requirement: Mandatory.

Table 146 - Class: CIM_MemoryAllocationSettingData

| Element | Requirement | Notes |
|--------------------------|-------------|---|
| InstanceID | Mandatory | Key |
| ElementName | Mandatory | Use friendly name for this setting instance |
| ResourceType | Optional | "Other", "Memory", "Non-Volatile Memory" |
| Replication | Optional | Indicates whether replication is requested/ in-use. The possible values are "2" (Not Replicated), "3" (Local Replication) or "4" (Remote Replication). |
| ChannelInterleaveSize | Optional | If the allocated memory region is to utilize a channel interleave, this value indicates the number of bytes written/read before switching to the next channel. |
| ChannelCount | Optional | Indicates the number of channels involved in the channel interleave scheme. |
| ControllerInterleaveSize | Optional | If the allocated memory region is to utilize a controller interleave, this value indicates the number of bytes written/read before switching to the next controller |
| AllocationUnits | Mandatory | Specifies the units of the Reservation capacity property. Generally expected to be "bytes". |
| Reservation | Mandatory | Requested capacity. The units of this type are given by AllocationUnits field. |
| PoolID | Mandatory | The PoolID of the CIM_ResourcePool instance from which this allocation will/has drawn resources. |
| Parent | Optional | If used, this value restricts the allocation to a specific NUMA node by identifying the DeviceID of the node processor. |

12.6.8 CIM_ElementSettingData

12.6.8.1 Relating CIM_MemoryAllocationSettingData to CIM_VisibleMemory

The CIM_ElementSettingData association, shown in Table 147, links instances of CIM_VisibleMemory to their associated CIM_MemoryAllocationSettingData instances. This usage of the association would include the “Is Current” value for the IsCurrent attribute

Table 147 - Class: CIM_ElementSettingData - Use 1

| Element | Requirement | Notes |
|----------------|-------------|---|
| SettingData | Mandatory | This property shall be a reference to an instance of the CIM_MemoryAllocationSettingData. |
| ManagedElement | Mandatory | This property shall be a reference to an instance of CIM_VisibleMemory. |
| IsCurrent | Optional | Used to indicate a setting that is currently in-use (e.g., associated with an existing memory extent). This shall be true for this usage. |
| IsNext | Optional | Used to indicate a requested setting that has not yet taken effect. This shall be false for this usage. |

12.6.8.2 Relating CIM_MemoryAllocationSettingData to CIM_ResourcePool

The CIM_ElementSettingData association can also be used to link pending settings to the pool from which capacity will be drawn when the setting is finalized. This usage of the association would set the IsNext attribute to “Is Next”. Table 148 contains the requirements for elements of this class.

Table 148 - Class: CIM_ElementSettingData - Use 2

| Element | Requirement | Notes |
|----------------|-------------|---|
| SettingData | Mandatory | This property shall be a reference to an instance of the CIM_MemoryAllocationSettingData. |
| ManagedElement | Mandatory | This property shall be a reference to an instance of CIM_ResourcePool. |
| IsCurrent | Optional | Used to indicate a setting that is currently in-use (e.g., associated with an existing memory extent). When representing staged requests, this shall be set to false. |
| IsNext | Optional | Used to indicate a requested setting that has not yet taken effect. When representing staged requests this shall be set to true. |

12.6.9 CIM_HostedService

The CIM_HostedService association is used to relate an instance of CIM_ComputerSystem with a CIM_MemoryConfigurationService instance. Table 149 contains the requirements for elements of this class.

Table 149 - Class: CIM_HostedService

| Element | Requirement | Notes |
|------------|-------------|---|
| Antecedent | Mandatory | This property shall be a reference to an instance of CIM_ComputerSystem. Cardinality is "1". |
| Dependent | Mandatory | This property shall be a reference to an instance of CIM_MemoryConfigurationService. Cardinality is "1". |

12.6.10 CIM_ElementAllocatedFromPool

The CIM_ElementAllocatedFromPool association is used to relate the CIM_VisibleMemory instance to the CIM_ResourcePool instance to which it applies. Table 150 contains the requirements for elements of this class.

Table 150 - Class: CIM_ElementAllocatedFromPool

| Element | Requirement | Notes |
|------------|-------------|--|
| Antecedent | Mandatory | This property shall be a reference to an instance of CIM_ResourcePool |
| Dependent | Mandatory | This property shall be a reference to an instance of CIM_VisibleMemory |

12.6.11 CIM_ConcreteComponent

The CIM_ConcreteComponent association is used to relate the CIM_RawMemory to the CIM_ResourcePool of which it is part. Table 151 contains the requirements for elements of this class.

Table 151 - Class: CIM_ConcreteComponent

| Element | Requirement | Notes |
|----------------|-------------|--|
| GroupComponent | Mandatory | This property shall be a reference to an instance of the CIM_ResourcePool class. Cardinality is "1" |
| PartComponent | Mandatory | This property shall be a reference to an instance of the CIM_RawMemory. Cardinality is "1.*". |

12.6.12 CIM_ElementCapabilities

12.6.12.1 Relating CIM_ResourcePool to CIM_MemoryCapabilities

The CIM_ElementCapabilities association is used to relate the CIM_ResourcePool to a description of its capabilities given by CIM_MemoryCapabilities. Table 152 contains the requirements for elements of this class.

Table 152 - Class: CIM_ElementCapabilities use 1

| Element | Requirement | Notes |
|----------------|-------------|---|
| ManagedElement | Mandatory | This property shall be a reference to an instance of the CIM_ResourcePool class. Cardinality is "1". |
| Capabilities | Mandatory | This property shall be a reference to an instance of the CIM_MemoryCapabilities class. Cardinality is "1". |

12.6.12.2 Relating CIM_MemoryConfigurationService to CIM_MemoryConfigurationCapabilities

The CIM_ElementCapabilities association is used to relate the CIM_MemoryConfigurationService to a description of its capabilities given by CIM_MemoryConfigurationCapabilities. Table 153 contains the requirements for elements of this class.

Table 153 - Class CIM_ElementCapabilities use 2

| Element | Requirement | Notes |
|----------------|-------------|--|
| ManagedElement | Mandatory | This property shall be a reference to an instance of the CIM_MemoryConfigurationService class. Cardinality is "1..*". |
| Capabilities | Mandatory | This property shall be a reference to an instance of the CIM_MemoryConfigurationCapabilities class. Cardinality is "1". |

13 Persistent Memory Configuration Profile

13.1 Synopsis

Profile Name: Persistent Memory Configuration (Component Profile)

Version: 1.0.0

Organization: SNIA

Central Class: Persistent Memory Service

Scoping Class: ComputerSystem

Related Profiles: Table 154 describes the related profiles for the Memory Configuration Profile:

Table 154 - Related Profiles

| Profile Name | Organization | Version | Requirement | Description |
|--------------------------|--------------|---------|-------------|--------------|
| Profile Registration | DMTF | 1.1.0 | Mandatory | DMTF DSP1033 |
| Multi-Type System Memory | DMTF | 1.0.0 | Mandatory | DMTF DSP1071 |
| Memory Configuration | SNIA | 1.0.0 | Mandatory | |

13.2 Overview

13.2.1 Description

Persistent memory, like other forms of storage media is only valuable when its contents can be reliably located and protected. The Persistent Memory Configuration Profile describes a model for managing persistent memory that provides for these features. In this profile, persistent memory regions are utilized as primordial extents. A management service is described which provides allocation, deallocation and modification methods that operate on these primordial persistent memory extents. Allocation requests utilize primordial extents to create concrete system addressable storage extents. Deallocation requests revert concrete extents into their primordial form. Modification requests can grow, shrink and make other types of modifications to concrete extents.

13.2.2 Class Hierarchy Overview

13.2.2.1 Class Diagram

Figure 49 shows the Persistent Memory Configuration Profile class hierarchy. For simplicity, the prefix CIM_ has been removed from the names of the classes

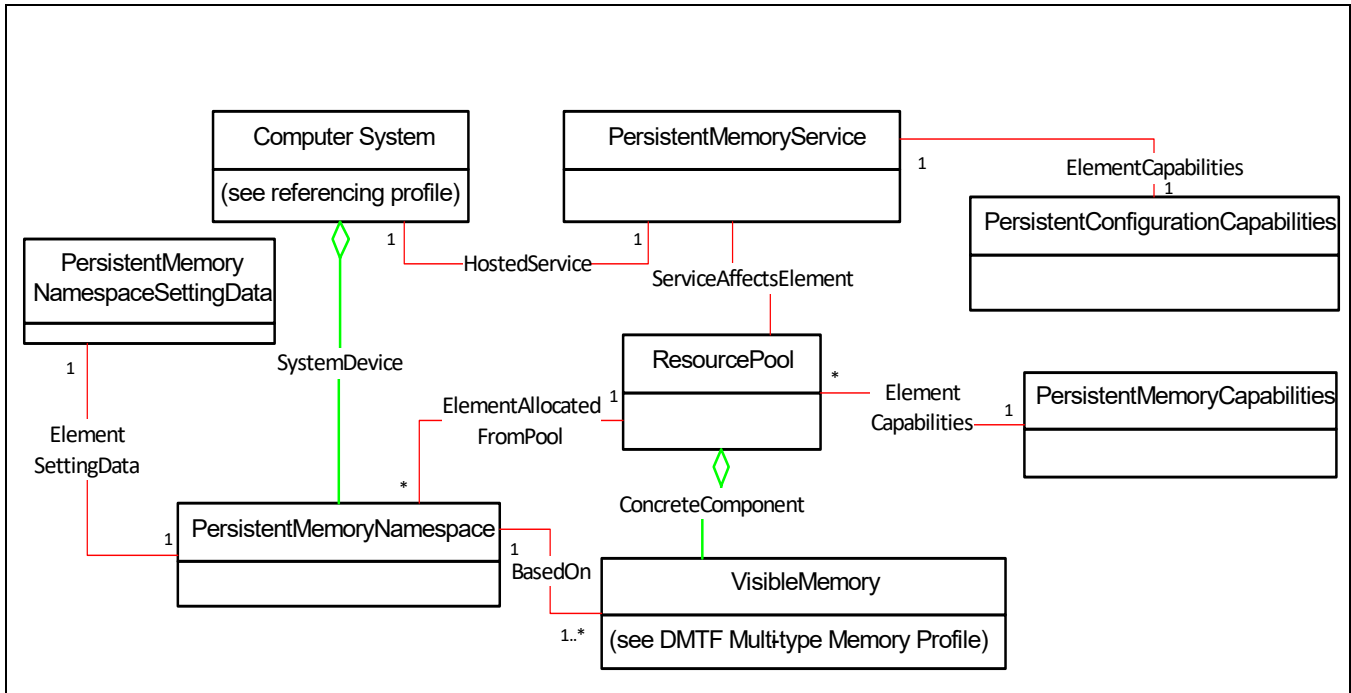


Figure 49 - Persistent Memory Configuration: Class Diagram

13.2.2.2 CIM_PersistentMemoryService

The PersistentMemoryService is the central class of the profile. It models the system’s support for modifying its persistent memory configuration.

13.2.2.3 CIM_ResourcePool (persistent memory)

The ResourcePool aggregates persistent memory primordial extents (VisibleMemory).

13.2.2.4 CIM_PersistentConfigurationCapabilities & CIM_PersistentMemoryCapabilities

This profile supports run-time detection of memory features. PersistentConfigurationCapabilities advertises the system’s support for persistent memory namespace configuration. CIM_PersistentMemoryCapabilities indicates the capabilities of the VisibleMemory primordial extents and other system components as regards their ability to support various persistent memory quality of service levels.

13.2.2.5 CIM_PersistentMemoryNamespace

PersistentMemoryNamespace models a named region of persistent memory.

13.2.2.6 CIM_PersistentMemoryNamespaceSettingData

PersistentMemoryNamespaceSettingData reflects the parameters specified during namespace creation or modification that define the quality of service offered by the associated PersistentMemoryNamespace.

13.2.2.7 CIM_RegisteredProfile

CIM_RegisteredProfile is expected to be implemented per the [Profile Registration Profile \(Storage Management Technical Specification, Part 3 Common Profiles, 1.8.0 Rev 4 Clause 36 Profile Registration Profile\)](#).

13.2.2.8 DMTF Multi-Type System Memory Profile & SNIA Memory Configuration Profile

The VisibleMemory class is described in detail in the DMTF Multi-Type System Memory Profile. The SNIA Memory Configuration Profile describes a mechanism by which VisibleMemory instances can be created. VisibleMemory instances model memory capacity that has been allocated (concrete) from a memory resources pool. In the context of this profile VisibleMemory instances are presumed to be persistent and to require further configuration (i.e. PersistentMemoryNamespace creation) before being useful to the system.

13.3 Implementation

13.3.1 CIM_ResourcePool

Implementations of this profile shall contain at least one instance of CIM_ResourcePool. The pool shall serve as an aggregation point for CIM_VisibleMemory instances which represent persistent memory extents.

13.3.1.1 Determining Pool Capacity

The capacity of a CIM_ResourcePool instance shall be the sum of the capacities of the constituent CIM_VisibleMemory extents.

13.3.2 CIM_PersistentMemoryCapabilities

Implementations of this profile shall include at least one instance of CIM_PersistentMemoryCapabilities. Each instance shall describe the capabilities of one or more instances of CIM_ResourcePool as determined by the CIM_ElementCapabilities association.

13.3.3 CIM_PersistentMemoryService

Implementations of this profile shall contain at least one instance of CIM_PersistentMemoryService. Instances of this class shall conditionally support allocation, deallocation and modification of PersistentMemoryNamespace devices. Availability of any given extrinsic shall be determined by examining the CIM_PersistentConfigurationCapabilities instance to which it is associated (CIM_ElementCapabilities).

13.3.4 CIM_PersistentConfigurationCapabilities

Implementations of this profile shall contain at least one instance of CIM_PersistentConfigurationCapabilities. Each instance shall be associated with one or more instances of CIM_PersistentMemoryService via a CIM_ElementCapabilities association.

13.3.5 CIM_PersistentMemoryNamespace

CIM_PersistentMemoryNamespace shall be used to represent configured persistent memory. Instances shall exist conditionally, when the necessary configuration steps required to create a persistent memory device have occurred.

13.3.6 CIM_PersistentMemoryNamespaceSettingData

CIM_PersistentMemoryNamespaceSettingData shall represent settings supplied during the configuration or modification of a CIM_PersistentMemoryNamespace. Existence of CIM_PersistentMemoryNamespaceSettingData instances shall be conditional. When an instance of CIM_PersistentMemoryNamespace exists there shall be an associated (ElementSettingData) CIM_PersistentMemoryNamespaceSettingData instance.

13.3.7 CIM_ElementCapabilities

CIM_ElementCapabilities shall associate the CIM_PersistentConfigurationCapabilities to CIM_PersistentMemoryService. Capabilities so associated shall describe the extrinsic method support offered by the service instance.

13.3.8 CIM_ServiceAffectsElement

CIM_ServiceAffectsElement associations shall relate CIM_PersistentMemoryService instances with the CIM_ResourcePool instances they are able to operate on.

13.3.9 CIM_ConcreteComponent

Persistent CIM_VisibleMemory instances pooled together for management purposes are represented by CIM_ResourcePool instances. CIM_VisibleMemory instances shall be associated with a CIM_ResourcePool instance by the CIM_ConcreteComponent association.

13.3.10 CIM_ElementAllocatedFromPool

CIM_PersistentMemoryNamespace instances shall be associated to the CIM_ResourcePool from which their capacity is drawn using the CIM_ElementAllocatedFromPool association.

13.3.11 CIM_HostedService

The CIM_PersistentMemoryService shall be associated to the CIM_ComputerSystem by CIM_HostedService.

13.3.12 CIM_ElementSettingData

Instances of CIM_PersistentMemoryNamespaceSettingData shall be associated to the CIM_PersistentMemoryNamespace instance to which they apply using an ElementSettingData.

13.3.13 CIM_ElementConformsToProfile

CIM_ElementConformsToProfile shall associate a CIM_RegisteredProfile instance representing the Persistent Memory Service profile to the central class of the profile CIM_PersistentMemoryService.

13.3.14 CIM_SystemDevice

Instances of PersistentMemoryNamespace shall be associated to the scoping instance of CIM_ComputerSystem by CIM_SystemDevice.

13.4 Methods

13.4.1 CIM_ResourcePool

Implementations of this profile shall support the operations listed in Table 155 for CIM_ResourcePool.

Table 155 - Operations: CIM_ResourcePool

| Operation | Requirement | Messages |
|--------------------|-------------|----------|
| GetInstance | Mandatory | None |
| Associators | Mandatory | None |
| AssociatorNames | Mandatory | None |
| References | Mandatory | None |
| ReferenceNames | Mandatory | None |
| EnumerateInstances | Mandatory | None |

Table 155 - Operations: CIM_ResourcePool

| Operation | Requirement | Messages |
|------------------------|-------------|----------|
| EnumerateInstanceNames | Mandatory | None |

13.4.2 CIM_PersistentMemoryCapabilities

Implementations of this profile shall support the operations listed in Table 156 for CIM_PersistentMemoryCapabilities.

Table 156 - Operations: CIM_PersistentMemoryCapabilities

| Operation | Requirement | Messages |
|------------------------|-------------|----------|
| GetInstance | Mandatory | None |
| Associators | Mandatory | None |
| AssociatorNames | Mandatory | None |
| References | Mandatory | None |
| ReferenceNames | Mandatory | None |
| EnumerateInstances | Mandatory | None |
| EnumerateInstanceNames | Mandatory | None |

13.4.3 CIM_PersistentMemoryService

13.4.3.1 Overview

Implementations of this profile shall support the operations listed in Table 157 for CIM_PersistentMemoryService.

Table 157 - Operations: CIM_PersistentMemoryService

| Operation | Requirement | Messages |
|------------------------|-------------|----------|
| GetInstance | Mandatory | None |
| Associators | Mandatory | None |
| AssociatorNames | Mandatory | None |
| References | Mandatory | None |
| ReferenceNames | Mandatory | None |
| EnumerateInstances | Mandatory | None |
| EnumerateInstanceNames | Mandatory | None |
| AllocateFromPool | Optional | None |
| ReturnToPool | Optional | None |
| ModifyNamespace | Optional | None |

13.4.3.2 CIM_PersistentMemoryService.AllocateFromPool()

The AllocateFromPool() method is used to configure persistent memory extents resulting in a system visible persistent memory device. See Table 158 for return values and Table 159 for parameters.

Table 158 - AllocateFromPool() Method: Return Code Values

| Value | Description |
|-------|--|
| 0 | Request was successfully executed |
| 1 | Not Supported |
| 2 | Unknown |
| 3 | Timeout |
| 4 | Failed |
| 5 | Invalid Parameter |
| 4096 | Request was successfully staged for future execution. |
| 4097 | Inconsistent Resources |
| 4098 | Inconsistent Parameters |
| 4099 | Request did not complete in its entirety and partial results could not be undone |

AllocateFromPool() parameters are listed in Table 159

Table 159 - AllocateFromPool() Method: Parameters

| Qualifiers | Name | Type | Description |
|------------|-----------|-----------------------------------|--|
| IN, REQ | Pool | CIM_ResourcePool REF | The pool of memory resources from which to allocate the visible memory region. |
| IN,REQ | Goal | string | An embedded instance of CIM_PersistentMemoryNamespaceSettingData which describes the allocation request. |
| OUT | Namespace | CIM_PersistentMemoryNamespace REF | Object path of the resulting CIM_PersistentMemoryNamespace. Undefined if the return code is other than 0 |

13.4.3.3 CIM_PersistentMemoryService.ReturnToPool()

The ReturnToPool() method deletes an instance of CIM_PersistentMemoryNamespace, returning the capacity it occupied to the CIM_ResourcePool instance from which it was allocated. Note that associated CIM_PersistentMemoryNamespaceSettingData are deleted as well. See Table 160 for return values and Table 161 for parameters.

Table 160 - ReturnToPool() Method: Return Code Values

| Value | Description |
|-------|--|
| 0 | Request was successfully executed |
| 1 | Method is not supported in this implementation |
| 2 | Unknown |
| 3 | Timeout |

Table 160 - ReturnToPool() Method: Return Code Values

| Value | Description |
|-------|--|
| 4 | Failed |
| 5 | Invalid Parameter |
| 4096 | Request Was Successfully Staged for Future Execution |
| 4099 | Request did not complete in its entirety and partial results could not be undone |

ReturnToPool() parameters are listed in Table 161:

Table 161 - ReturnToPool() Method: Parameters

| Qualifiers | Name | Type | Description |
|------------|-----------|--------------------------------------|---|
| IN, REQ | Namespace | CIM_PersistentMemoryNamespace REF | The persistent memory namespace instance to be deleted. |

13.4.3.4 CIM_PersistentMemoryService.ModifyNamespace()

The ModifyNamespace() method is used to alter the characteristics of an existing namespace. Increases to the namespace size allocate resources from the same pool that existing resources have been drawn from. Likewise shrinking a namespace returns capacity to the source pool. See Table 162 for return values.

Table 162 - ModifyNamespace() Method: Return Code Values

| Value | Description |
|-------|--|
| 0 | Request was successfully executed |
| 1 | Method is not supported in this implementation |
| 2 | Unknown |
| 3 | Timeout |
| 4 | Failed |
| 5 | Invalid Parameter |
| 4096 | Request was successfully staged for future execution |
| 4097 | Insufficient Resources |
| 4098 | Inconsistent Parameters |
| 4099 | Request did not complete in its entirety and partial results could not be undone |

ModifyNamespace() parameters are listed in Table 163:

Table 163 - ModifyNamespace() Method: Parameters

| Qualifiers | Name | Type | Description |
|------------|-----------|-----------------------------------|---|
| IN | Namespace | CIM_PersistentMemoryNamespace REF | The persistent memory namespace instance to be changed. |
| IN | Goal | string | Embedded instance of CIM_PersistentMemoryNamespaceSettingData. Note that the implementation may restrict the fields in the NamespaceSetting instance that apply to a modify operation. Modifying a property for which modification is not supported results in an Invalid Parameter return code. The goal is expected to contain values for all fields with those that are not being changed populated with their current values. |

13.4.4 CIM_PersistentConfigurationCapabilities

Implementations of this profile shall support the operations listed in Table 164 for CIM_PersistentConfigurationCapabilities.

Table 164 - Operations: CIM_PersistentConfigurationCapabilities

| Operation | Requirement | Messages |
|------------------------|-------------|----------|
| GetInstance | Mandatory | None |
| Associators | Mandatory | None |
| AssociatorNames | Mandatory | None |
| References | Mandatory | None |
| ReferenceNames | Mandatory | None |
| EnumerateInstances | Mandatory | None |
| EnumerateInstanceNames | Mandatory | None |

13.4.5 CIM_PersistentMemoryNamespace

Implementations of this profile shall support the operations listed in Table 165 for CIM_PersistentMemoryNamespace

DeleteInstance performs the exact same operation as CIM_PersistentMemoryService.ReturnToPool().

Table 165 - Operations: CIM_PersistentMemoryNamespace

| Operation | Requirement | Messages |
|-----------------|-------------|----------|
| GetInstance | Mandatory | None |
| Associators | Mandatory | None |
| AssociatorNames | Mandatory | None |
| References | Mandatory | None |

Table 165 - Operations: CIM_PersistentMemoryNamespace

| Operation | Requirement | Messages |
|------------------------|-------------|----------|
| ReferenceNames | Mandatory | None |
| EnumerateInstances | Mandatory | None |
| EnumerateInstanceNames | Mandatory | None |
| DeleteInstance | Optional | None |

13.4.6 CIM_PersistentMemoryNamespaceSettingData

Implementations of this profile shall support the operations listed in Table 166 for CIM_PersistentMemoryNamespaceSettingData.

Table 166 - Operations: CIM_PersistentMemoryNamespaceSettingData

| Operation | Requirement | Messages |
|------------------------|-------------|----------|
| GetInstance | Mandatory | None |
| Associators | Mandatory | None |
| AssociatorNames | Mandatory | None |
| References | Mandatory | None |
| ReferenceNames | Mandatory | None |
| EnumerateInstances | Mandatory | None |
| EnumerateInstanceNames | Mandatory | None |

13.4.7 CIM_ElementCapabilities

Implementations of this profile shall support the operations listed in Table 167 for CIM_ElementCapabilities.

Table 167 - Operations: CIM_ElementCapabilities

| Operation | Requirement | Messages |
|------------------------|-------------|----------|
| GetInstance | Mandatory | None |
| Associators | Mandatory | None |
| AssociatorNames | Mandatory | None |
| References | Mandatory | None |
| ReferenceNames | Mandatory | None |
| EnumerateInstances | Mandatory | None |
| EnumerateInstanceNames | Mandatory | None |

13.4.8 CIM_ServiceAffectsElement

Implementations of this profile shall support the operations listed in Table 168 for the CIM_ServiceAffectsElement class.

Table 168 - Operations: CIM_ServiceAffectsElement

| Operation | Requirement | Messages |
|------------------------|-------------|----------|
| GetInstance | Mandatory | None |
| EnumerateInstances | Mandatory | None |
| EnumerateInstanceNames | Mandatory | None |

13.4.9 CIM_ConcreteComponent

Implementations of this profile shall support the operations listed in Table 169 for the CIM_ConcreteComponent class.

Table 169 - Operations: CIM_ConcreteComponent

| Operation | Requirement | Messages |
|------------------------|-------------|----------|
| GetInstance | Mandatory | None |
| EnumerateInstances | Mandatory | None |
| EnumerateInstanceNames | Mandatory | None |

13.4.10 CIM_ElementAllocatedFromPool

Implementations of this profile shall support the operations listed in Table 170 for the CIM_ElementAllocatedFromPool class.

Table 170 - Operations: CIM_ElementAllocatedFromPool

| Operation | Requirement | Messages |
|------------------------|-------------|----------|
| GetInstance | Mandatory | None |
| EnumerateInstances | Mandatory | None |
| EnumerateInstanceNames | Mandatory | None |

13.4.11 CIM_HostedService

Implementations of this profile shall support the operations listed in Table 171 for the CIM_HostedService class.

Table 171 - Operations: CIM_HostedService

| Operation | Requirement | Messages |
|------------------------|-------------|----------|
| GetInstance | Mandatory | None |
| EnumerateInstances | Mandatory | None |
| EnumerateInstanceNames | Mandatory | None |

13.4.12 CIM_ElementSettingData

Implementations of this profile shall support the operations listed in Table 172 for the CIM_ElementSettingData class.

Table 172 - Operations: CIM_ElementSettingData

| Operation | Requirement | Messages |
|------------------------|-------------|----------|
| GetInstance | Mandatory | None |
| EnumerateInstances | Mandatory | None |
| EnumerateInstanceNames | Mandatory | None |

13.4.13 CIM_ElementConformsToProfile

Implementations of this profile shall support the operations listed in Table 173 for the CIM_ElementConformsToProfile class.

Table 173 - Operations: CIM_ElementConformsToProfile

| Operation | Requirement | Messages |
|------------------------|-------------|----------|
| GetInstance | Mandatory | None |
| EnumerateInstances | Mandatory | None |
| EnumerateInstanceNames | Mandatory | None |

13.4.14 CIM_SystemDevice

Implementations of this profile shall support the operations listed in Table 174 for the CIM_SystemDevice class.

Table 174 - Operations: CIM_SystemDevice

| Operation | Requirement | Messages |
|------------------------|-------------|----------|
| GetInstance | Mandatory | None |
| EnumerateInstances | Mandatory | None |
| EnumerateInstanceNames | Mandatory | None |

13.5 Use Cases

13.5.1 Advertising Profile Conformance

Figure 50 shows how an instance of CIM_RegisteredProfile is used to indicate the presence of a conforming implementation of the Persistent Memory Configuration Profile and to identify instances of its central class CIM_PersistentMemoryService. Clients can follow the CIM_ElementConformsToProfile association directly to the central class or likewise identify the hosting ComputerSystem instance.

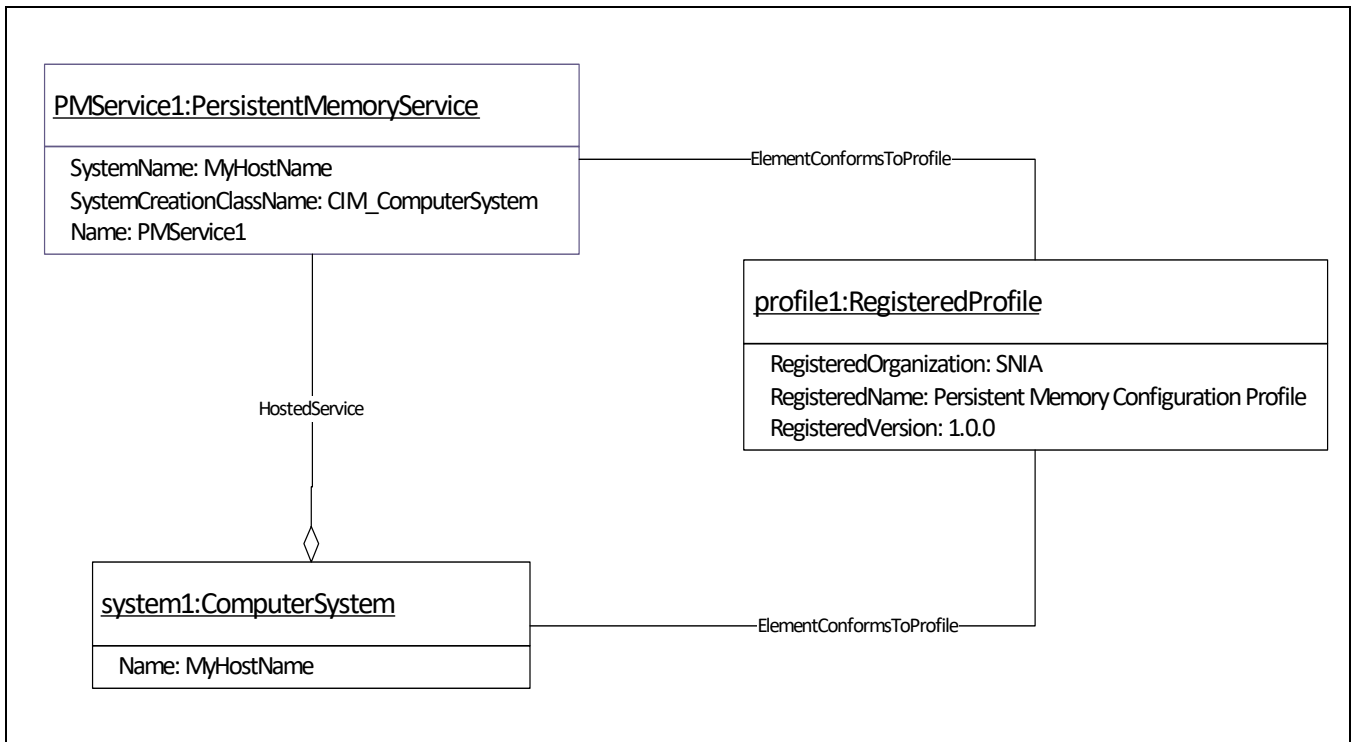


Figure 50 - Use Case: Profile Registration

13.5.2 Locate Existing Persistent Namespaces

Persistent namespaces are located by enumerating CIM_PersistentMemoryNamespace instances.

13.5.3 Determine Support for Persistent Memory Features and Operations

Support for persistent memory operations is signaled by the attributes of the CIM_PersistentConfigurationCapabilities and CIM_PersistentMemoryCapabilities classes. Support for creation/deletion/modification of CIM_PersistentMemoryNamespaces is determined by enumerating instances of CIM_PersistentConfigurationCapabilities and examining the supported operations attributes. Once an instance with the desired capabilities is found the ElementCapabilities association is used to locate the service that offers these capabilities. The pools that the service can act upon are located by following the CIM_ServiceAffectsElement association.

Support for specific persistent memory quality of service related features is determined by enumerating instances of CIM_PersistentMemoryCapabilities and examining attributes. For example, if the constituent VisibleMemory extents include mirrored persistent capacity the CIM_PersistentMemoryCapabilities instance would have its attributes set so as to indicate the ability of the ResourcePool to support mirrored PersistentMemoryNamespace creation.

These capability instances are given in Figure 51. In the example the PersistentMemoryService is advertising support for creating and deleting persistent memory namespaces.

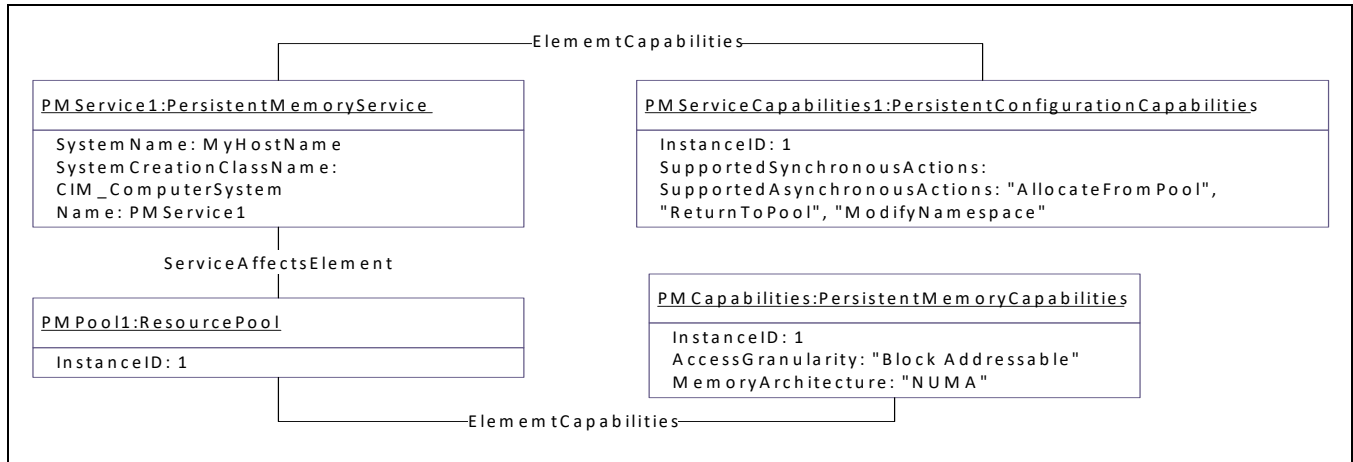


Figure 51 - Use Case - Detect Capabilities

13.5.4 Determine Availability of Persistent Capacity

Available persistent capacity is determined by enumerating ResourcePool instances and subtracting the Reserved attribute from the Capacity attribute.

13.5.5 Create a Persistent Namespace

The steps to create a persistent namespace are:

- Enumerate instances of ResourcePool, find a pool that has sufficient remaining capacity and whose associated CIM_PersistentMemoryCapabilities indicates support for the desired quality of service.
- Follow the CIM_ServiceAffectsElement association to the PersistentMemoryService instance that handles the selected pool.
- Utilize the AllocateFromPool() extrinsic, specify pool, desired size, quality of service parameters.

When the AllocateFromPool() extrinsic returns with a successful return code the output parameter "Namespace" contains a reference to the created PersistentMemoryNamespace instance. A NamespaceSetting instance which matches the goal parameter to AllocateFromPool() is also created and associated to the new namespace by a CIM_ElementSettingData association.

Instances involved in this use case are given in Figure 52.

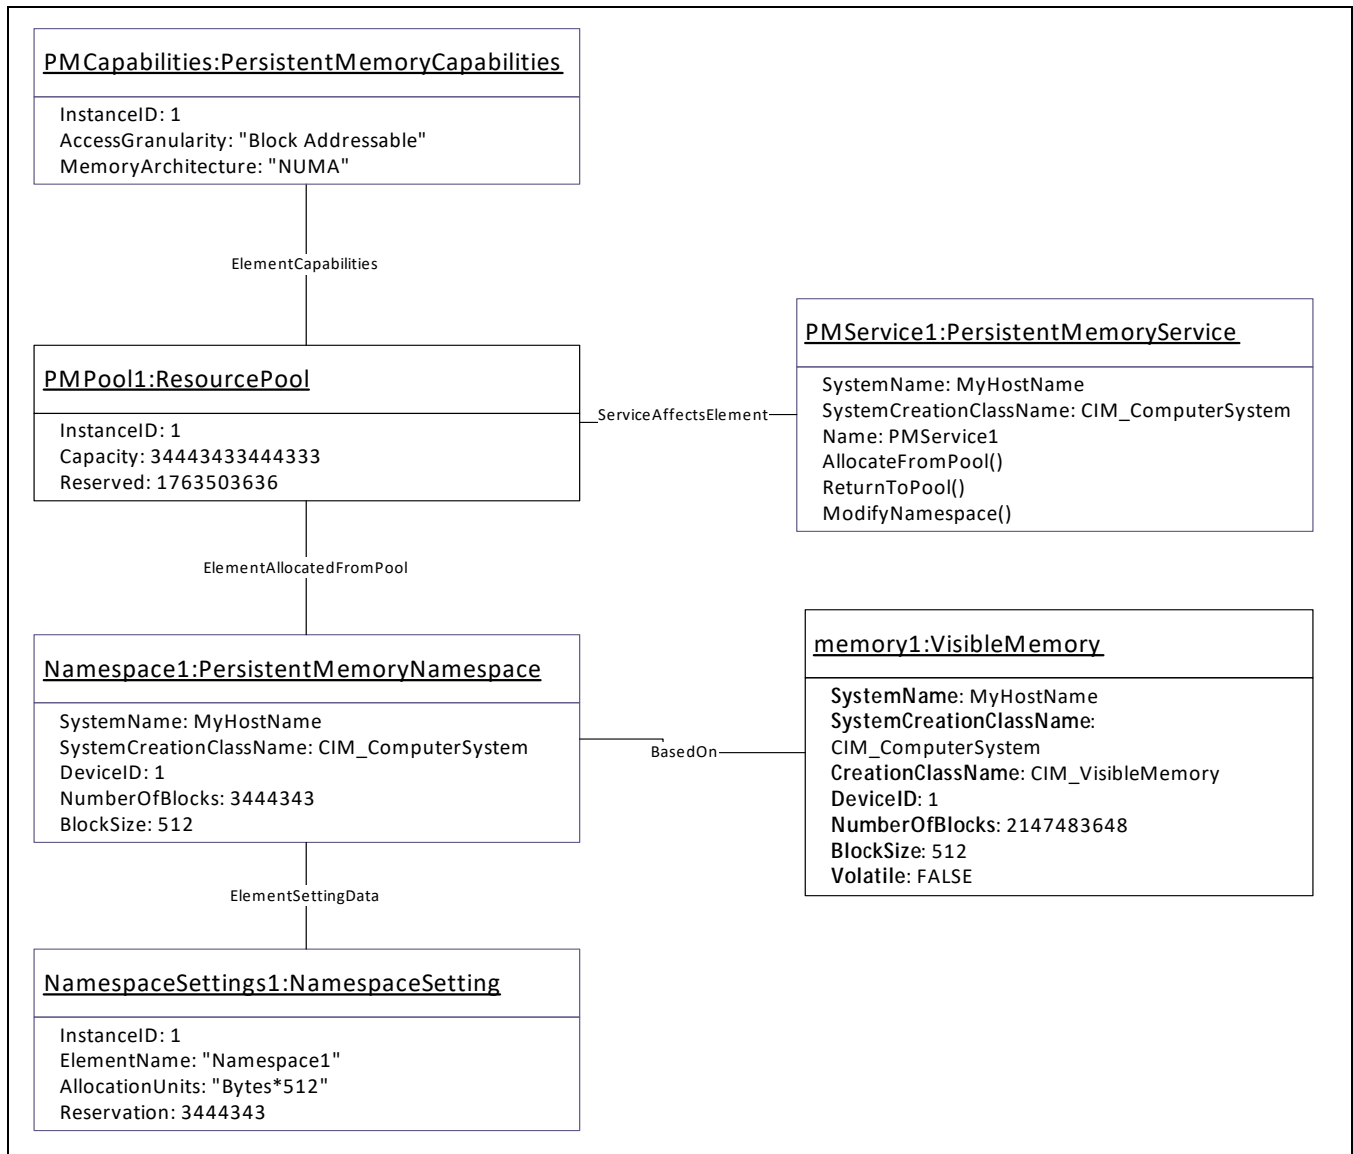


Figure 52 - Use Case - Create Namespace

13.5.6 Deallocate a Persistent Namespace

Deleting a namespace can be accomplished using the intrinsic DeleteInstance method. An alternate method is to use the ReturnToPool() extrinsic available on the PersistentMemoryService instance that was used to create it. This can be determined by starting at the PersistentMemoryNamespace instance (to be deleted) and following the CIM_ElementAllocatedFromPool and CIM_ServiceAffectsElement associations.

13.5.7 Modify a Persistent Namespace

Instances are modified using PersistentMemoryService.ModifyNamespace method. The service associated with the instance to be modified is found by starting at the PersistentMemoryNamespace instance (to be deleted) and following the CIM_ElementAllocatedFromPool and CIM_ServiceAffectsElement associations.

13.6 CIM Elements

13.6.1 Overview

Table 175 shows the instances of CIM Elements for this profile. Instances of the following CIM Elements shall be implemented as described in Clause 12 Memory Configuration Profile. Clauses (“Implementation”) and (“Methods”) may impose additional requirements on these elements.

Table 175 - CIM Elements for Persistent Memory Configuration

| Element | Requirement | Description |
|--|-------------|-------------|
| CIM_RegisteredProfile | Mandatory | See 13.6.2 |
| CIM_ResourcePool | Mandatory | See 13.6.3 |
| CIM_PersistentMemoryCapabilities | Mandatory | See 13.6.4 |
| CIM_PersistentMemoryService | Mandatory | See 13.6.5 |
| CIM_PersistentConfigurationCapabilities | Mandatory | See 13.6.6 |
| CIM_PersistentMemoryNamespace | Mandatory | See 13.6.7 |
| CIM_PersistentMemoryNamespaceSettingData | Mandatory | See 13.6.8 |
| CIM_ServiceAffectsElement | Mandatory | See 13.6.10 |
| CIM_ElementSettingData | Mandatory | See 13.6.14 |
| CIM_HostedService | Mandatory | See 13.6.13 |
| CIM_ElementAllocatedFromPool | Mandatory | See 13.6.12 |
| CIM_ConcreteComponent | Mandatory | See 13.6.11 |
| CIM_ElementCapabilities | Mandatory | See 13.6.9 |
| CIM_ElementConformsToProfile | Mandatory | See 13.6.15 |
| CIM_SystemDevice | Mandatory | See 13.6.16 |
| CIM_BasedOn | Mandatory | See 13.6.17 |

13.6.2 CIM_RegisteredProfile

CIM_RegisteredProfile is used to advertise implementation conformance with the Persistent Memory Configuration Profile (see *Clause 13*). The CIM_RegisteredProfile class is defined by the *Storage Management Technical Specification, Part 3 Common Profiles, 1.8.0 Rev 4 Clause 36 Profile Registration Profile*.

Table 176 - Class: CIM_RegisteredProfile

| Elements | Requirement | Notes |
|------------------------|-------------|---|
| RegisteredName | Mandatory | This property shall have a value of “Persistent Memory Configuration” |
| RegisteredVersion | Mandatory | This property shall have a value of “1.0.0” |
| RegisteredOrganization | Mandatory | This property shall have a value of 11 (SNIA) |

13.6.3 CIM_ResourcePool

CIM_ResourcePool represents a pool of persistent memory resources. It provides an aggregation point for like persistent memory resources and a source of capacity for the allocation extrinsic provided by the CIM_PersistentMemoryService. ResourcePool properties are described in Table 177, “Class: CIM_ResourcePool,”

Requirement: Mandatory.

Table 177 - Class: CIM_ResourcePool

| Element | Requirement | Notes |
|-----------------|-------------|--|
| InstanceID | Mandatory | Key |
| PoolID | Mandatory | None |
| Primordial | Mandatory | True |
| Capacity | Mandatory | Total usable capacity, both allocated and unallocated in bytes. |
| ResourceType | Optional | “Non-Volatile Memory” |
| AllocationUnits | Mandatory | “Bytes” |
| Reserved | Optional | The total capacity allocated from the pool. This value is calculated in terms of the raw capacity consumed by any allocations (e.g., if an allocation utilizes more capacity than is exposed for meta data or replication, the Reserved total includes this extra capacity). |

13.6.4 CIM_PersistentMemoryCapabilities

CIM_PersistentMemoryCapabilities describes the capabilities of pool(s) of persistent memory. Capabilities can be derived from the underlying persistent memory devices, memory controllers, platform firmware, or other available software. CIM_PersistentMemoryCapabilities are described in Table 178.

Requirement: Mandatory.

Table 178 - Class: CIM_PersistentMemoryCapabilities

| Element | Requirement | Notes |
|--------------------|-------------|---|
| InstanceID | Mandatory | Key |
| ElementName | Mandatory | User friendly name for this capability instance |
| SecurityFeatures | Optional | Indicate support for security features. |
| AccessGranularity | Optional | Describes the access types supported by the pool. |
| MemoryArchitecture | Optional | Memory architectures supported e.g., NUMA. |
| Replication | Optional | Indicates support for various types of replication. |

13.6.5 CIM_PersistentMemoryService

The CIM_PersistentMemoryService provides extrinsic methods suitable for configuring persistent memory. Implementations support attributes as given in Table 179.

Requirement: Mandatory.

Table 179 - Class: CIM_PersistentMemoryService

| Element | Requirement | Notes |
|-------------------------|-------------|-------|
| CreationClassName | Mandatory | Key |
| Name | Mandatory | Key |
| SystemCreationClassName | Mandatory | Key |
| SystemName | Mandatory | Key |
| AllocateFromPool() | Optional | |
| ReturnToPool() | Optional | |
| ModifyNamespace() | Optional | |

13.6.6 CIM_PersistentConfigurationCapabilities

CIM_PersistentConfigurationCapabilities describes the capabilities of the CIM_PersistentMemoryService. The properties are documented in Table 179.

Table 180 - Class: CIM_PersistentConfigurationCapabilities

| Element | Requirement | Notes |
|-----------------------------------|-------------|--|
| InstanceID | Mandatory | Key |
| ElementName | Mandatory | User friendly name for this capability instance |
| SupportedSynchronousOperations[] | Mandatory | Enumeration indicating the available synchronous memory provisioning operations. Synchronous operations result in an immediate change to the platform memory configuration. |
| SupportedAsynchronousOperations[] | Mandatory | Enumeration indicating the available asynchronous memory provisioning operations. Asynchronous operations stage a memory provisioning request which takes effect after some triggering action such as a system reboot. |

13.6.7 CIM_PersistentMemoryNamespace

CIM_PersistentMemoryNamespace represents a system usable persistent memory allocation. CIM_PersistentMemoryNamespace properties are described in Table 13.6.7.

Requirement: Mandatory

Table 181 - Class: CIM_PersistentMemoryNamespace

| Element | Requirement | Notes |
|-------------------------|-------------|--|
| CreationClassName | Mandatory | Key |
| DeviceID | Mandatory | Key |
| SystemCreationClassName | Mandatory | Key |
| SystemName | Mandatory | Key |
| Volatile | Mandatory | false |
| Name | Optional | Friendly name |
| HealthState | Mandatory | |
| OperationalStatus | Mandatory | |
| EnabledState | Optional | When not supported the device is presumed to always be enabled. |
| NumberOfBlocks | Mandatory | |
| BlockSize | Mandatory | In bytes. Note that block size can be 1 for byte addressable PM. |

13.6.8 CIM_PersistentMemoryNamespaceSettingData

CIM_PersistentMemoryNamespaceSettingData represents the parameters used when the namespace was allocated or modified. CIM_PersistentMemoryNamespaceSettingData properties are described in Table 182.

Requirement: Mandatory.

Table 182 - Class: CIM_PersistentMemoryNamespaceSettingData

| Element | Requirement | Notes |
|-----------------|-------------|---|
| InstanceID | Mandatory | Key |
| ElementName | Optional | Use friendly name for this setting instance |
| AllocationUnits | Mandatory | Specifies the units of the Reservation capacity property. Generally expected to be "bytes". |
| Reservation | Mandatory | Requested capacity. The units of this value are given by the AllocationUnits field. |
| PoolID | Mandatory | The PoolID of the CIM_ResourcePool instance from which this allocation will/has drawn resources |
| ResourceType | Optional | Indicates whether the extent is byte addressable ("Non-Volatile Memory" and accessed like memory or block addressable ("Storage Volume") and accessed like storage. |

Table 182 - Class: CIM_PersistentMemoryNamespaceSettingData

| Element | Requirement | Notes |
|------------|-------------|--|
| Parent | Optional | If used, this value identifies a specific resource within the pool that shall/has been used when making an allocation. The default value is an empty string. |
| AccessType | Optional | Read, Write, or Read/Write |
| Optimize | Optional | Other requested characteristics of the allocation. |

13.6.9 CIM_ElementCapabilities

13.6.9.1 Relating PersistentMemoryService to PersistentConfigurationCapabilities

The ElementCapabilities association links the PersistentConfigurationCapabilities class that describes the available operations to the PersistentMemoryService class that offers the operations. Properties are described in Table 13.6.9

Requirement: Mandatory.

Table 183 - CIM_ElementCapabilities

| Element | Requirement | Notes |
|----------------|-------------|---|
| ManagedElement | Mandatory | This property shall be a reference to an instance of the CIM_PersistentMemoryService class. |
| Capabilities | Mandatory | This property shall be a reference to an instance of the CIM_PersistentConfigurationCapabilities class. |

13.6.9.2 Relating (Persistent Memory) ResourcePool to CIM_PersistentMemoryCapabilities

The ElementCapabilities association links the CIM_PersistentMemoryCapabilities class that describes the available operations to the ResourcePool class that offers the operations. Properties are described in Table 13.6.9.

Table 184 - CIM_ElementCapabilities

| Element | Requirement | Notes |
|----------------|-------------|---|
| ManagedElement | Mandatory | This property shall be a reference to an instance of the CIM_ResourcePool class. |
| Capabilities | Mandatory | This property shall be a reference to an instance of the CIM_PersistentConfigurationCapabilities class. |

13.6.10 CIM_ServiceAffectsElement

The CIM_ServiceAffectsElement association is used to relate the CIM_PersistentMemoryService to the CIM_ResourcePools which it is able to act upon. Table 13.6.10 contains the requirements for elements of this class.

Table 185 - Class: CIM_ServiceAffectsElement

| Element | Requirement | Notes |
|------------------|-------------|---|
| AffectedElement | Mandatory | This property shall be a reference to an instance of the CIM_ResourcePool class. |
| AffectingElement | Mandatory | This property shall be a reference to an instance of the CIM_PersistentMemoryService class. |

13.6.11 CIM_ConcreteComponent

The CIM_ConcreteComponent association is used to relate the CIM_VisibleMemory to the CIM_ResourcePool of which it is part. Table 186 contains the requirements for elements of this class.

Table 186 - Class: CIM_ConcreteComponent

| Element | Requirement | Notes |
|----------------|-------------|---|
| GroupComponent | Mandatory | This property shall be a reference to an instance of the CIM_ResourcePool class. |
| PartComponent | Mandatory | This property shall be a reference to an instance of the CIM_VisibleMemory class. |

13.6.12 CIM_ElementAllocatedFromPool

The CIM_ElementAllocatedFromPool association relates PersistentMemoryNamespace instances to the ResourcePool from which they were allocated. The properties of CIM_ElementAllocatedFromPool are described in.

Table 187 - Class: CIM_ElementAllocatedFromPool

| Element | Requirement | Notes |
|------------|-------------|---|
| Antecedent | Mandatory | This property shall be a reference to an instance of the CIM_ResourcePool class. |
| Dependent | Mandatory | This property shall be a reference to an instance of the CIM_PersistentMemoryNamespace class. |

13.6.13 CIM_HostedService

The CIM_HostedService association is used to relate an instance of CIM_ComputerSystem with a CIM_PersistentMemoryService instance. Table 188 contains the requirements for elements of this class.

Table 188 - Class: CIM_HostedService

| Element | Requirement | Notes |
|------------|-------------|--|
| Antecedent | Mandatory | This property shall be a reference to an instance of CIM_ComputerSystem. |

Table 188 - Class: CIM_HostedService

| Element | Requirement | Notes |
|-----------|-------------|---|
| Dependent | Mandatory | This property shall be a reference to an instance of the CIM_PersistentMemoryService class. |

13.6.14 CIM_ElementSettingData

CIM_ElementSettingData links a CIM_PersistentMemoryNamespace to the CIM_PersistentMemoryNamespaceSettingData data that defines the quality of service attributes of the namespace. The properties are described in Table 189.

Table 189 - Class CIM_ElementSettingData

| Element | Requirement | Notes |
|----------------|-------------|--|
| SettingData | Mandatory | This property shall be a reference to an instance of the CIM_PersistentMemoryNamespaceSettingData |
| ManagedElement | Mandatory | This property shall be a reference to an instance of CIM_PersistentMemoryNamespace. |
| IsCurrent | Optional | Used to indicate a setting that is currently in-use (e.g., associated with an existing memory extent). In most cases this should be true for this usage. |
| IsNext | Optional | Used to indicate a requested setting that has not yet taken effect. In most cases this should be false for this usage. |
| IsPending | Optional | Maybe used in conjunction with IsNext to indicate the need for a reset or other event before the setting is in force. In most cases this should be false for this usage. |

13.6.15 CIM_ElementConformsToProfile

The CIM_ElementConformsToProfile association links the central class (CIM_PersistentMemoryService) and to the system hosting the service (CIM_ComputerSystem). Table 190 described the properties of CIM_ElementConformsToProfile.

Requirement: Mandatory

Table 190 - Class: CIM_ElementConformsToProfile

| Element | Requirement | Notes |
|--------------------|-------------|---|
| ConformantStandard | Mandatory | This property shall be a reference to an instance of CIM_RegisteredProfile |
| ManagedElement | Mandatory | This property shall be a reference to an instance of CIM_PersistentMemoryService. |

13.6.16 CIM_SystemDevice

CIM_SystemDevice is used to link CIM_PersistentMemoryNamespace instances to the CIM_ComputerSystem where they are to be used. The properties of SystemDevice are described in Table 13.6.16.

Requirement: Mandatory.

Table 191 - Class: CIM_SystemDevice

| Element | Requirement | Notes |
|----------------|-------------|---|
| GroupComponent | Mandatory | This property shall be a reference to an instance of CIM_ComputerSystem |
| PartComponent | Mandatory | This property shall be a reference to an instance of CIM_PersistentMemoryService. |

13.6.17 CIM_BasedOn

CIM_BasedOn identifies the CIM_VisibleMemory regions upon which the associated CIM_PersistentMemoryNamespace is built. Usage is conditional upon the existence of a CIM_PersistentMemoryNamespace. Any usage of properties beyond those given in Table 192 is not specified by this document.

Requirement: Mandatory

Table 192 - Class: CIM_BasedOn

| Element | Requirement | Notes |
|------------|-------------|---|
| Antecedent | Mandatory | This property shall be a reference to an instance of CIM_VisibleMemory |
| Dependent | Mandatory | This property shall be a reference to an instance of CIM_PersistentMemoryNamespace. |

Annex A (informative) SMI-S Information Model

This standard is based on DMTF's CIM schema, Version 2.51. The DMTF schema is available in the machine-readable Managed Object Format (MOF) format. DMTF MOFs are simultaneously released both as an "Experimental" and a "Final" version of the schema. This provides developers with early access to experimental parts of the models. Both versions are available at <http://www.dmtf.org/standards/cim>.

Content marked as "Experimental" or "Implemented" may be based on DMTF's Experimental MOFs.

EXPERIMENTAL

Annex B (Informative) Host Profile Deployment Guidelines

B.1 Introduction

This annex presents background information and guidelines related to deployment of profiles for host-based storage components.

B.2 Background - Early SMI-S Host Profiles

CIM-based solutions for hosts are generally designed with a common CIM Object Manager (i.e., CIMOM). To support this approach, providers may be deployed independently from the CIMOM. SMI-S deployments for devices external to hosts (arrays, switches, tape libraries) are generally designed as single-vendor solutions and are deployed as a monolithic package including the CIMOM and providers for the particular device. SMI-S external device profiles are optimized for this approach - with an autonomous profile containing a “top-level” System instance, with non-system elements defined in that autonomous profile and its supporting component profiles.

The FC HBA Profile was created in SMI-S 1.0 following the monolithic agent approach. The “top-level” System in the FC HBA profile represents the host containing the HBAs supported by the profile.

B.3 Limitations of Monolithic Agents for Host Storage

Different host storage profiles may be referring to the same real-world instances (e.g., the ports in HBA profiles are the same ports in Host Discovered Resources, and logical disks expressed through Host Discovered Resources may have host file systems). Modeling these as independent providers under the same CIMOM adds extra work for clients to recognize that separate CIM instances represent the same entity. Deploying these providers in separate CIMOMs is potentially even more complex for clients.

SMI-S is encouraging use of DMTF profiles for non-storage elements and eliminating the need for separate SMI-S and DMTF profiles for the same components.

B.4 Shared ComputerSystem Approach

SMI-S is now following the direction defined by DMTF with a ComputerSystem instance representing the host system defined in a device-independent autonomous profile. This will be the Base Server Profile. Newer profiles for storage functionality are defined as component profiles supported by the Base Server profile.

In some cases, vendors will prefer the monolithic approach. See “Emulating the Monolithic Agent Approach” for guidelines on deploying monolithic agents using the new profiles.

Some SMI-S profiles do not fit well in the shared ComputerSystem Approach.

- The Software Profile may be used to model software or firmware versions, but requires the implementation to provide the software version of the ComputerSystem. Although this works well for external devices, it is not appropriate for storage instrumentation to provide its information. Host profiles should use the Software Inventory Profile
- The Physical Package Package may be used to model the physical aspects of a system, but requires the implementation to model physical information related to the ComputerSystem. Instrumentation for storage components may not have access to information about the containing server. Host profiles should use the Physical Asset Profile instead.

B.5 Overview of Host Storage Models

B.5.1 Combined Profiles

B.5 and its subsections provide an overview of several SMI-S profiles, showing the differences between the FC HBA monolithic agent approach and the profiles following the shared ComputerSystem approach.

The figures in B.5 subsections provide examples of how the host storage profiles, the Base Server Profile, and the Profile Registration Profile are combined for host storage. The figures here do not provide details of the profiles discussed; these details can be found elsewhere in this standard. A cloud labeled "Other Storage Classes" in the figures is used to represent the details.

B.5.2 FC HBA Profile

The FC HBA Profile was defined following the monolithic agent approach and was implemented by vendors before the shared ComputerSystem approach was defined. See Figure B.1.

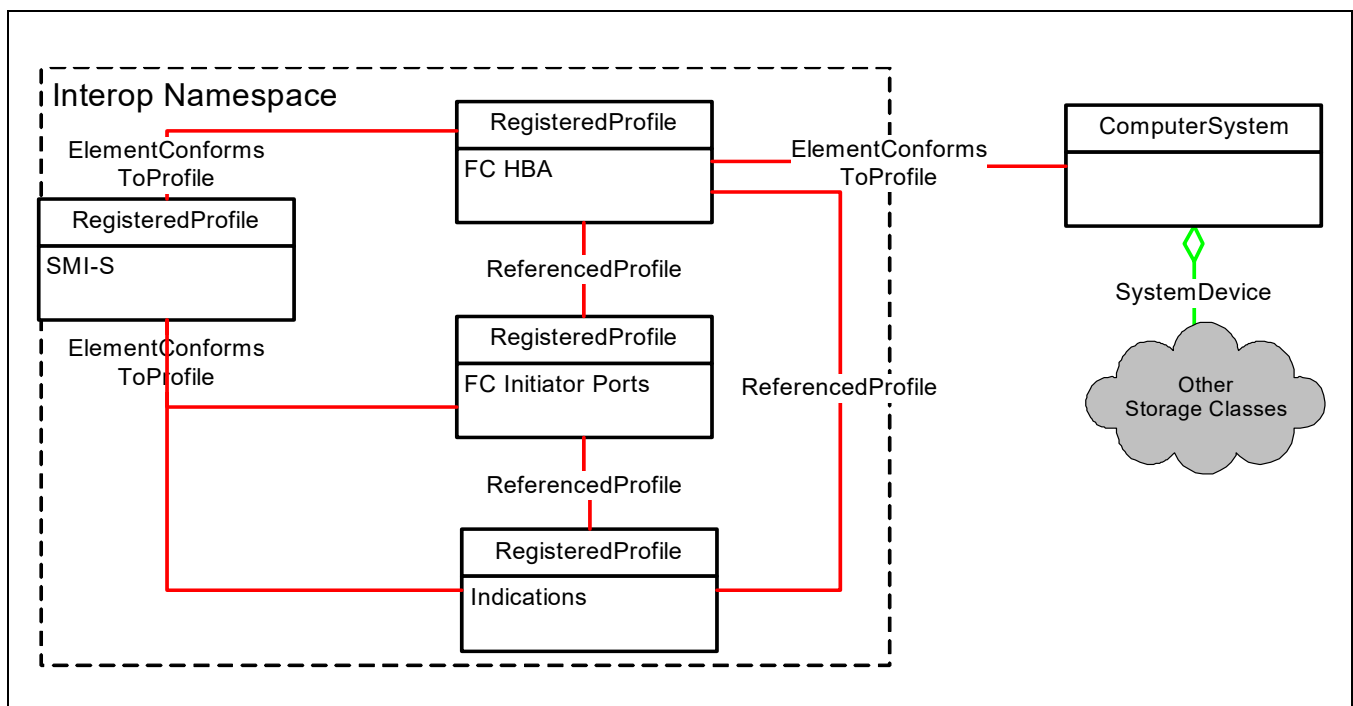


Figure B.1 - Profile Registration and FC HBA Profiles

If multiple FC HBA providers were installed on the same system, each would have its own instance of ComputerSystem representing the host system.

To maintain compatibility, FC HBA will continue to be defined as an autonomous profile for all SMI-S 1.x releases. The FC HBA profile may not be supported in future versions of SMI-S; vendors should migrate to the Base Server and Storage HBA profiles. See B.6.3 How to Deploy FC HBA with New Host Profiles for guidelines on incorporating FC HBA with newer host profiles.

B.5.3 Storage HBA Profile

The Storage HBA profile is the successor to the FC HBA profile. It has been redefined as a component profile of the Base Server Profile. It supports FCoE, SAS, parallel SCSI, or ATA as well as FC ports. See Figure B.2.

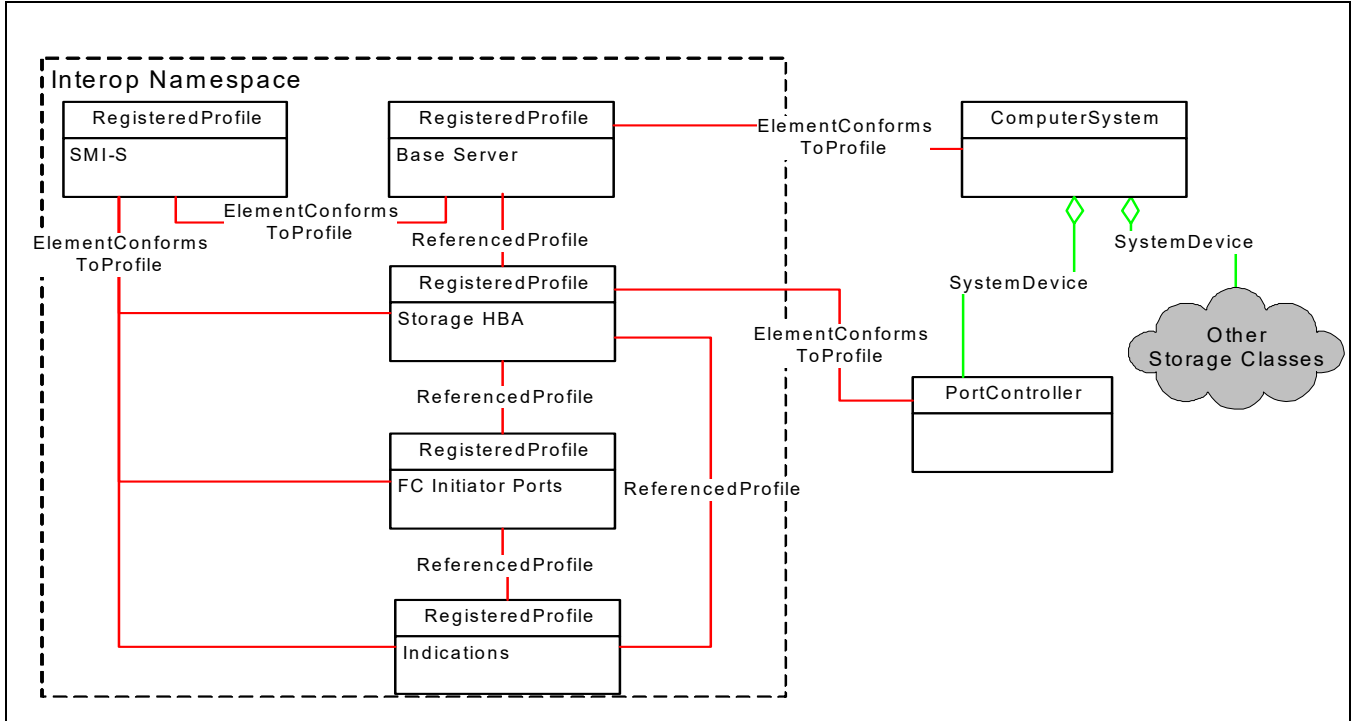


Figure B.2 - Profile Registration and Storage HBA Profiles

B.5.4 Host Hardware RAID Controller Profile

The Host Hardware RAID Controller Profile is a component profile of the Base Server profile. Unlike other profiles supporting the shared ComputerSystem approach, the Host Hardware RAID Controller Profile includes a ComputerSystem instance representing the RAID controller. This ComputerSystem instance provides compatibility with SMI-S profiles related to RAID in arrays. All associations other than SystemComponent which references ComputerSystem are referencing the controller ComputerSystem. SystemComponent references the Base Server Profile ComputerSystem. See Figure B.3.

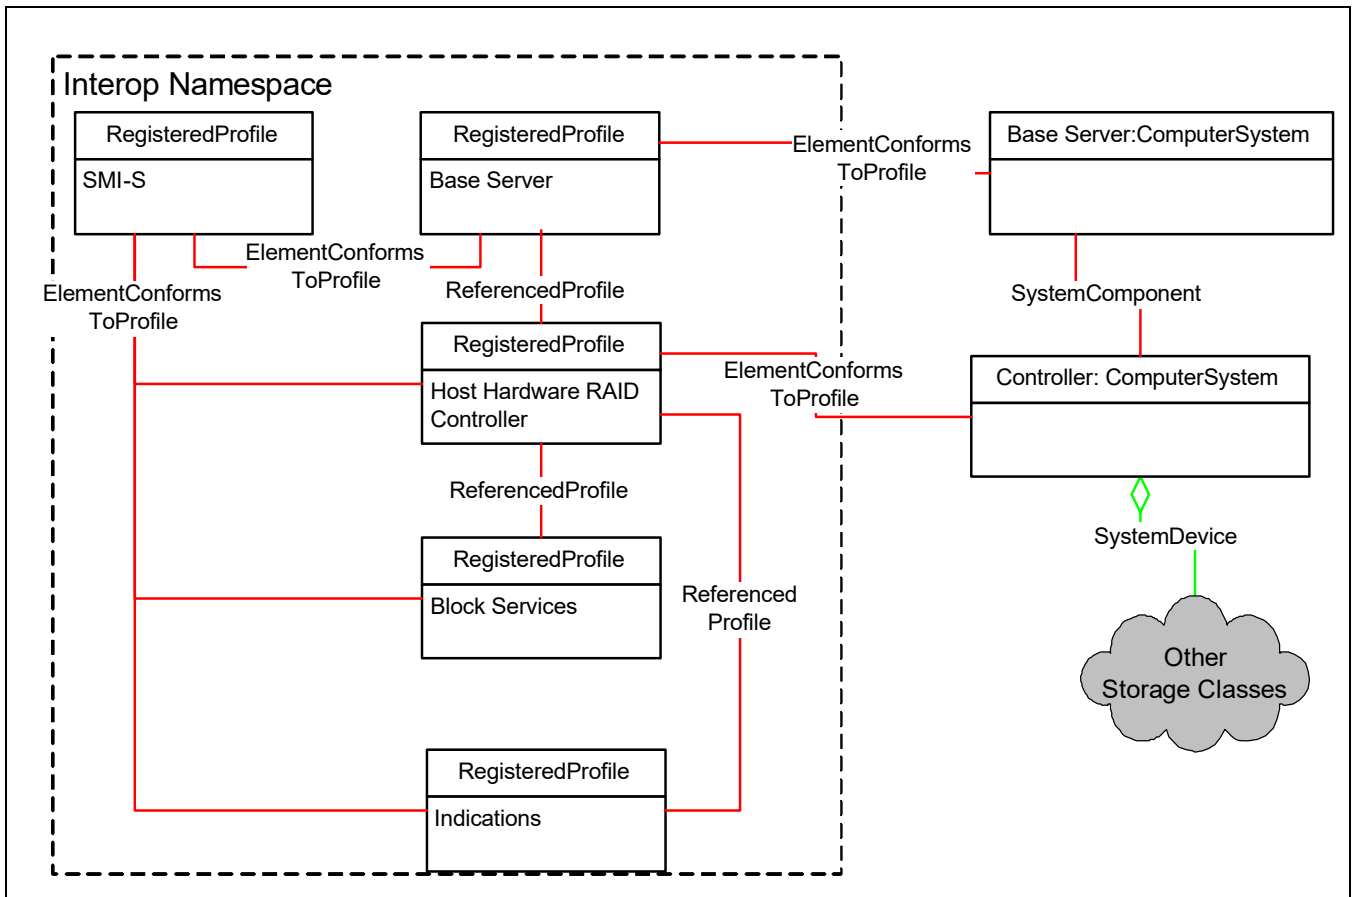


Figure B.3 - Profile Registration and Host Hardware RAID Controller Profiles

B.5.5 Other Host Storage Profiles

The Host Discovered Resources, SCSI Multipath Management, Disk Partition, and Host Filesystem profiles are all defined to follow the shared ComputerSystem approach, similar to the Storage HBA Profile (see B.5.3 Storage HBA Profile).

B.6 Deployment Guidelines

B.6.1 Emulating the Monolithic Agent Approach

To emulate the monolithic agent approach using profiles designed for the shared ComputerSystem approach, implement the Base Server Profile and the appropriate host storage profiles. You also need to implement the Server and Profile Registration Profiles.

B.6.2 Platform Vendor Supporting Device Partners

Platform vendors may wish to provide an integrate CIM management environment for a variety of storage (and possibly non-storage) components.

B.6.3 How to Deploy FC HBA with New Host Profiles

To deploy the FC HBA Profile with profiles using the shared ComputerSystem approach, use the same ComputerSystem instance for FC HBA and Base Server Profiles. Figure B.4 depicts this approach.

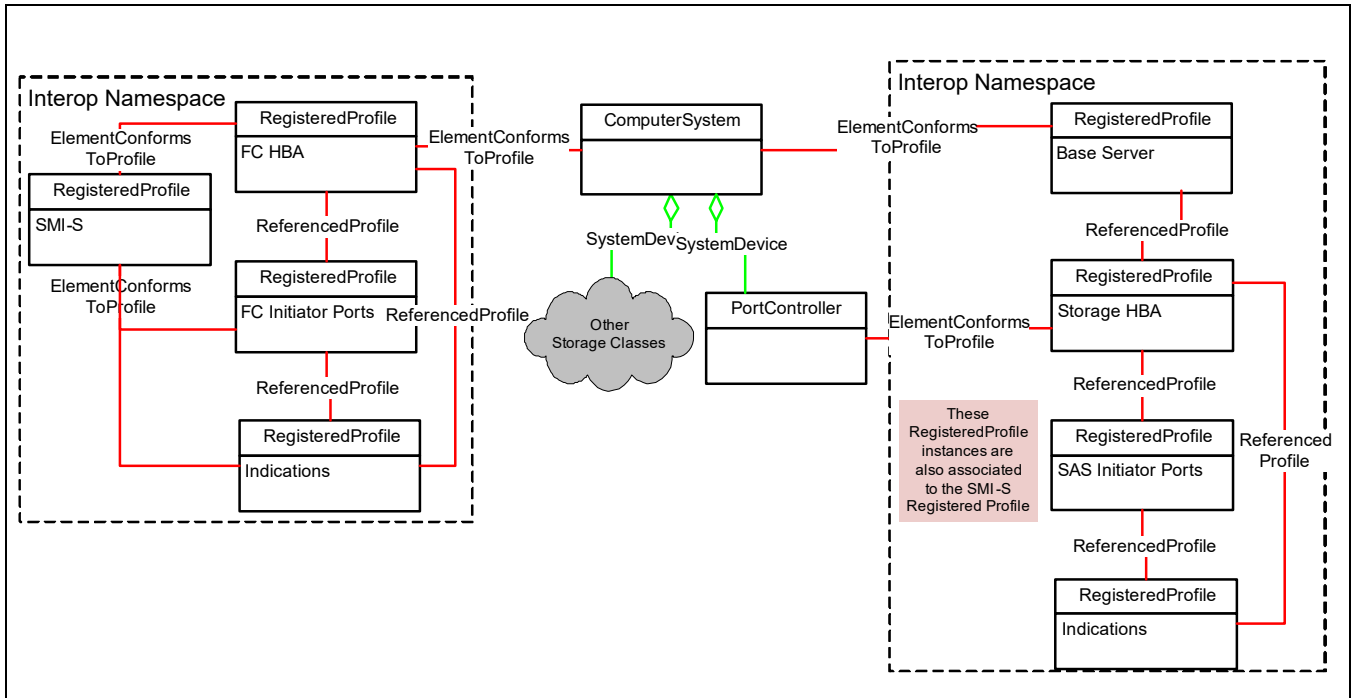


Figure B.4 - Deploying FC HBA with Storage HBA (SAS) Profiles

B.7 Client Discovery of Host Storage Profiles

A typical SMI-S client approach is to start discovering the resources provided by a CIMOM by first locating instances of RegisteredProfile for supported autonomous profiles, then following the ElementConformsToProfile association to instances of “top-level” Systems implementing these profiles. For external devices, autonomous profiles correspond to classes of devices - arrays, switches, tape libraries, etc.

For host profiles using the shared ComputerSystem approach, the autonomous profile is the Base Server profile; its component profiles model classes of host storage systems - HBAs, Host Filesystems, etc. To optimize this client discovery task, profiles using the shared ComputerSystem approach also include an ElementConformsToProfile instance between the RegisteredProfile for key component profiles and an instance from these profile. For example, the Storage HBA Profile includes ElementConformsToProfile between its RegisteredProfile and PortController instances.

The component profiles that follow this approach are advertised through SLP’s Supported Profiles list.

EXPERIMENTAL

